

January 10, 2019 MILLPWR<sup>G2</sup> 2 & 3 Axis Release of Version R8SP1

For Use with Consoles (ID#1113777-NN) ONLY

### These release notes include enhancements/changes for both R8SP1. Please read below for the list of enhancements.

**NOTE:** HEIDENHAIN Corporation recommends making a backup image of the control with the USB Recovery Drive before updating the control software. Please refer to the manual included with the USB drive for the backup procedure. Reference compatibility chart below.

- Prior to updating to R8SP1 you must have R8 loaded, if you have a previous version of software, confirm that R5 SP1 is installed and that you have resized the hard drive partitions. Due to the enhanced features since release 5, repartitioning the console's hard drive is required. USB Recovery Drive ID# 680480-04 includes an option for resizing the control's hard drive partitions. This can only be performed on consoles ID#1113777-NN that are running software release 4 service pack 4 (R4 SP4) or R5. Please insure the console is updated to one of these releases prior to restructuring the drive and installing release 8 (R8).
- R5 cannot be installed unless you have R4SP4 installed first. If you have previous version of software such as R1, R2, or R3 SPx (release 1, release 2, or release 3 with any service pack) download and install R4 SP4 then proceed to update to R5.
- Recovery Drive Kit ID# 1127022-01 can be purchased from your local ACU-RITE distributor.

If a special PLC for AMI functions was created for your MILLPWR system. The PLC for R8SP1 may need to be modified in the same manner. Any OEM/User customizations to the PLC will need to be reintegrated into the new PLC project.

All users can verify your software version from the **DRO** screen by pressing SETUP. If one of your soft keys is labeled More Commands, you have release 1 (R1) software. If one of your soft keys is labeled Install Setup, press this key. Enter the password 8891 and press Enter. The installed software version will be displayed at the bottom left of your screen.

If any issues are encountered, please contact your service representative for assistance.

You can download the software release update free of charge from our web site at <u>www.acu-rite.com</u>. If you wish to purchase the software and operation manual from ACU-RITE, contact your authorized dealer to place an order.

#### Installing the software onto your MILLPWR<sup>G2</sup> system:

Use a blank USB memory stick (1 GB or larger) to update the software. Do not use any memory stick with a smaller storage capacity. The software installation files are required for updating the software. When a USB memory device in placed in a USB port prior to boot up with the update



files setup.zip, and setup.ini located within a folder named "**install**", at boot up your G2 control will detect the upgrade software files and proceed to install.

#### Procedure for downloading the update files and placing them on a USB drive.

Download the update from <u>http://www.acu-rite.com/software-updates.html</u> found under the Controls Tab.

- Unzip the downloaded archive insuring the target is the root level of your USB drive.
- Insure the files <u>setup.zip</u> and <u>setup.ini</u> are transferred to a folder at the root level of your USB drive named <u>install</u>, //MY USB DRIVE/install/



#### Procedure for updating the software

- Shut down the control software using the normal method of pressing the Shutdown soft key and then confirming the shutdown by pressing Yes.
- Wait for the screen message which indicates that it is safe to switch off power, or restart.
- Insert the USB memory device containing the folder named "install" on the USB memory device.
- Press ENTER to restart the system.
- The software update will now be done automatically, taking approximately 10 20 minutes.

! A confirmation box will appear. If necessary, use the LEFT or RIGHT ARROW keys to select Yes and then press ENTER.

When the update is complete, it will prompt you to remove the USB drive and restart. At this time, remove the USB drive and press ENTER to restart. If the USB memory stick used for installation is not removed, then the prompt to install the software will continue to appear on subsequent power cycles.

! After installation and upon restart, you may receive a message prompt to confirm a firmware update, accept the changes and RUN UPDATE.

- (Note: This particular NC startup screen can take several minutes to display. Please be patient. Do not shutdown control and reboot.)
- After the system has restarted, it will start up normally to the control software.
- Confirm that your count directions are correct. (*These values should not change when upgrading software.*)
- If special machine functions were active, Press the SETUP hard key, then the "Install Setup" soft key, enter passcode 8891, press ENTER
- In the "Installation" dialogue, arrow down to the last option "Machine Functions" and press ENTER



- Configure the dialog to match your machine Note:(only required if special machine function options are installed like demo, AMI, guards, etc.)
- Press the USE hard key, then press the "Save Changes" soft key
- After a moment, you will get a reboot prompt
- Acknowledge the reboot and you are all done at the next startup.

#### MILLPWR<sup>G2</sup> Recovery Drive Compatibility

- Due to hardware differences the original MILLPWR<sup>G2</sup> console and the current console require different software upgrade paths.
- Consoles can easily be identified by the color of the front bezel. The current design has a darker grey color than the original design.
  - The current G2 console will proceed to release 8 (R8) and all its service packs.
  - The original G2 console will remain with release 4 (R4) and all of its service packs.

Console ID# and Software Revision	Recovery Drive ID# 1114023-01	Recovery Drive Kit ID# 1201909- 01 USB ID# 680480-03	Recovery Drive Kit ID# 1127022- 01 USB ID# 680480-04
745604-NN	Yes	Yes	No
R1	Yes	Yes	No
R2	Yes	Yes	No
R3	Yes	Yes	No
R4	Yes	Yes	No
R4 SP9	Yes	Yes	No
1113777-NN	No	Yes	Yes
R1	No	Yes	Yes
R2	No	Yes	Yes
R3	No	Yes	Yes
R4	No	Yes	Yes
R4 SP4	No	Yes	Yes
R5	No	No	Yes
Post R5	No	No	Yes



#### Console ID # 745604-NN



G2 consoles (ID#745604-NN)

Console ID # 1113777-NN



- These consoles <u>cannot be upgraded to R8</u> or <u>service packs within R8</u> and will continue to receive service packs under the R4 release. Please do not attempt to install release 5 (R5) R6 R7 or R8 onto these consoles.
- System drive restructuring on this original design consoles will cause the console to become un-operational and require in house service to correct the issue. <u>Do</u> <u>not restructure the drive on these consoles.</u>
- Not all software enhancements will be included in future R4 releases. We will continue to support console ID# 745604-NN with service packs through the R4 released software that will mainly include minor enhancements or fixes.
- USB Recovery Drive Kit 1201909-01 includes a compatible USB Recovery Drive ID# 680480-03 for original G2 consoles (ID#745604-NN) and should be ordered when replacing a recovery drive for these consoles. This drive does not include the repartitioning option, so the unit cannot be repartitioning accidentally.

G2 consoles (ID#1113777-NN)

- R8 and its associated service packs R8SPX cannot be installed unless you have R5SP1 installed first. If you have previous version of software such as R1, R2, or R3 SPx (release 1, release 2, or release 3 with any service pack) download and install R4 SP4 prior to updating to R5.
- Due to the enhanced features of release 5, it has become necessary to repartition the console's hard drive. USB Recovery Drive ID# 680480-04 is now included in Recovery Drive Kit ID# 1127022-01 which supports all G2 consoles and all software versions to date or planned for the near future. This new recovery drive includes an option for resizing the control's hard drive partitions. This must only be performed on current consoles (ID#1113777-NN) that are running software release 4 service pack 4 (R4 SP4). Please insure the console is updated to this release prior to restructuring the drive and installing release 5 (R5). Hard drive repartitioning is required on these consoles prior to the upgrade to release 5 (R5).



#### These enhancements/changes were made:

A new form is available in Installation Setup, named Display Settings. This form provides a more user-friendly means of changing the system language (English, French, Spanish) as well as the system interface theme (Day, Night).

Fixed an issue with the Encoder Setup forms, in which they would not allow changing the scale resolution.

If a new blend step is entered between two line/arc steps or if the blend is closed, it is evaluated and drawn on entry.

1. Contour steps will report errors if approach/departure arc is programmed and the tool offset is centered. 2. Custom Pocket Advanced Cycles will run in 2X mode if path's zBegin is blank. 3. Custom Pocket Bottom Finish cycle is not required before a Side Finish cycle if the custom pocket's bottom finish is set to 0. 4. All Pocket steps will skip a bottom finish pass if Z depth is set to THRU.

Note: Release 8 (R8) software includes many enhancements, prior to downloading this version be aware that the graphics of the user interface has changed. The user interface now uses a modern theme congruent with the latest versions of the newly released ACU-RITE digital readout products. Here are just of few of the changes, fonts, larger pop up menu's large qwerty keyboard, color highlighting of steps.

### IF YOU WANT TO STAY WITH THE GRAPHICS YOU CURRENTLY HAVE DO NOT INSTALL R8.

Here are some side by side comparisons:



Stop	Feed: 0.0 100%	Tool: 0.	5000 Inch	Datum: 0	Scale: 1.000	0 Skew:	0.0000°	Inch
EXER	CISE 6 with islands.MPT	1 of 42	Estimated Time 11:20:26	Part Clock 0:00:13	Parts 0	Job Clock 1:05	Time 3:4	e of Day  4 pm
001	SET TOOL				$ \land \land$		ABS	VZ
002	*POSITION / DRILL		INC		h X	$XX/I^{\mu}$	2	X
003	*POSITION / DRILL		6.8845		$\mathbf{O}_{\mathbf{U}}\mathbf{U}$	$\mathbf{U} \mathbf{T}$	)	Λ
004	*POSITION / DRILL				1922	2	7 <u>1</u> 3 1010-001	221 102
005	*POSITION / DRILL				$\cap$ $\Lambda$	<b>F7</b>	ABS	$\mathbf{V}$
006	*POSITION / DRILL		INC		74	- <u>-</u> /		Y
007	*POSITION / DRILL		2.4571	20				877
008	*POSITION / DRILL			6	~ ~	<b>A</b>		
009	*POSITION / DRILL		10.02		$\cap \cap$	יתביו		
010	SET TOOL	,	INC		$\mathbf{U}$ .U	104.	)	
011	CIRCLE CONTOUR		0.0343		•••	<b>U</b>		
012	RING CONTOUR	10			1		OFF	$\frown$
	RADIAL SLUT CONTOU	JR	OVP			50		
014 []	RECTANGLE CONTOO	п	100%				J	U
015								
017	MILL LINE							
018	MILL ARC							
010	MILL ARC							
020	MILLUNE							
021	MILLLINE							
		3) 						
					Mach	ine		Move
Zer	o X Zero Y	Zero z		Shutdowr	י Funct	ions Dati	um	Table
_								

Stop Time:: 1001:	0.5000 mcn Datum: 0 Scale: 1,0000	Skew: 0.0000* Inch	Stop Time:::	Tool: 0.000 MM Datum: 1 Scale:	1.0000 Skew: 0.0000° Inch
New Program 1 of 001 SET TOOL	Set Tool       Tool Number       Diameter       Diameter       Inch       Length       Plunge/Ramp       Angle       Tool Type       Speed       Off       Speed       RPM       Tool Position       X To       Abs       Z To       Abs       Require Change       No		1 of 1	Set Tool Tool. Number Size Disactor Inch Length Plunge / Ramp Angle Tool Type Spindle Speed Speed RPM Tool Abs Y To Abs Z To Abs Require Change No W	
Inch MM		Tool Table	Inch IM		Tool Table



Stop Time:::	Tool: 0.5000 Inch	Datum: 0 Sc	ale: 1.0000	Skew: 0.0000*	inch	Stop	Time:::	Tool:	0.1869 Inch	Datum: 1	Scale: 1.8080	Skew: 0.0000°	Inch
New Program 001 MILL LINE	1 of 1 From X1 Y1 To X2 Y2 Z Bagin End Freed Angle Tool Offset C Freed	Mill Line Abs	ž			1 of 1			Vill Line From X1 Vil Y1 To X2 Bepin End Feed Angle Offset R5 Feed	9.9669 Ab 9.9669 Ab 9.9669 Ab 9.9669 Ab 9.9669 Ab 9.9669 Ab 35.9 IP 9.9660 Im Ty ght Ty			
		Probe	Teach Position	Polar						Probe	Teach Position	Polar	



If any issues are encountered, please contact your service representative for assistance or contact technical support at <u>millpwrservice@heidenhain.com</u> if you have any questions.