

ACU-RITE® 300S


Step-by-Step Instructions for Changing the Count Direction

ACU-RITE® 300S: *Changing Count Direction*




Start with the unit off.
Or turn it off and wait 10 seconds before you turn it back on.

ACU-RITE® 300S: *Changing Count Direction*

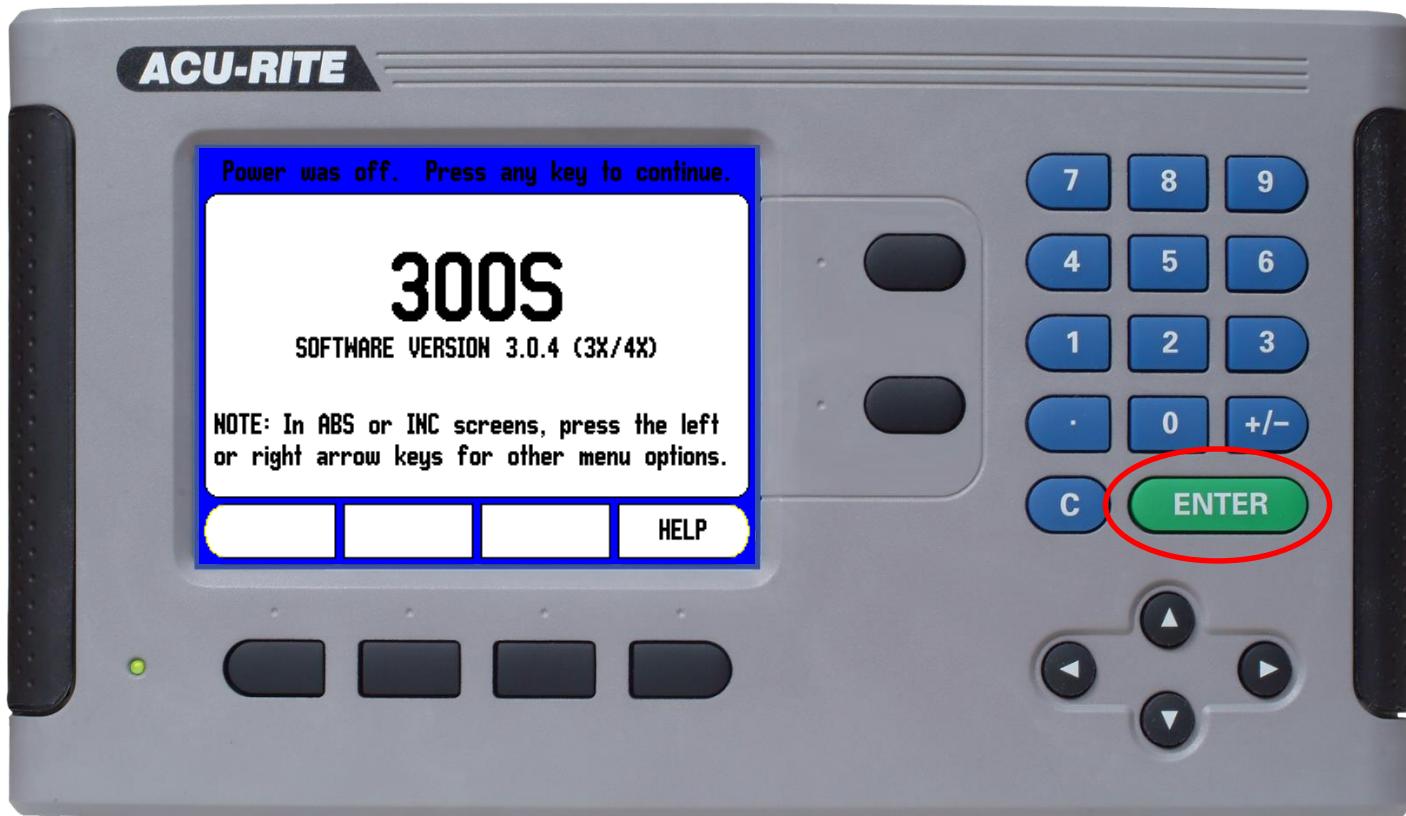


From the home screen, press the **ENTER** key.

ACU-RITE® 300S: *Changing Count Direction*

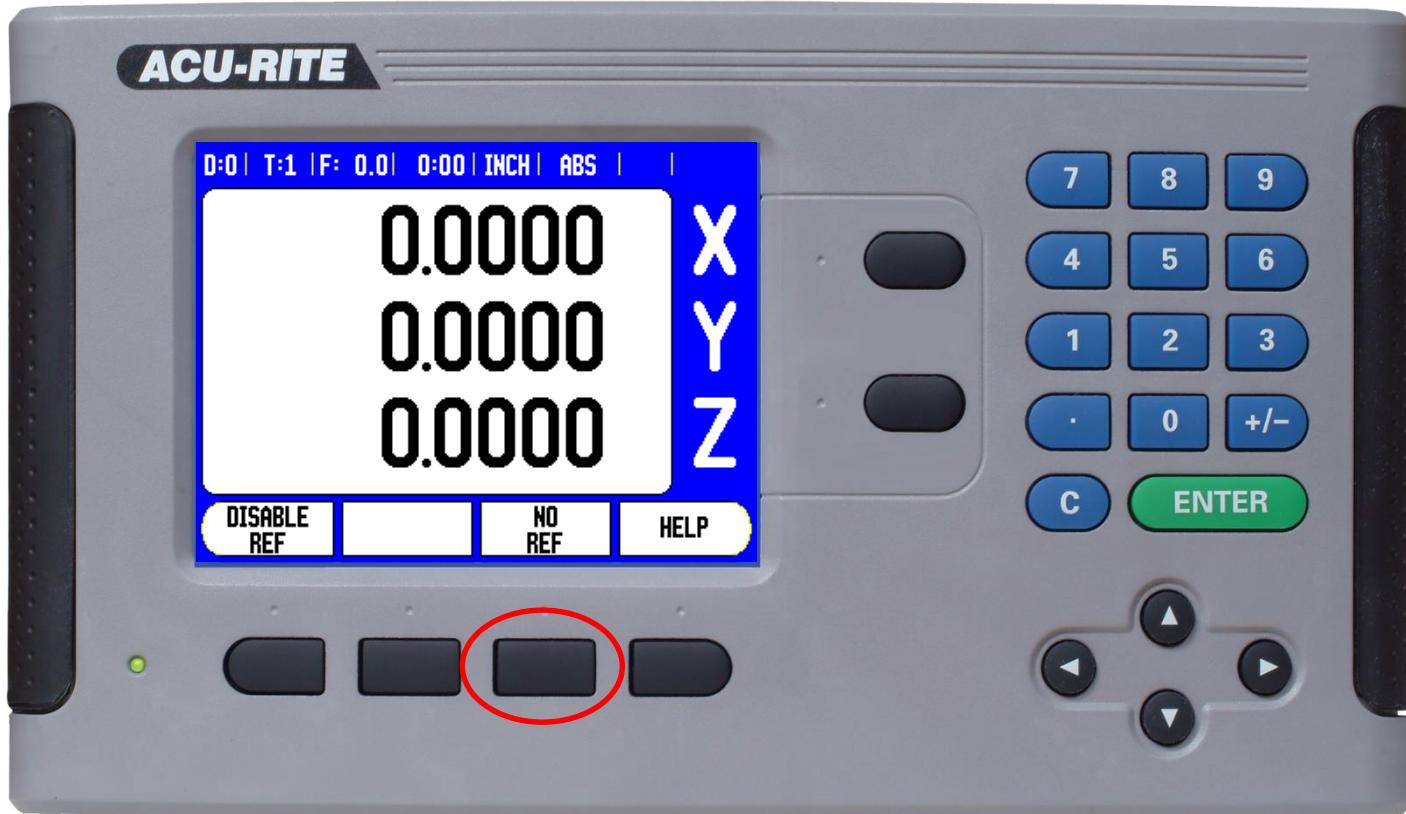

To change the count direction you don't need to reference the scale, so press the "NO REF" soft key.


ACU-RITE® 300S: *Changing Count Direction*

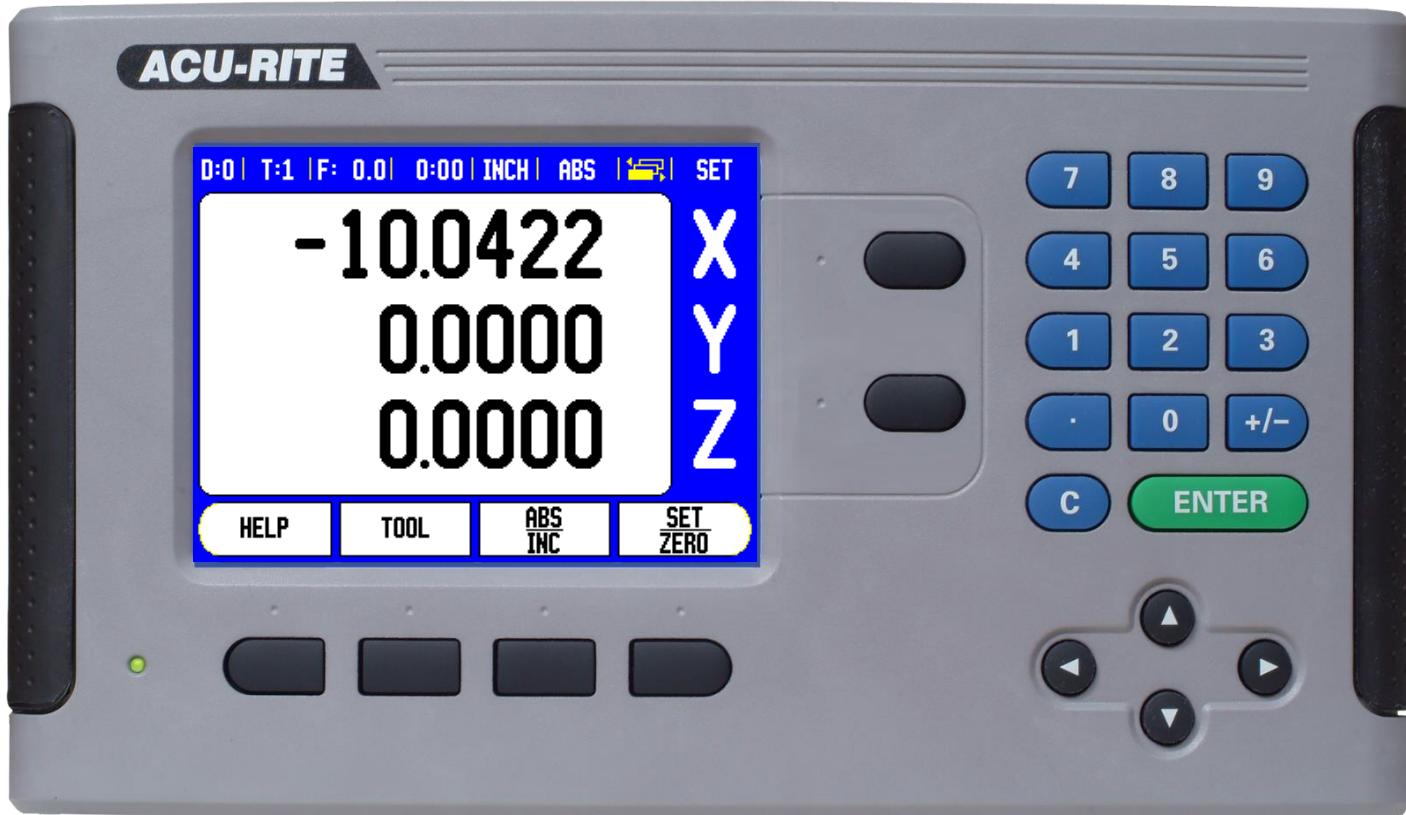

When the axis is moved in the positive direction, the DRO shows a negative number. Here's how to change it.


ACU-RITE® 300S: Changing Count Direction

Soft
Key
Menu

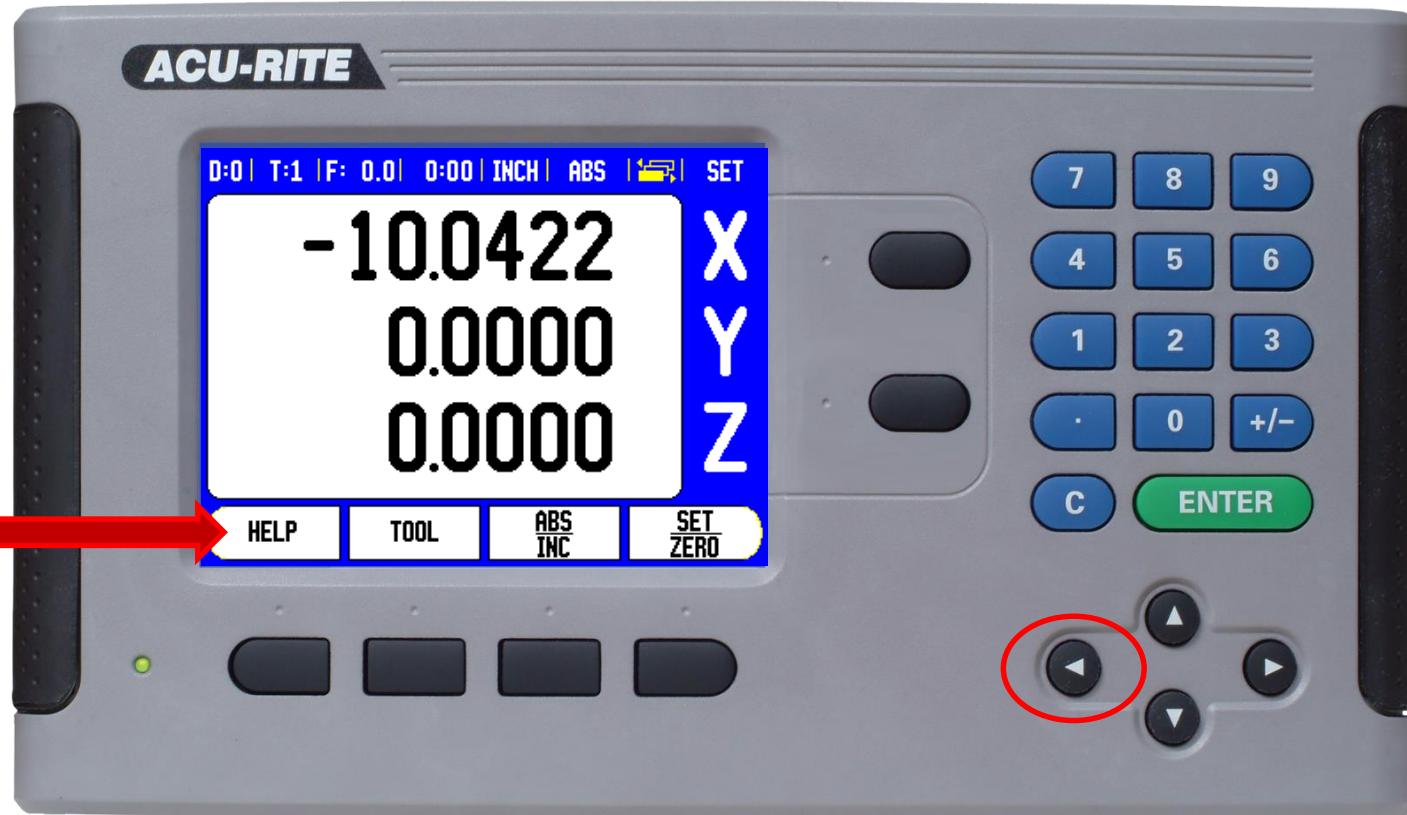


Press the soft key until the first soft key menu space reads “SETUP.”

ACU-RITE® 300S: *Changing Count Direction*

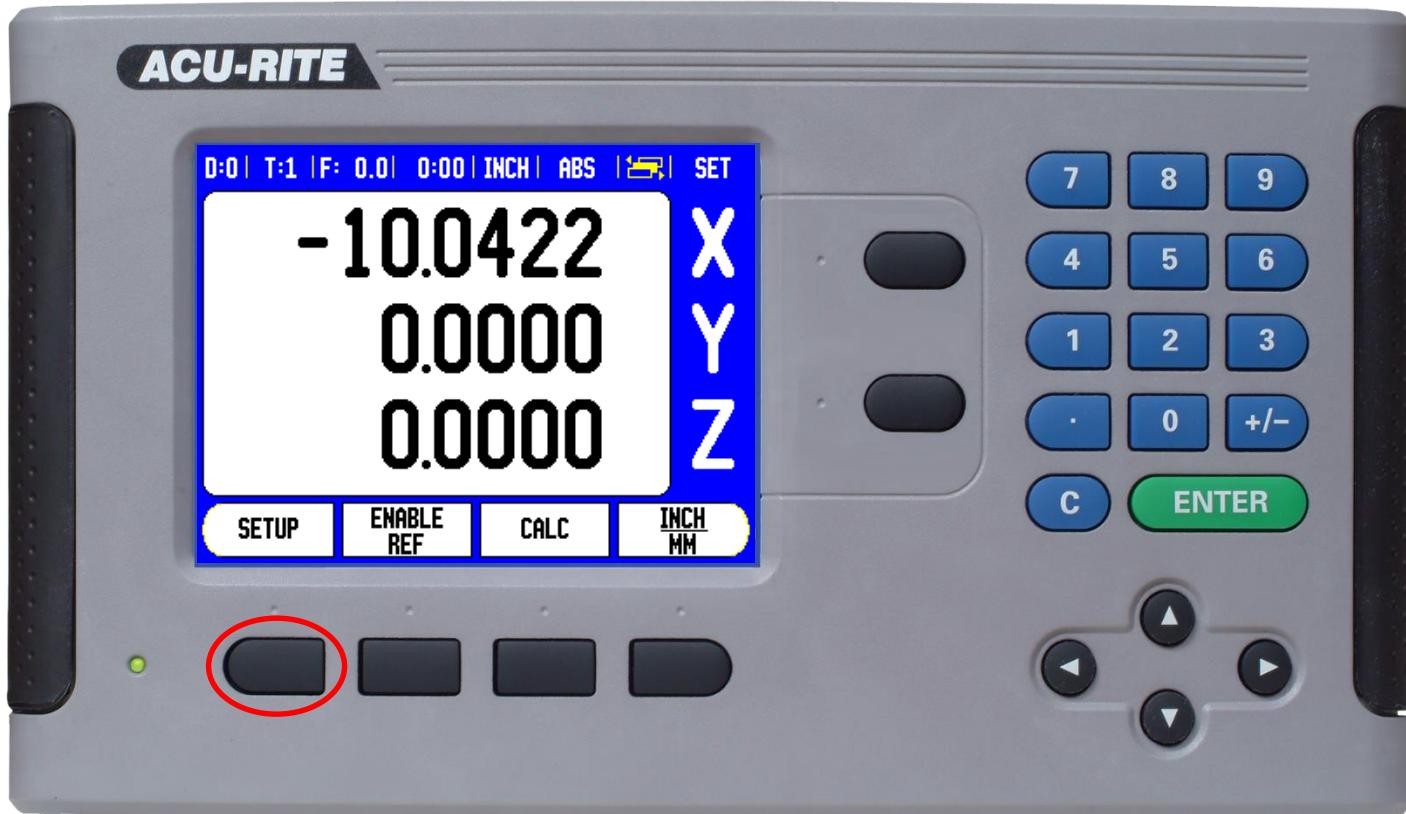


Press the “SETUP” soft key.

ACU-RITE® 300S: Changing Count Direction

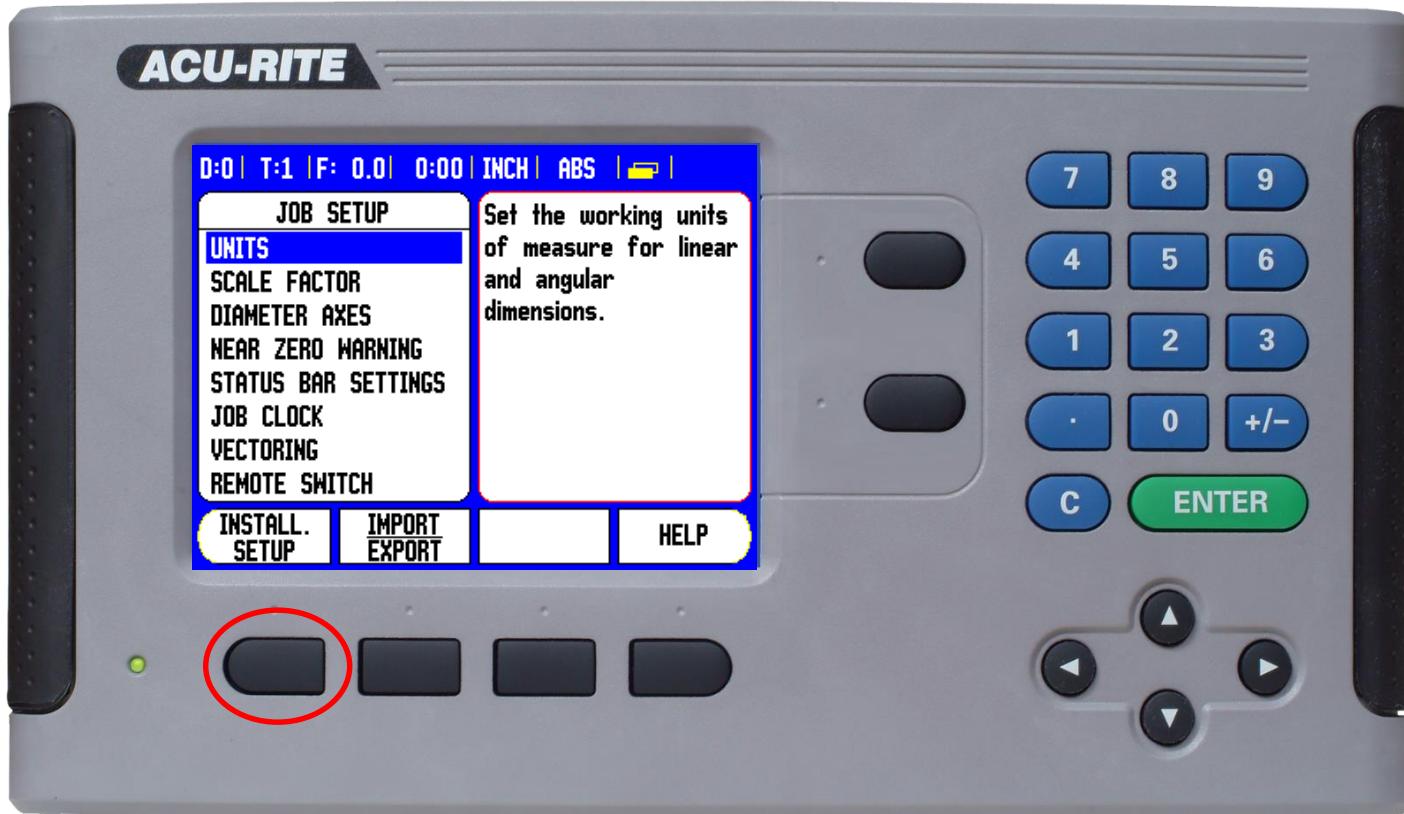

Press the “INSTALL SETUP” soft key.

ACU-RITE® 300S: Changing Count Direction

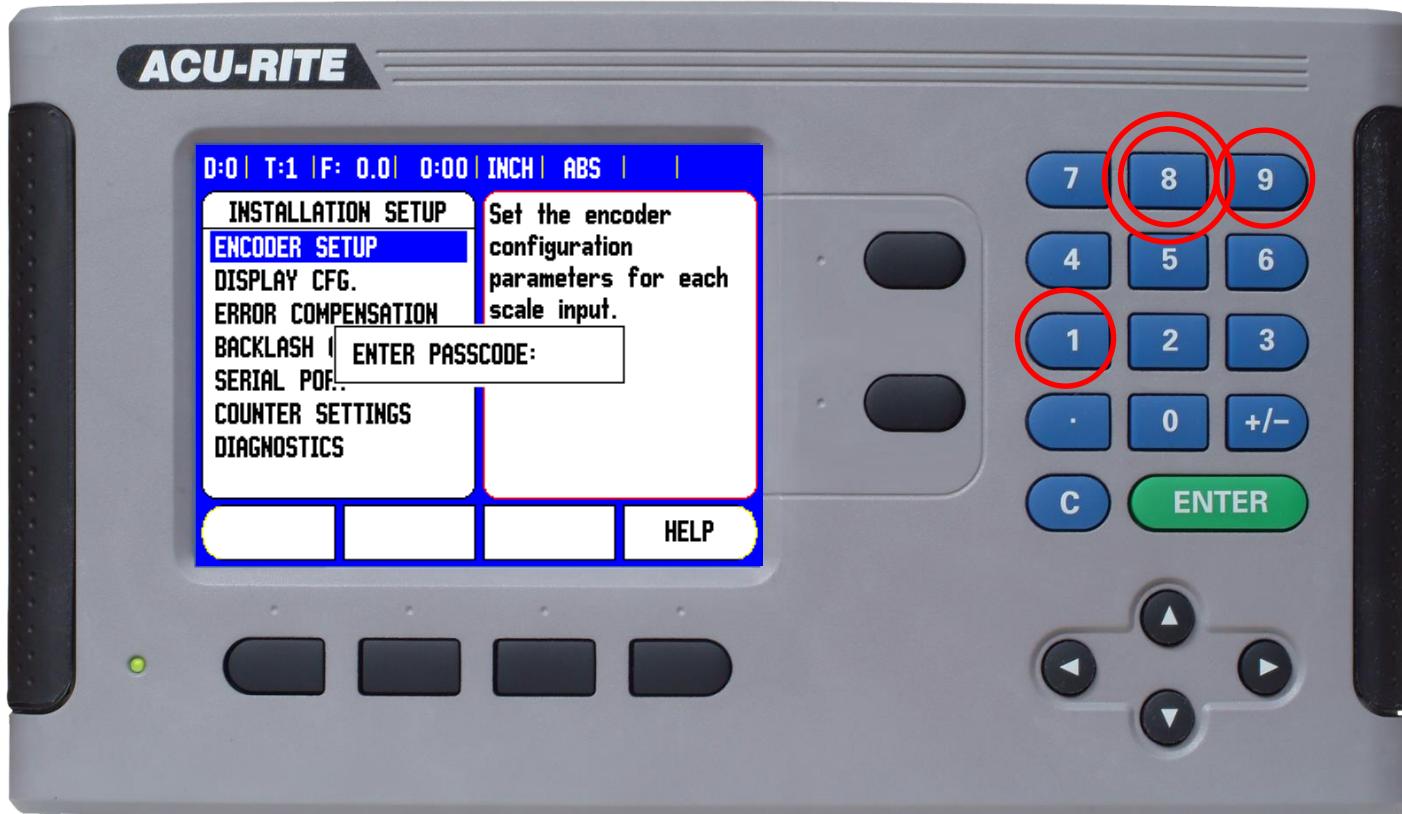


The DRO asks you for a “PASSCODE.”

Use the number soft keys and press:


8 8 9 1

ACU-RITE® 300S: Changing Count Direction

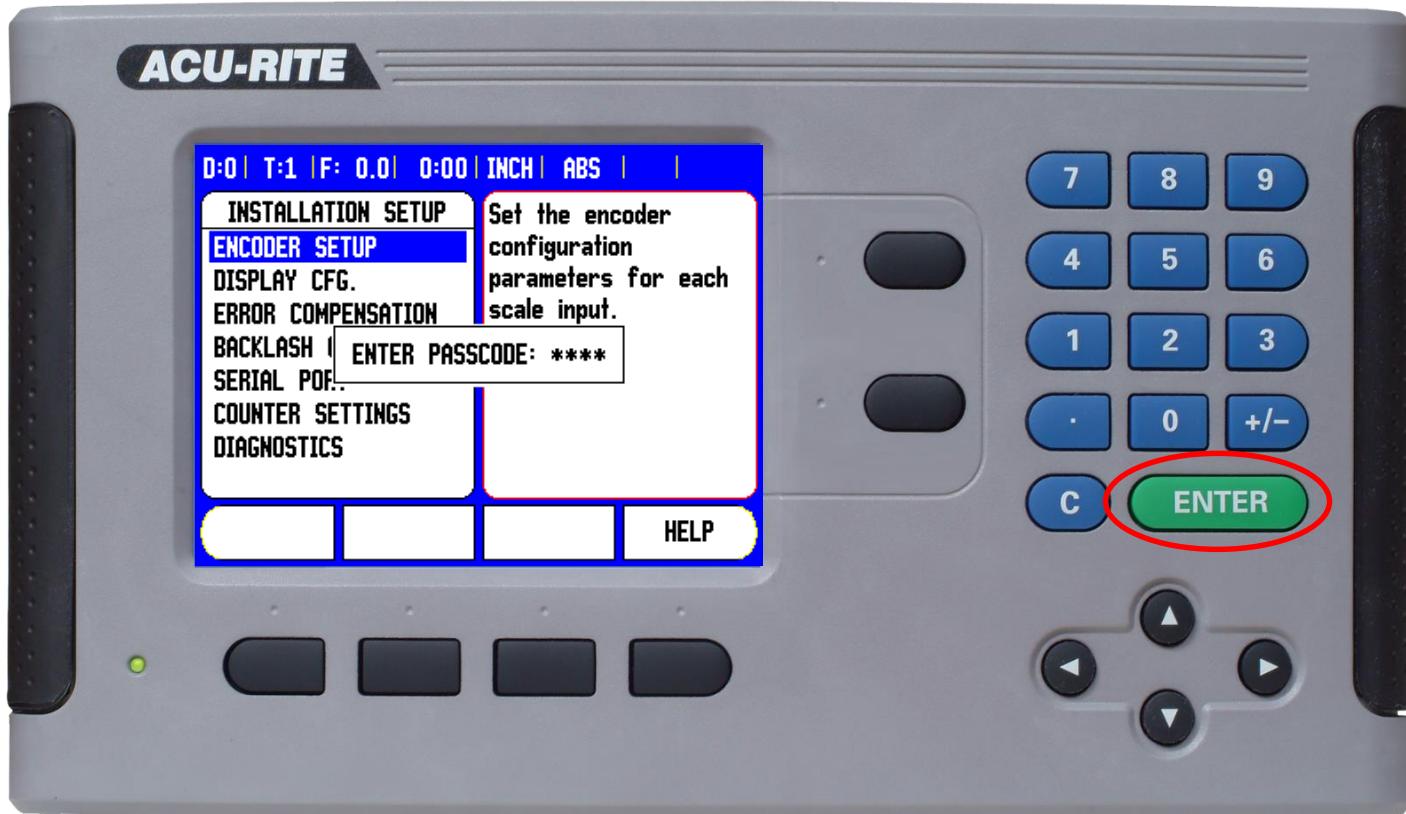


Press **ENTER**

ACU-RITE® 300S: Changing Count Direction

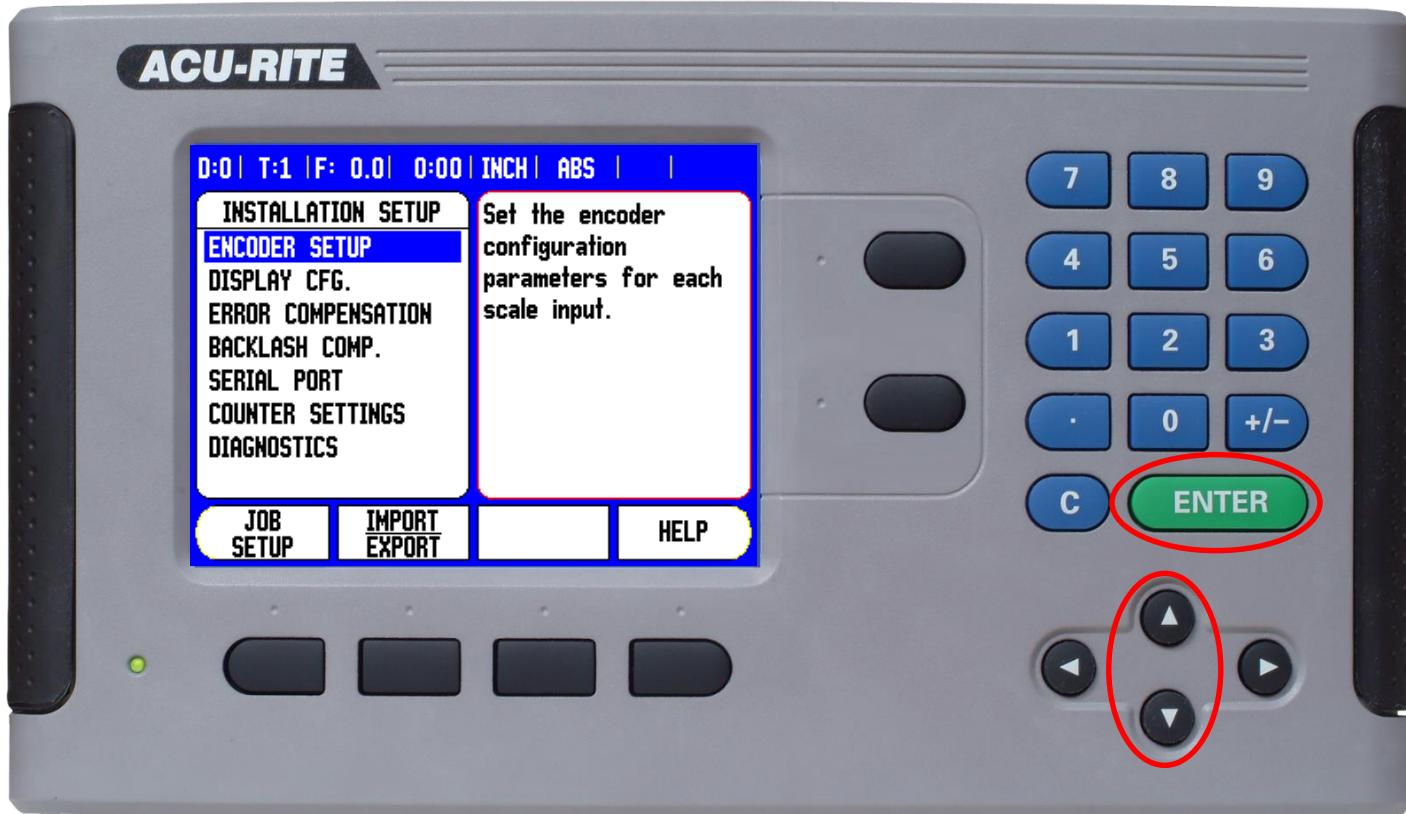

"ENCODER SETUP" should be highlighted. If it isn't, use the ▲ or ▼ arrow soft keys to highlight it, and then press **ENTER**


ACU-RITE® 300S: Changing Count Direction

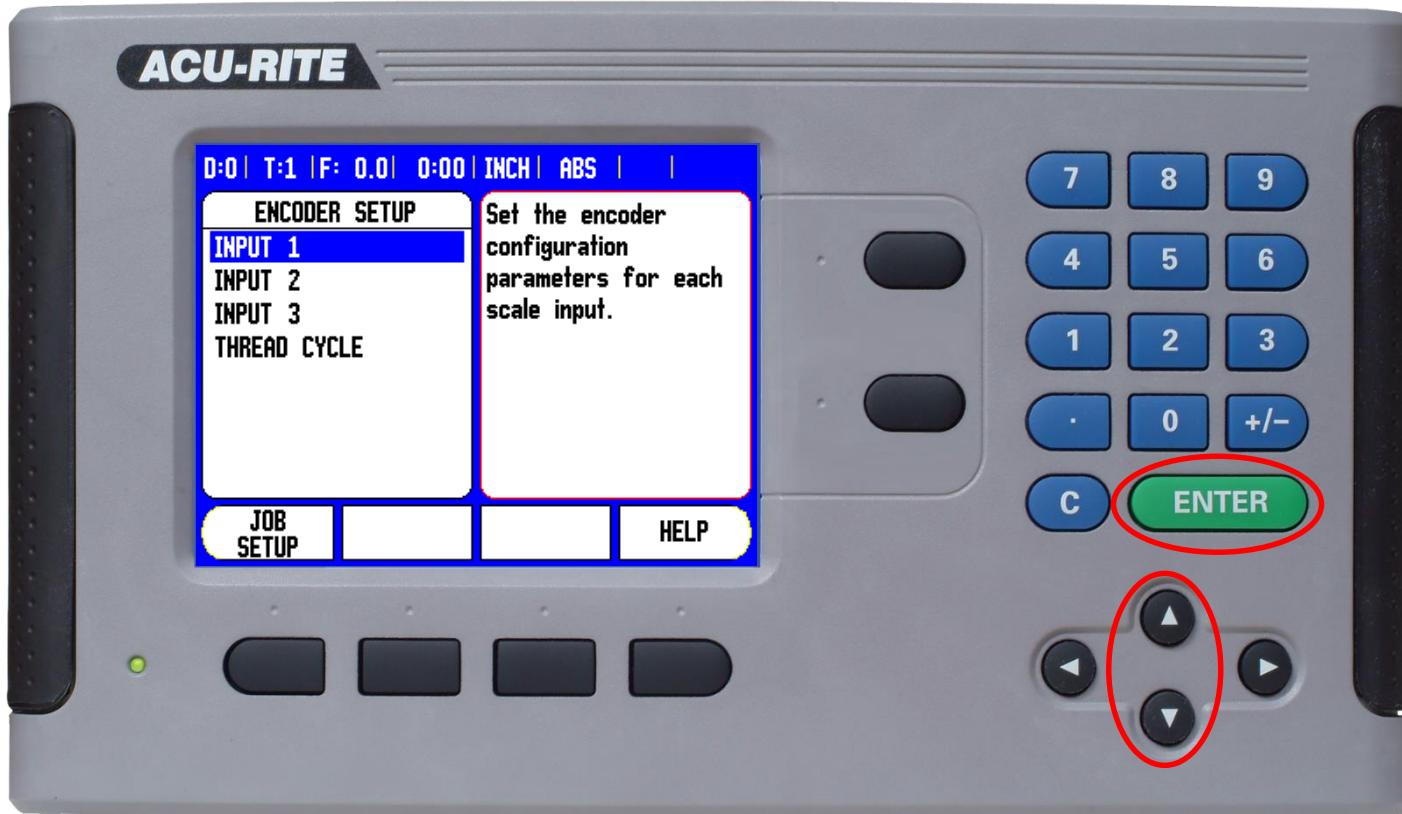

Use the or arrow soft keys to highlight the input axis you want to change. Then press


ACU-RITE® 300S: Changing Count Direction

This icon shows you how many pages there are in this function and which page you are on.

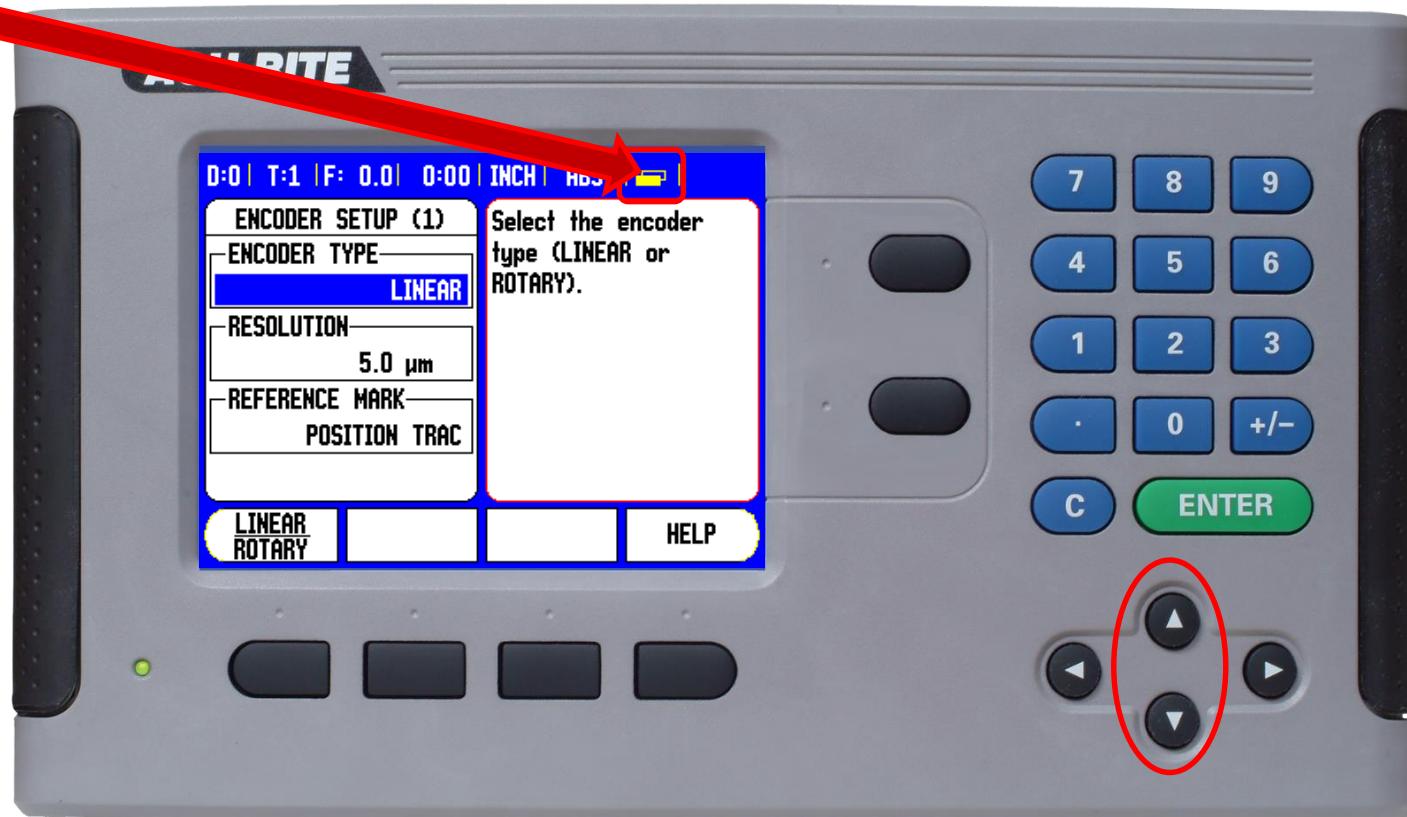


Use the or arrow soft keys to highlight the "COUNT DIRECTION" box (shown on the next page).

ACU-RITE® 300S: Changing Count Direction

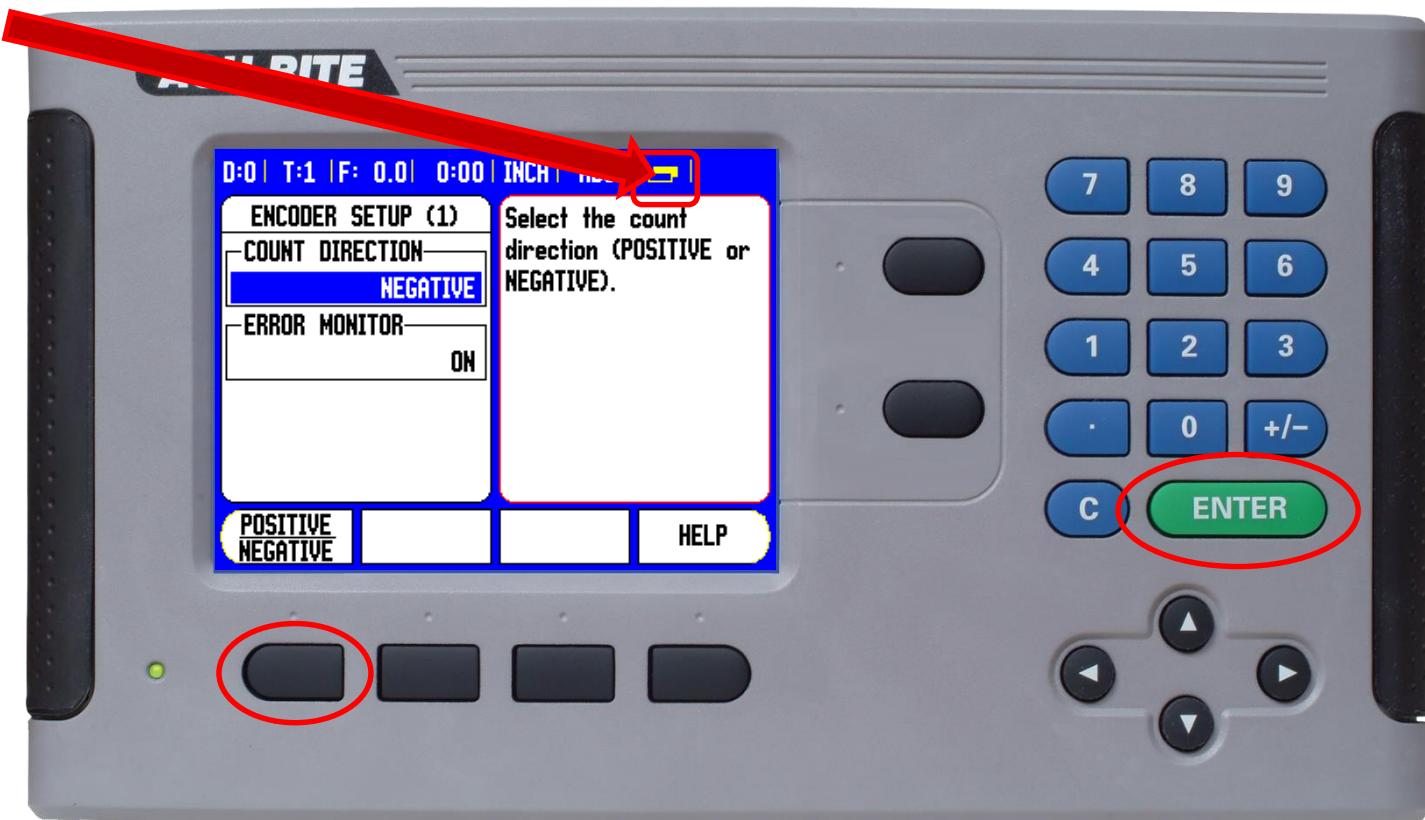


Press the “POSITIVE / NEGATIVE” soft key once to change the count direction, and then press **ENTER** to save your change.

ACU-RITE® 300S: Changing Count Direction

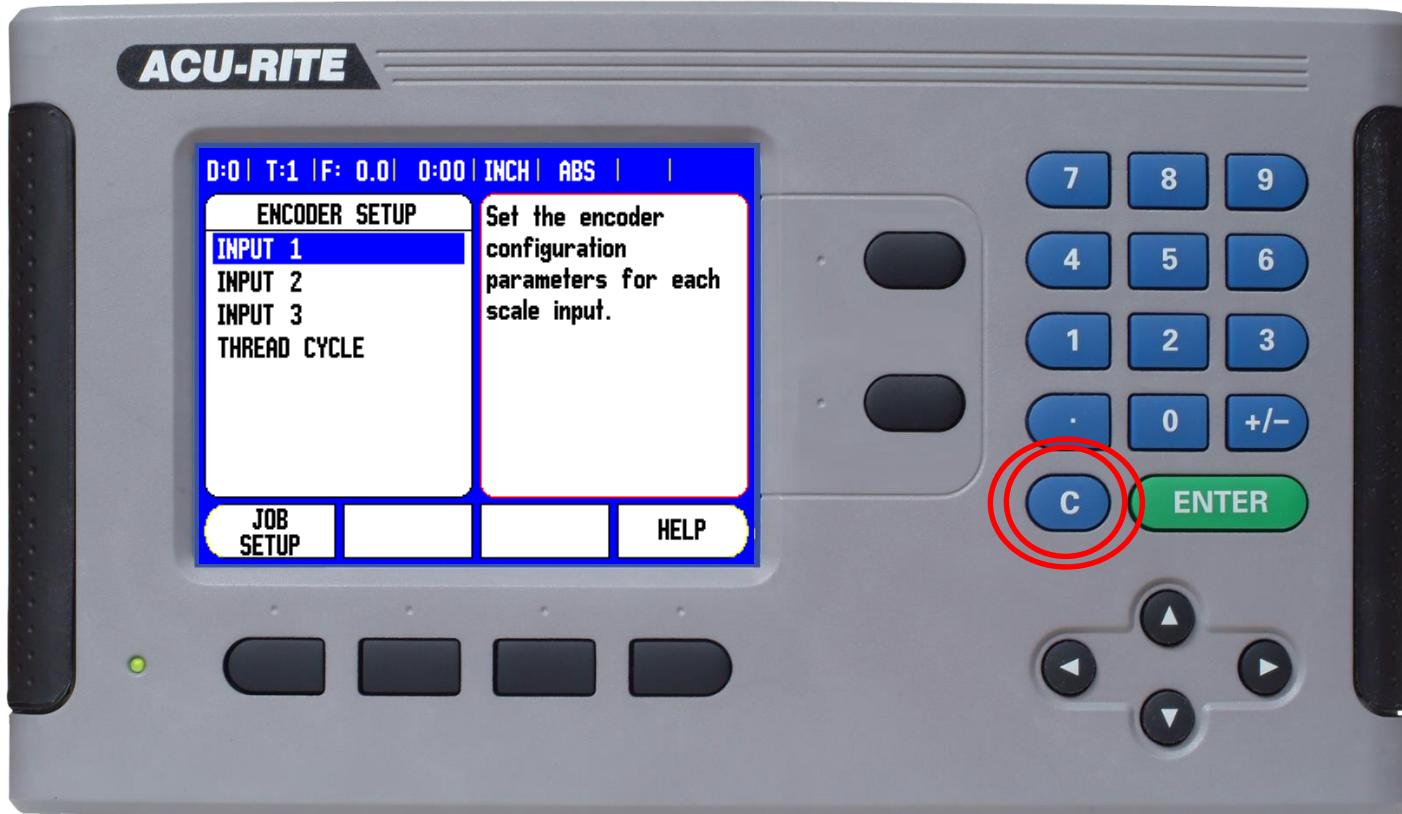

Press the **C** soft key as many times as needed to return to the home screen.

ACU-RITE® 300S: *Changing Count Direction*

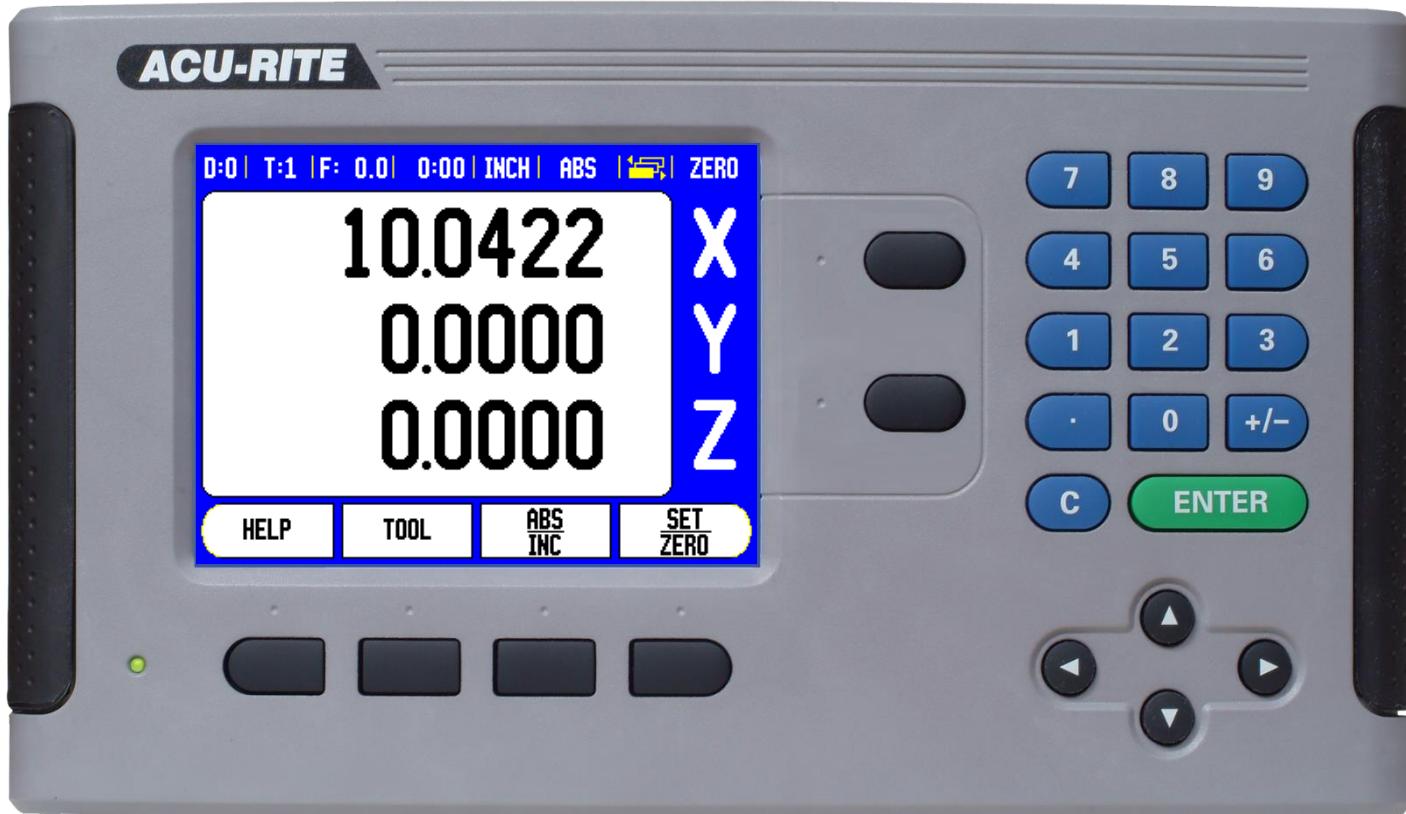

Your DRO should now display the correct count direction for your scale.