

Inverter Systems and Motors for 6000i



Warranty

ANILAM® warrants its products to be free from defects in material and workmanship for one (1) year from date of installation. At our option, we will repair or replace any defective product upon prepaid return to our factory.

This warranty applies to all products when used in a normal industrial environment. Any unauthorized tampering, misuse or neglect will make this warranty null and void.

Under no circumstances will ANILAM, any affiliate, or related company assume any liability for loss of use or for any direct or consequential damages.

The foregoing warranties are in lieu of all other warranties expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

The information in this manual has been thoroughly reviewed and is believed to be accurate. Acu-Rite® Companies Inc. reserves the right to make changes to improve reliability, function, or design without notice. Acu-Rite Companies Inc. assumes no liability arising out of the application or use of the product described herein.

ANILAM® and Acu-Rite® are registered trademarks of Acu-Rite Companies Inc.

© Copyright 2008 Acu-Rite Companies Inc.



Section 1 - Introduction

System Overview	
Product Designations	
Components	
Overview of Inverter Systems	
SA Series Non-Regenerative Compact Inverters	
RA Series Regenerative Compact Inverters	
Non-Regenerative Power Supply Unit	
Regenerative Power Supply Units	
Modular Amplifiers	
Compact Inverters	
Components of the Compact Inverter	
SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C Compact Inverter	
SA 301E, SA 411E Compact Inverter	
RA 201A, RA 301C, RA 411C Compact Inverter	
Motors	1-7
Section 2 - Technical Specifications and Power Requirements	
•	2.0
Inverter PS 120A Power Supply Unit	
Toroidal Cores	
Ribbon Cables and Covers (Only for SA xxxx)	
50-Line Ribbon Cable (Power Supply to CNC Chassis)	
20-Line Ribbon Cable (PWM Signals)	
40-Line Ribbon Cable (Unit Bus)	
Ribbon Cable Covers	
Modular Amplifiers	
Components of the Modular Amplifier	
PS 122R, PS 130, PS 145R Power Supply Unit	
PM 1xx, PM 2xx, PMD 1xx, PMD 2xx Power Modules	
Current Consumption of the Entire Inverter System	
Ribbon Cables and Covers	
Ribbon Cable Covers	
Axis-Enabling Module	
Accessories for Inverters and Modular Amplifiers	2-25
Braking Resistors	2-25
Line Filters	2-27
CC 3P – Three-Phase Capacitor	
CR 1xx – Commutating Reactor	2-28
DLF 1x0 – DC-Link Filter	
VPM 163 – Voltage Protection Module	2-30
Adapter Module	
Section 3 - Selecting Motors and Inverters	
•	0.4
Selecting an Axis Motor	
Selecting a Spindle Motor	
Selecting an Inverter	
Selection of the Braking Resistor	
Introduction	
Mean Value of Braking Performance Example	
BR 18 Braking Resistor Example	
BR 10F Braking Resistor Example	3-11



BR 18F Braking Resistor Example	3-12
Section 4 - Mounting and Operating Conditions	
General Information	4-1
Trained Personnel	4-1
Meaning of the Note Descriptions	4-2
General Safety Precautions	4-2
General Electrical Protective Measures	
Intended Area of Application	
Degree of Protection (IP Code)	
Fault-Current Circuit Breaker	
Overvoltage Protector	
Electromagnetic Compatibility	
Valid Regulations	
Likely Sources of Interference	
Power Supply Stability Requirements	
CE Marking	
Interference and Noise Immunity	
Noise Immunity	4-11
Protective Measures	
Leakage Current from the Inverter Housing to the Grounding Connection	
Environmental Conditions	
Heat Generation and Cooling	
Air Humidity	
Mechanical Vibration	
Contamination	
Minimum Clearances for BR 10F and BR 18F Braking Resistors	
Installation Guidelines for BR 18 Braking Resistor	
Minimum Clearances for BR 18 Braking Resistor	
Minimum Clearances for the SA Series Inverter	
Connection Overviews	
Power Connection of Regenerative Inverter Systems	4-21
Power Connection of Non-Regenerative Inverter Systems	4-22
Arranging the Inverter Modules	
Arranging Additional Modules	4-26
Section 5 - Installing Amplifier Systems	
Connection Overview	5-1
SA 301E/SA 411E	
Description of LEDs on the SA 301E/SA 411E Amplifiers	
SA 301A	
SA 311A	
SA 411A	
SA 201A	
SA 301C	
SA 411C Description of LEDs on the Amplifiers: SA 301A, SA 311A, SA 411A, SA 201A,	5-10
SA 301C, SA 411C	5.11
RA 201A	
RA 301C	
RA 411C	
-	



Description of LEDs on the Amplifiers: RA 201A, RA 301C, RA 411C	
PS 120A Power Supply Unit	
BR 9 Braking Resistor Module	
BR 18 Braking Resistor	
BR 10F and BR 18F Braking Resistors	
Mounting and Connecting the Amplifier	
Arranging the Components	
Connecting the Components	
Direct Drives	
Module Covers	
Additional Power Supply	
Mounting the Amplifier	
Conducted Interference	
Mounting the Toroidal Cores	
Connecting the SA 301E, SA 411E Amplifier	
SA 301E, SA 411E Power Supplies	
SA 301E, SA 411E Motor Connections	
SA 301E, SA 411E Motor Holding Brakes	
SA 301E, SA 411E Main Contactor and Safety Relay	
SA 301E, SA 411E PWM Connection to the CNC	5-32
SA 301E, SA 411E CNC Supply Voltage and Control Signals	5-33
Connecting the SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C, or	
RA 201A, RA 301C, RA 411C Amplifiers	5-34
Power Supplies	5-35
RA 201A, RA 301C, RA 411C: Motor Connections	5-37
RA 201A, RA 301C, RA 411C: Connection of the Motor Holding Brakes	
RA 201A, RA 301C, RA 411C: Main Contactor and Safety Relay	
RA 201A, RA 301C, RA 411C: PWM Connection to the CNC	
RA 201A, RA 301C, RA 411C: Unit Bus	
Unit Bus – Amplifier to PM 107 Power Module	
BR 18, BR 10F, BR 18F Braking Resistors for SA 301A, SA 311A, SA 411A,	
SA 201A, SA 301C, SA 411C Amplifiers	5-43
Connecting the PS 120A Power Supply Unit	
Connecting the BR 9 Braking Resistor Module	
Physical Dimensions	
SA 301E, SA 411E Amplifiers	
SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C Amplifiers	
RA 201A, RA 301C, RA 411C Amplifiers	5-52
PS 120A Power Supply Unit	
Braking Resistors	
CR 135 Commutating Reactor	5-57
<u> </u>	
Section 6 - Installing Modular Amplifiers	
Connection Overview	
PS 122R Power Supply Unit	6-2
Description of LEDs on PS 122R	6-3
PS 130 Power Supply Unit	
Description of LEDs on PS 130	
PS 145R Power Supply Unit	
Description of LEDs on PS 145R	
PM 107 Power Module	
PMD 107 Power Module	
PM 115A Power Module	



PMD 115 Power Module	
PM 123A Power Module	
PMD 125 and PMD 140 Power Module	6-13
PM 132A and PM 148A Power Module	
PMD 160 Power Module	
PM 170A Power Module	6-16
PMD 196 Power Module	6-17
PM 207 Power Module	
PMD 207 Power Module	
PM 215A and PM 223A Power Module	6-20
PMD 215 and PMD 225 Power Module	6-21
Description of LEDs on PM and PMD Power Modules	6-22
PS 120A Power Supply Unit	6-22
BR 9 Braking Resistor	6-23
BR 10F and BR 18F Braking Resistor	6-24
BR 18 Braking Resistor Module	6-25
DLF 130 DC-Link Filter	6-26
Adapter Module	6-27
Mounting and Connection of the Modular Amplifier System	6-28
Arranging the Modules	6-28
Connecting the Modules	6-29
Direct Drives	6-29
Module Covers	6-29
Additional Power Supply	6-30
Mounting the Modular Amplifier System	6-31
Connecting the Motors	
Connections on the PS 130 Power Supply Units	6-33
Connections on the PS 122R and PS 145R Power Supply Units	
Connections with BR 9 Braking Resistor Module	
Connections on the PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx Power Modules	6-45
PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx – PWM Connection to the CNC Chassis	
PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx – X79: Unit Bus	6-47
PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx – Motor Connections	6-48
PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx – Connection of the Motor Holding Brakes	6-48
Connecting the PS 120A Power Supply Unit	
Connecting the DLF 1x0 DC-Link Filter	6-50
X79: Unit bus (only DLF 130)	6-50
Connecting the Adapter Module	6-52
General	6-52
Important Notes for the Connection	6-52
Adapter Module – X69a: From the First Power Supply Unit (Diagnosable)	6-54
Adapter Module – X69b: From the Second Power Supply Unit (No Diagnosis)	
Adapter Module – X69: Ribbon Cable to the CNC	
Adapter Module – X75: Service Connector	
Physical Dimensions	6-57
PS 122R Power Supply Unit	
PS 130 Power Supply Unit	
PS 145R Power Supply Unit	
PS 120A Power Supply Unit	
CR 135 Commutating Reactor	
CR 170, CR 180 Commutating Reactor	
LF 135A Line Filter	
LF 180A Line Filter	
BR 9 Braking Resistor	



BR 18 Braking Resistor	
BR 10F and BR 18F Braking Resistor	
Three-Phase Current CapacitorPM 107, PM 207 Power Module	
PM 115A, PM 123A, PM 132A, PM 148A, PM 215A, and PM 223A Power Modules	
PM 170A Power Module	
PMD 107 Power Module	
PMD 115 Power Module	
PMD 125, PMD 140 Power Module	
PMD 160 Power Module	
PMD 196 Power Module	
PMD 207 Power Module	
PMD 215, PMD 225 Power Module	
DLF 110 DC-Link Filter	
DLF 120 DC-Link Filter	
DLF 130 DC-Link Filter	
Adapter Module	
Adapter wodule	0-79
Section 7 - Available Motors and Accessories	
Available Motors	
Spindle Motors	
Axis Motors	
Cables and Connectors	
Power Cables for Axis Motors	7-6
Power Cables for Spindle Motors	7-7
Miscellaneous Cables and Connectors	
Maximum Bend Radii of Power Cables with UL Certification	
Required Power Modules and Compact Inverters	
Axis Motors	
Spindle Motors	
Maximum Torque of a Drive	
Safety and Labeling Information	
Safety Precautions and Warranty Regulations	
Motor Nameplate Conventions	
DC-Link Voltages for ANILAM Motors	
Axis Motors	
Axis EcoDyn Motors	
Spindle Motors	
Connecting Speed (Rotary) Encoders to the Motors	
Power Connection of the ANILAM Motors	
AM 960, AM 1160, AM 1550 Series Axis Motors, Power Connection	
AM 820, AM 1150, 1400 Series Axis Motors, Power Connection	7-20
SM 055A, SM 075A, SM 100A, SM 055C-F, SM 075C-F, SM 100C-F, SM 120C,	
SM 120E, SM 150C–F, SM 200C–F, and SM 240C–F Spindle Motors, Power Conne	ection. 7-21
SM 120A Spindle Motor, Power Connection	7-23
Connecting the Holding Brake	7-24
Connecting the Fan to the Spindle Motor	7-26
SM 055Å, SM 075A, SM 100A, SM 055C–F, SM 075C–F, SM 100C–F, SM 120C,	
SM 120E, SM 150C-F, SM 200C-F, and SM 240C-F Spindle Motor Fan	7-26
SM 120A Spindle Motor Fan	7-26
Mechanical Data	7-27
Mounting Flange and Design	
Mounting the Motor	
-	



Shaft End	7-30
Vibration Severity Grade	7-30
Center Holes	7-30
Feather Keys	7-31
Rotatable Flange Sockets	7-32
Axis Motors – AM Series	7-36
Axis Motors General Technical Information	7-38
Axis Motors Mechanical Life	
AM 820 Series - Axis Motor Specifications	7-39
AM 820 Series - Speed-Torque Characteristics Graph	7-40
AM 960A Series - Axis Motor Specifications	
AM 960A Series - Speed-Torque Characteristics Graph	7-42
AM 1150A Series - Axis Motor Specifications	7-43
AM 1150 Series - Speed-Torque Characteristics Graph	7-44
AM 1160A Series - Axis Motor Specifications	
AM 1160A Series - Speed-Torque Characteristics Graph	7-46
AM 1160C Series - Axis Motor Specifications	
AM 1160C Series - Speed-Torque Characteristics Graph	7-48
AM 1160E Series - Axis Motor Specifications	7-49
AM 1160E Series - Speed-Torque Characteristics Graph	7-50
AM 1300A-E Series - Axis Motor Specifications	
AM 1300A-E Series - Speed-Torque Characteristics Graph	7-52
AM 1300C–E Series - Axis Motor Specifications	
AM 1300C-E Series - Speed-Torque Characteristics Graph	7-54
AM 1400A Series - Axis Motor Specifications (n _N =3000 rpm)	
AM 1400A Series - Speed-Torque Characteristics Graph (n _N =3000 rp	m)7-56
AM 1400C Series - Axis Motor Specifications (n _N =2000 rpm)	
AM 1400C Series - Speed-Torque Characteristics Graph (n _N =2000 rp	m)7-58
AM 1550C Series - Axis Motor Specifications	7-59
AM 1550C Series - Speed-Torque Characteristics Graph	7-60
AM 1550E Series - Axis Motor Specifications	7-61
AM 1550E Series - Speed-Torque Characteristics Graph	7-62
AM 1550G Series - Axis Motor Specifications	
AM 1550G Series - Speed-Torque Characteristics Graph	7-64
AM 1550A–E Series - Axis Motor Specifications	
AM 1550A–E Series - Speed-Torque Characteristics Graph	7-66
AM 1550C–E Series - Axis Motor Specifications	
AM 1550C–E Series - Speed-Torque Characteristics Graph	
AM 1550D–E Series - Axis Motor Specifications	
AM 1550D–E Series - Speed-Torque Characteristics Graph	7-7C
AM 1550G–E Series - Axis Motor Specifications	
AM 1550G–E Series - Speed-Torque Characteristics Graph	
Axis Motors Dimension Drawings	
AM 820 Series - Dimensional Drawing	
AM 960 Series - Dimensional Drawing	
AM 960 Series - Connector Illustrations	
AM 1150 Series - Dimensional Drawing	
AM 1160 Series - Dimensional Drawing	
AM 1160 Series - Connector Illustrations	
AM 1300-E Series - Dimensional Drawing	
AM 1300-E Series - Connector Illustrations	
AM 1400 Series - Dimensional Drawing	
AM 1400 Series - Connector Illustrations	
AM 1550 Series - Dimensional Drawing	7-79



444 4 TO 0 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
AM 1550 Series - Connector Illustrations	
AM 1550E Series - Dimensional Drawing	
AM 1550E Series - Connector Illustrations	
Spindle Motors - SM Series	
Spindle Motors General Technical Information	
Spindle Motors Mechanical Life	
Shaft Bearing	
Shaft End	
SM 055A, SM 075A, and SM 100A - Specifications	
SM 055A - Power and Torque Characteristics	
SM 075A - Power and Torque Characteristics	
SM 100A - Power and Torque Characteristics	
SM 120A - Specifications	
SM 120A - Power and Torque Characteristics	
SM 055C–F, SM 075C–F, SM 100C–F Specifications Summary	
SM 055C–F - Specifications	7-91
SM 055C–F - Power and Torque Characteristics	7-92
SM 075C–F - Specifications	
SM 075C–F - Power and Torque Characteristics	7-94
SM 100C–F - Specifications	7-95
SM 100C–F - Power and Torque Characteristics	7-96
SM 120C, SM 120E, SM 150C-F, SM 200C-F, SM 240C-F Specifications Summary	7-97
SM 120C, SM 120E - Specifications	7-98
SM 120C, SM 120E - Power and Torque Characteristics	7-99
SM 150C–F - Specifications	7-100
SM 150C–F - Power and Torque Characteristics	7-101
SM 200C–F - Specifications	
SM 200C–F - Power and Torque Characteristics	
SM 240C–F - Specifications	
SM 240C–F - Power and Torque Characteristics	
Spindle Motors Dimension Drawings	
SM 055A, SM 075A, SM 100A - Dimensional Drawing	
SM 055A, SM 075A, SM 100A, SM 120A, SM 055C-F, SM 075C-F, SM 100C-F, SM 120	
SM 120E, SM 150C–F, SM 200C–F, SM 240C–F - Connector for Speed (Rotary) Encod	
SM 120A - Dimensional Drawing	
SM 120A - Connector for Power Connection	
SM 055C–F, SM 075C–F, SM 100C–F - Dimensional Drawing	
SM 120C, SM 120E, SM 240C–F - Dimensional Drawing	
SM 150C–F - Dimensional Drawing	
SM 200C–F - Dimensional Drawing	
Permissible Forces on the Motor Shaft	
General	
AM 960A, AM 960AB Axis Motors - Permissible Forces	
Combined Load on AM 1160 Series and AM 1550 Series	
AM 820, AM 1150, AM 1400 Series - Permissible Forces	
SM 055A, SM 075A, and SM 100A Spindle Motors - Permissible Forces	
SM 120A - Permissible Forces	
SM 055C–F, SM 075C–F, SM 100C–F - Permissible Forces	7 120
SM 120C, SM 120E, SM 150C–F, SM 200C–F, SM 240C–F - Permissible Forces	1-125 フ 4つ/
ndex	Index-1



Section 1 - Introduction

This manual was written for machine tool manufacturers. It contains information required to install and connect ANILAM SA Series inverter systems and motors on ANILAM 6000i-3X and 6000i-4X Computer Numerical Controls (CNCs).

The following topics are described in this section:

- □ System Overview
- Product Designations
- Components
- Overview of Inverter Systems
- Modular Amplifiers
- Compact Inverters
- Motors

System Overview

The following sections describe components and motors required for a complete drive system. For more information on CNCs, refer to <u>6000i</u> <u>CNC Technical Manual</u>, P/N 627787-21.

Product Designations

Refer to Table 1-1.

Table 1-1, Product Designations

Model Number	Component
AM	Axis (synchronous) motor
SM	Spindle (asynchronous) motor
Adapter Module	Coupling the Power Supply Units
BR 9	BR 9 braking resistor module for the modular amplifier system with regenerative power supply
BR 10F, BR 18F	Braking resistor with fan
BR 18	Braking resistor without fan
CR 135, CR 170, CR 180	Commutating reactors for the PS 122R and PS 145R energy-recovery power supply modules
DLF 1x0	DC-Link Filter
LF 135A, LF 180A	Line filter for the PS 122R and PS 145R energy-recovery power modules

(Continued...)



Table 1-1, Product Designations

Model Number	Component		
PM 107	Power module for the inverter system		
PM 1 <i>xx</i>	Power module for the modular amplifier system for one axis or spindle		
PMD 1xx	Power module with additional features for diagnostics functions for the modular amplifier system for one axis or spindle		
PMD 2xx	Power module with additional features for diagnostics functions for the modular amplifier system for two axes or spindle		
PS 120A	Power supply for the main computer and controller unit.		
PS 130	Non-regenerative power module of the modular amplifier system		
PS 122, PS 144	Energy-recovery power modules of the modular amplifier system		
RA xxx	Regenerative compact inverter		
SA 200 series	Non-regenerative compact inverters for up to 4 axes and a spindle		
SA 300 series	(external Pulse With Modulation [PWM] interfaces). An additional		
SA 400 series	PM 107 power module can be connected.		
VPM 163	Voltage protection module		

Components

ANILAM SA Series inverter drive system includes the following components:

- BR 18 or BR 18F braking resistor (as necessary)
- P/N 34000250, 34000251, or 3400252 ferrite toroidal core
- PM 107 power module (optional)
- Ribbon cables for PWM signals and supply voltage (and optional unit bus)
- Covers for the ribbon cables



Overview of Inverter Systems

The following topics are described:

- □ SA Series Non-Regenerative Compact Inverters
- □ RA Series Regenerative Compact Inverters
- Non-Regenerative Power Supply Unit
- □ Regenerative Power Supply Units

SA Series Non-Regenerative Compact Inverters

The following ANILAM SA inverters have a sliding switch on the front of the unit. This feature enables you to use the spindle unit as an axis. Refer to **Table 1-2**.

NOTE: SA 301E and SA 411E do not have a sliding switch.

Table 1-2, SA Series Non-Regenerative Compact Inverters

Model Number	Number of Axes**1	Axis Current (in A) **2	Spindle (in A)**2	Rated Power
SA 301A (page 2-1)	3 / 1	7.5 / 15	20	15 kW
SA 311A (page 2-1)	2/1/1	7.5 / 15 / 15	20	15 kW
SA 411A (page 2-2)	3/1/1	7.5 / 15 / 15	20	15 kW
SA 201A (page 2-2)	2/1	7.5 / 23	31	22 kW
SA 301C (page 2-3)	3 / 1	7.5 / 23	31	22 kW
SA 411C (page 2-3)	3/1/1	7.5 / 23 / 23	31	22 kW
SA 301E (page 2-4)	3	6 ^{**3}	24**3	10 kW
SA 411E (page 2-4)	3 / 1	6 / 9**3	24**3	10 kW

^{**1} Depending on setting of operating mode switch (axis/spindle)

IMPORTANT: Phoenix connectors X344, X392, and X393 on the bottom of the inverter are reserved for future applications. Do not use them.

^{**2} Data for a Pulse Width Modulation (PWM) of 5 kHz

^{**3} Data for a PWM frequency of 3.33 kHz



RA Series Regenerative Compact Inverters

The following ANILAM RA inverters have a sliding switch on the front of the unit. This feature enables you to use the spindle unit as an axis. Refer to **Table 1-3**.

Table 1-3, RA Series Regenerative Compact Inverters

Model Number	Number of Axes**1	Axis Current (in A) **2	Spindle 1 / 2 / 3 (in A) ***2	Rated Power
RA 201A (page 2-5)	2/1	7.5 / 25	35 / – / –	22 kW
RA 301C (page 2-5)	3 / 1	7.5 / 25	10 / 35 / –	22 kW
RA 411C (page 2-6)	3/1/1	7.5 / 25 / 25	10 / 35 / 35	22 kW

^{**1} Depending on setting of operating mode switch (axis/spindle)

IMPORTANT: Phoenix connectors X344, X392, and X393 on the bottom of the inverter are reserved for future applications. Do not use them.

Non-Regenerative Power Supply Unit

Refer to Table 1-4.

Table 1-4, Non-Regenerative Power Supply

	Load Capacity (in A)			Rated
Model Number	5 V	15 V	24 V	Power
PS 130 (page 2-10)	8.5	1.5	2.0	30 kW

Regenerative Power Supply Units

Refer to Table 1-5.

Table 1-5, Regenerative Power Supply

	Load Capacity	Rated		
Model Number	5 V	15 V	24 V	Power
PS 122R (page 2-10)	8.5	1.5	2.0	22 kW
PS 145R (page 2-10)	8.5	1.5	2.0	45 kW

^{**2} Data for a Pulse Width Modulation (PWM) of 5 kHz



Modular Amplifiers

Refer to Table 1-6.

Table 1-6, Modular amplifiers

	Maximum Current Load in A**1				
Modular Amplifiers	Axis	Axis/Spindle**2			
1 axis					
PM 107 (page 2-11)	7.5				
1 axis/spindle					
PM 115A (page 2-11)	_	15 / 20			
PM 123A (page 2-11)	_	23 / 31			
PM 132A (page 2-12)	_	32 / 50			
PM 148A (page 2-12)	_	48 / 75			
PM 170A (page 2-12)	_	70 / 100			
2 axes					
PM 207 (page 2-13)	7.5	7.5 / –			
1 axis—1 axis/spindle					
PM 215A (page 2-13)	15	15 / 20			
PM 223A (page 2-13)	23	23 / 31			

^{**1} Data for a PWM frequency of 5 kHz

^{**2} Depending on setting of operating mode switch (axis/spindle)



Compact Inverters

Compact inverters are available for up to 4 axes plus spindle or up to five axes.

The following topics are described:

- Components of the Compact Inverter
- SA 301A, SA 311A, SA 411A, SA 201A, SA 301A, SA 411C Compact Inverter
- □ SA 301E, SA 411E Compact Inverter
- □ RA 201A, RA 301C, RA 411C Compact Inverter

Components of the Compact Inverter

For operation with the non-regenerative ANILAM **SA 301E, SA 411E** compact inverter, you need the following components:

- SA 301E, SA 411E compact inverter
- Toroidal cores for interference suppression

For operation with the non-regenerative ANILAM SA 301A, SA 311A, SA 411A, SA 201A, SA 301A, SA 411C compact inverter, you need the following components:

- SA 301A, SA 311A, SA 411A, SA 201A, SA 301A, SA 411C compact inverter
- BR 18 (or BR 10F, BR 18F) braking resistor (optional)
- Toroidal cores for interference suppression
- One PMD 107 power module (optional)
- Ribbon cables for PWM signals and supply voltage (and optional unit bus)
- Covers for the ribbon cables

For operation with the regenerative ANILAM **RA 201A**, **RA 301C**, **RA 411C** compact inverter, you need the following components:

- RA 201A, RA 301C, & RA 411C compact inverter
- CR 135 commutating reactor
- BR 9 braking resistor module (optional)
- One PMD 107 power module (optional)
- In conjunction with direct drives (only via additional power module):
 One DLF 1x0 (DC-link filter)
- Ribbon cables for PWM signals and supply voltage (and optional unit bus)
- Covers for the ribbon cables



SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C Compact Inverter

With the non-regenerative SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C compact inverters, the power electronics for all of the axes and the spindle, as well as the power supply for the control are all contained in a single unit.

The PWM signals are transferred via external 20-line ribbon cable.

For specifications and power requirements, see <u>Table 2-1, Inverter</u> <u>Technical Specifications & Power Requirements</u>.

SA 301E, SA 411E Compact Inverter

With SA 301E, SA 411E compact inverters, the power electronics for all of the axes and the spindle, as well as the power supply for the control are all contained in a single unit. The SA 301E, SA 411E models are non-regenerative compact inverters with integral braking resistor.

The PWM signals are transferred via external 20-line ribbon cable.

For specifications and power requirements, see <u>Table 2-1, Inverter</u> <u>Technical Specifications & Power Requirements</u>.

NOTE: It is not possible to connect an external braking resistor to the SA 301E, SA 411E compact inverters.

RA 201A, RA 301C, RA 411C Compact Inverter

With the regenerative RA 201A, RA 301C, RA 411C compact inverters, the power electronics for all of the axes and the spindle, as well as the power supply for the control are all contained in a single unit.

The PWM signals are transferred via external 20-line ribbon cable.

For specifications and power requirements, see <u>Table 2-1, Inverter</u> <u>Technical Specifications & Power Requirements</u>.

Motors

For performance specifications, model numbers, and dimensional drawings, refer to "Section 7 - Available Motors and Accessories."



Section 2 - Technical Specifications and Power Requirements

The following topics are described in this section:

- Inverter
- Toroidal Cores
- □ Ribbon Cables and Covers (Only for SA xxxx)
- Modular Amplifiers
- Axis Enabling Module
- Accessories for Inverters and Modular Amplifiers



Inverter

Refer to Table 2-1.

Table 2-1, Inverter Technical Specifications & Power Requirements

Parameter		SA 301A	1	SA 311A		
		(non-reg	enerative)	(non-regen	erative)	
		3 axes Spindle/Axis		2 axes	1 axis	Spindle/Axis
ANILAM P/N		3400030	0	34000301		
Power Supply		3 phase x 400 VAC ± 10 %		6 (50 Hz to 6	(50 Hz to 60 Hz)	
DC-link Voltage		565 VDC	565 VDC (with power supp			
DC-link Power						
Rated po	wer		15 kW		15 kW	
Peak pov Peak pov	ver '		23 kW		23 kW	
	ver -		40 kW		40 kW	=0= \\\
Power Loss		Approx	imately 475 W	P	pproximately	525 W
Rated current at a PWI		000	04 5 4/40 4 4	0.0.4	40.4.4	04 5 4/40 4 4
	33 Hz 00 Hz	9.0 A 8.3 A	24.5 A/18.4 A 22.5 A/16.9 A	9.0 A 8.3 A	18.4 A 16.9 A	24.5 A/18.4 A 22.5 A/16.9 A
	00 Hz	7.5 A	20.0 A/15.0 A	7.5 A	15.9 A 15.0 A	20.0 A/15.0 A
	66 Hz	6.4 A	17.0 A/12.8 A	6.4 A	12.8 A	17.0 A/12.8 A
	00 Hz	5.3 A	14.5 A/10.9 A	5.3 A	10.9 A	14.5 A/10.9 A
	00 Hz	4.5 A 12.0 A/9.0 A		4.5 A	9.0 A	12.0 A/9.0 A
Current for S6-40%**3 a	Current for S6-40%**3 at a					
PWM frequency of: 333	33 Hz		30.0 A			30.0 A
40	00 Hz		30.0 A			30.0 A
	00 Hz		30.0 A			30.0 A
	66 Hz		25.5 A			25.5 A
	00 Hz		21.8 A			21.8 A
	00 Hz		18.0 A			18.0 A
Maximum current at		4504	00.0.4	4504	00.0.4	00.0.4
PWM frequency of: 333	33 HZ 00 Hz	15.0 A 15.0 A	30.0 A 30.0 A	15.0 A 15.0 A	30.0 A 30.0 A	30.0 A 30.0 A
	00 Hz	15.0 A 15.0 A	30.0 A 30.0 A	15.0 A 15.0 A	30.0 A 30.0 A	30.0 A 30.0 A
	66 Hz	13.0 A 12.8 A	25.5 A	13.0 A 12.8 A	25.6 A	25.5 A
	00 Hz	10.6 A	21.8 A	10.6 A	21.8 A	21.8 A
	00 Hz	9.0 A	18.0 A	9.0 A	18.0 A	18.0 A
Integral braking resistor**5 1 kW / 27 kW		1 kW / 27 kW				
Load capacity +5 V		8.5 A		8.5 A		
Degree of protection		IP 20		IP 20		
Weight		44 lb. (≅ 20 kg.)		44 lb. (≅ 20 kg.)		
Connection overview		Page 5-4		Page 5-5		
Dimensions		Page 5-4				
**1 400/ evelia duration factor for duration of 10 minutes (SG 400/)						

^{**1 40%} cyclic duration factor for duration of 10 minutes (S6-40%)

^{**2 0.2} s cyclic duration factor for duration of 5 s

^{**3} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**4} Axes: 0.2 s cyclic duration factor for duration of 5 s with rated current preload;

^{0.2} s at standstill for synchronous motors

Spindle: 10 s cyclic duration factor for duration of 60 s with 70% rated current preload

^{**5 1}st value: Continuous power

²nd value: 1.5% cyclic duration factor for duration of 120 s



Table 2-1, Inverter Technical Specifications & Power Requirements (Continued)

Parameter		SA 411A			SA 201A	
		` -	enerativ	•	(non-regen	
		3 axes 1 axis Spindle/Axis			2 axes	Spindle/Axis
ANILAM P/N		3400030			34000303	
Power Supply				$C \pm 10 \%$ (50 Hz)		
DC-link Voltage		565 VDC	(with sup	oply voltage of 400) V)	
DC-link Power						
Rate	d power		15 k			22 kW
Pear	c power		23 k			30 kW
Peak	c power ^{^2}		40 k	(W		45 kW
Power Loss		Ap	oproximat	ely 595 W	Approx	rimately 520 W
Rated current at a	PWM					
frequency of:	3333 Hz	9.0 A	18.4 A	24.5 A/18.4 A	9.0 A	38.0 A/28.2 A
	4000 Hz	8.3 A	16.9 A	22.5 A/16.9 A	8.3 A	35.0 A/26.0 A
	5000 Hz	7.5 A	15.0 A	20.0 A/15.0 A	7.5 A	31.0 A/23.0 A
	6666 Hz	6.4 A	12.8 A	17.0 A/12.8 A	6.4 A	26.0 A/19.3 A
	8000 Hz	5.3 A	10.9 A	14.5 A/10.9 A	5.3 A	22.5 A/16.7 A
0 15 00 100			12.0 A/9.0 A	4.5 A	19.0 A/14.1 A	
	Current for S6-40%**3 at a PWM frequency of: 3333 Hz			30.0 A		40.0.4
Pww trequency of	3333 HZ 4000 Hz		30.0 A			46.0 A 46.0 A
	4000 Hz 5000 Hz			30.0 A 30.0 A		46.0 A
	6666 Hz		25.5 A			38.6 A
	8000 Hz		21.8 A			33.4 A
	10000 Hz		18.0 A			28.2 A
Maximum current	*4 at a					
PWM frequency of		15.0 A	30.0 A	30.0 A	15.0 A	46.0 A
Trum moquemey or	4000 Hz	15.0 A	30.0 A	30.0 A	15.0 A	46.0 A
	5000 Hz	15.0 A	30.0 A	30.0 A	15.0 A	46.0 A
	6666 Hz	12.8 A	25.6 A	25.5 A	12.8 A	38.6 A
	8000 Hz	10.6 A	21.8 A	21.8 A	10.6 A	33.4 A
	10000 Hz	9.0 A	18.0 A	18.0 A	9.0 A	28.2 A
Integral braking re	sistor**5	1 kW / 27 kW –				
Load capacity +5 \	<u>/ </u>	8.5 A		8.5 A		
Degree of protection	on	IP 20		IP 20		
Weight		44.1 lb. (≅ 20 kg.)		50.6 lb. (≅ 2	23 kg.)	
Connection overvi	ew	Page 5-6	3		Page 5-7	
Dimensions		Page 5-4				

^{**1 40%} cyclic duration factor for duration of 10 minutes (S6-40%)

2nd value: 1.5% cyclic duration factor for duration of 120 s

^{**2 0.2} s cyclic duration factor for duration of 5 s

^{**3} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**4} Axes: 0.2 s cyclic duration factor for duration of 5 s with rated current preload;

^{0.2} s at standstill for synchronous motors

^{**5 1}st value: Continuous power



Table 2-1, Inverter Technical Specifications & Power Requirements (Continued)

Parameter	SA 301C		SA 411C		
	(non-reg	enerative)	(non-regen	erative)	
	3 axes	Spindle/Axis	3 axes	1 axis	Spindle/Axis
ANILAM P/N	3400030	4	34000306		
Power Supply	3 phase:	3 phase x 400 VAC \pm 10 %		60 Hz)	
DC-link Voltage	565 VDC	(with power supp	oly at 400 V)		
DC-link Power					
Rated power		22 kW		22 kW	
Peak power**1		30 kW		30 kW	
Peak power**2	_	45 kW	_	45 kW	
Power Loss	Approx	imately 590 W	А	pproximately	770 W
Rated current at a PWM					
frequency of: 3333 Hz	9.0 A	38.0 A/28.2 A	9.0 A	28.2 A	38.0 A/28.2 A
4000 Hz	8.3 A	35.0 A/26.0 A	8.3 A	26.0 A	35.0 A/26.0 A
5000 Hz 6666 Hz	7.5 A	31.0 A/23.0 A	7.5 A	23.0 A	31.0 A/23.0 A
8000 Hz	6.4 A 5.3 A	26.0 A/19.3 A 22.5 A/16.7 A	6.4 A 5.3 A	19.3 A 16.7 A	26.0 A/19.3 A 22.5 A/16.7 A
10000 Hz	4.5 A	19.0 A/14.1 A	5.5 A 4.5 A	16.7 A 14.1 A	19.0 A/14.1 A
Current for S6-40%**3 at a	4.5 A 10.0 A 14.1 A		7.5 /	17.17	19.0 70 14.1 7
PWM frequency of: 3333 Hz		46.0 A			46.0 A
4000 Hz		46.0 A			46.0 A
5000 Hz		46.0 A			46.0 A
6666 Hz		38.6 A			38.6 A
8000 Hz		33.4 A			33.4 A
10000 Hz		28.2 A			28.2 A
Maximum current**4 at a					
PWM frequency of: 3333 Hz	15.0 A	46.0 A	15.0 A	46.0 A	46.0 A
4000 Hz	15.0 A	46.0 A	15.0 A	46.0 A	46.0 A
5000 Hz	15.0 A	46.0 A	15.0 A	46.0 A	46.0 A
6666 Hz	12.8 A	38.6 A	12.8 A	38.6 A	38.6 A
8000 Hz	10.6 A	33.4 A	10.6 A	33.4 A	33.4 A
10000 Hz	9.0 A	28.2 A	9.0 A	28.2 A	28.2 A
Load capacity +5 V	8.5 A		8.5 A		
Degree of protection	IP 20		IP 20		
Weight	50.7 lb. (50.7 lb. (≅ 23 kg.)		
Connection overview	Page 5-8		Page 5-9		
Dimensions	Page 5-4	Page 5-44			

^{**1 40%} cyclic duration factor for duration of 10 minutes (S6-40%)

^{**2 0.2} s cyclic duration factor for duration of 5 s

^{**3} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**4} Axes: 0.2 s cyclic duration factor for duration of 5 s with rated current preload;

^{0.2} s at standstill for synchronous motors



Table 2-1, Inverter Technical Specifications & Power Requirements (Continued)

ANILAM P/N Power Supply 3 DC-link Voltage 5 Colink Power	3 axes 34000307 3 phase x 3 phase x 565 VDC (578 VDC (spindle 400 VAC ± 10 % 480 VAC ± 10 % (with supply volt) (with supply volt) 0 kW	6 (50 Hz to 6 age at 400 V)	1 axis 60 Hz) 60 Hz)	Spindle
ANILAM P/N Power Supply 3 DC-link Voltage 5 DC-link Power	34000307 3 phase x 3 phase x 565 VDC (578 VDC (400 VAC ± 10 % 480 VAC ± 10 % (with supply volt (with supply volt	34000308 6 (50 Hz to 6 6 (50 Hz to 6 age at 400 V)	60 Hz) 60 Hz)	Spindle
Power Supply 3 DC-link Voltage 5 DC-link Power	3 phase x 3 phase x 565 VDC (578 VDC (1 1	$400 \text{ VAC} \pm 10 \%$ $480 \text{ VAC} \pm 10 \%$ (with supply volt) (with supply volt)	6 (50 Hz to 6 6 (50 Hz to 6 age at 400 V)	60 Hz)	
DC-link Voltage 5	3 phase x 565 VDC (578 VDC (1 1	480 VAC ± 10 % (with supply volt (with supply volt	6 (50 Hz to 6 age at 400 V)	60 Hz)	
DC-link Voltage 5	565 VDC (678 VDC (1 1	(with supply volt (with supply volt	age at 400 V)	•	
DC-link Power	678 VDC (1 1	with supply volt	•		
DC-link Power	1		age at 480 V)		
DC-link Power	1	0 kW			
20 mm 1 00001	1	0 kW			
Rated power		•		10 kW	
Peak bower		5 kW		15 kW	
Peak power**2	2	20 kW		20 kW	
Power Loss	Approxin	nately 450 W	A	pproximately	450 W
Rated current at a PWM					
frequency of: 3333 Hz	6.0 A	24.0 A	6.0 A	9.0 A	24.0 A
4000 Hz	5.5 A	22.0 A	5.5 A	8.3 A	22.0 A
5000 Hz	5.0 A	20.0 A	5.0 A	7.5 A	20.0 A
6666 Hz	4.2 A	16.8 A	4.2 A	6.3 A	16.8 A
	3.65 A	14.6 A	3.65 A	5.5 A	14.6 A
10000 Hz	3.0 A	12.2 A	3.0 A	4.6 A	12.2 A
Current for S6-40%**3 at a					
PWM frequency of: 3333 Hz		36.0 A			36.0 A
4000 Hz		33.0 A			33.0 A
5000 Hz		30.0 A			20.0 A
6666 Hz		25.2 A			16.8 A
8000 Hz		21.9 A			14.6 A
10000 Hz		18.3 A			12.2 A
Maximum current**4 at a					
PWM frequency of: 3333 Hz	12.0 A	36.0 A	12.0 A	18.0 A	36.0 A
4000 Hz	11.0 A	33.0 A	11.0 A	16.5 A	33.0 A
5000 Hz	10.0 A	30.0 A	10.0 A	15.0 A	30.0 A
6666 Hz	8.4 A	25.2 A	8.4 A	12.6 A	25.2 A
8000 Hz	7.3 A	21.9 A	7.3 A	11 A	21.9 A
10000 Hz	6.0 A	18.3 A	6.0 A	9.2 A	18.3 A
Integral braking resistor**5	1 kW / 27 kW		1 kW / 27 kW		
. ,	10 A		10 A		
Degree of protection	IP 20		IP 20		
Weight 4	44.1 lb. (≘	≅ 20 kg.)	44.1 lb. (≅ 20 kg.)		
Connection overview F	Page 5-2				
	Page 5-43	}			

^{**1 40%} cyclic duration factor for duration of 10 minutes (S6-40%)

2nd value: 1.5% cyclic duration factor for duration of 120 s

^{**2 0.2} s cyclic duration factor for duration of 5 s

^{**3} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**4} Axes: 0.2 s cyclic duration factor for duration of 5 s with rated current preload; 0.2 s at standstill for synchronous motors

^{**5 1}st value: Continuous power



Table 2-1, Inverter Technical Specifications & Power Requirements (Continued)

Parameter	RA 201A		RA 301C			
	(regenerative 2 axes) Spindle/Axis	(regenerative) 3 axes/spindle	Spindle/Axis		
ANILAM P/N	34000310	Opinale/Axis	34000311	Opinaic/Axis		
Power Supply	3 phase x 400	VAC ± 10 % (50	Hz to 60 Hz)			
DC-link Voltage	650 VDC					
DC-link Power						
Rated power			22 kW			
Peak power **1			30 kW			
Peak power**2			40 kW			
Power Loss	Approxim	ately 680 W	Approxima	ately 750 W		
Rated current at a PWM						
frequency of: 3333 Hz	9.0 A	42.5 A/30.4 A	9.0 A/12.0 A	42.5 A/30.4 A		
4000 Hz	8.3 A	39.5 A/28.3 A	8.3 A/11.1 A	39.5 A/28.3 A		
5000 Hz	7.5 A	35.0 A/25.0 A	7.5 A/10.0 A	35.0 A/25.0 A		
6666 Hz	6.4 A	29.5 A/21.1 A	6.4 A/8.5 A	29.5 A/21.1 A		
8000 Hz	5.3 A	25.0 A/17.9 A	5.3 A/7.1 A	25.0 A/17.9 A		
10000 Hz	4.5 A 21.5 A/15.4 A		4.5 A/6.0 A	21.5 A/15.4 A		
Current for S6-40%**3 at a		50 O A		50.0.4		
PWM frequency of: 3333 Hz		50.0 A 50.0 A		50.0 A		
4000 Hz				50.0 A 50.0 A		
5000 Hz	50.0 A 42.0 A			42.1 A		
6666 Hz	36.0 A			35.7 A		
8000 Hz		31.0 A		30.7 A		
10000 Hz		31.0 A		30.7 A		
Maximum current at a	15.0 A	50.0 A	15.0 A	50.0 A		
PWM frequency of: 3333 Hz	15.0 A 15.0 A	50.0 A 50.0 A	15.0 A 15.0 A	50.0 A 50.0 A		
4000 Hz	15.0 A 15.0 A	50.0 A 50.0 A	15.0 A 15.0 A	50.0 A 50.0 A		
5000 Hz	13.0 A 12.8 A	42.0 A	12.8 A	42.1 A		
6666 Hz 8000 Hz	10.6 A	36.0 A	10.6 A	35.7 A		
10000 Hz	9.0 A	31.0 A	9.0 A	30.7 A		
Load capacity +5 V	8.5 A		8.5 A	<u> </u>		
Degree of protection	IP 20		IP 20			
Weight	49.6 lb. (≅ 22	.5 kg.)	49.6 lb. (≅ 22.5 kg.)			
Connection overview	Page 5-11		Page 5-12			
Dimensions	Page 5-45					

^{**1 40%} cyclic duration factor for duration of 10 minutes (S6-40%)

^{**2 0.2} s cyclic duration factor for duration of 5 s

^{**3} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**4} Axes: 0.2 s cyclic duration factor for duration of 5 s with rated current preload;

^{0.2} s at standstill for synchronous motors



Table 2-1, Inverter Technical Specifications & Power Requirements (Continued)

Parameter	RA 411C						
	(regenerative)	1	1				
	3 axes/spindle	1 axis/spindle	Spindle/Axis				
ANILAM P/N	34000312						
Power Supply	3 phase x 400 VAC \pm	3 phase x 400 VAC ± 10 % (50 Hz to 60 Hz)					
DC-link Voltage	650 VDC						
DC-link Power							
Rated power		22 kW					
Peak power**1		30 kW					
Peak power**2	40 kW						
Power Loss		Approximately 930 W	1				
Rated current at a PWM							
frequency of: 3333 Hz	9.0 A/12.0 A	30.4 A/42.5 A	42.5 A/30.4 A				
4000 Hz	8.3 A/11.1 A	28.3 A/29.5 A	39.5 A/28.3 A				
5000 Hz	7.5 A/10.0 A	25.0 A/35.0 A	35.0 A/25.0 A				
6666 Hz	6.4 A/8.5 A	21.1 A/29.5 A	29.5 A/21.1 A				
8000 Hz	5.3 A/7.1 A	17.9 A/25.0 A	25.0A/17.9 A				
10000 Hz	4.5 A/6.0 A	15.4 A/21.5 A	21.5 A/15.4 A				
Current for S6-40%**3 at a							
PWM frequency of: 3333 Hz	15.0 A	50.0 A	50.0 A				
4000 Hz	15.0 A	50.0 A	50.0 A				
5000 Hz	15.0 A	50.0 A	50.0 A				
6666 Hz	12.8 A	42.0 A	42.1 A				
8000 Hz	10.6 A	36.0 A	35.7 A				
10000 Hz	9.0 A	31.0 A	30.7 A				
Maximum current**4 at a	4=0.4						
PWM frequency of: 3333 Hz	15.0 A	50.0 A	50.0 A				
4000 Hz	15.0 A	50.0 A	50.0 A				
5000 Hz	15.0 A 12.8 A	50.0 A	50.0 A				
6666 Hz	12.6 A 10.6 A	42.0 A 36.0 A	42.1 A 35.7 A				
8000 Hz	9.0 A	31.0 A	30.7 A				
10000 Hz	8.5 A	01.0 A	J 00.1 A				
Load capacity +5 V							
Degree of protection	IP 20						
Weight	49.6 lb. (≅ 22.5 kg.)						
Connection overview	Page 5-13						
Dimensions	Page 5-45						

^{**1 40%} cyclic duration factor for duration of 10 minutes (S6-40%)

^{**2 0.2} s cyclic duration factor for duration of 5 s
**3 For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**4} Axes: 0.2 s cyclic duration factor for duration of 5 s with rated current preload;

^{0.2} s at standstill for synchronous motors



PS 120A Power Supply Unit

The power supply for the main computer and controller unit—and therefore for the connected encoders—is usually covered by the compact inverter or the power supply unit of the modular inverter systems. Refer to **Table 2-2**.

If several encoders with a high current consumption (e.g., encoders with EnDat interface) or a dual-processor control are connected, however, an additional power supply source might become necessary. The PS 120A power supply unit is used for this purpose.

The PS 120A is connected to the control via a ribbon cable and a 5 V terminal.

The cover for the cable is included in the items supplied.

Table 2-2, PS 120A Specifications

Specifications	PS 120A
ANILAM P/N	34000347
Power supply	400 VAC ± 10 % (50 Hz to 60 Hz)
Load capacity (5 V)	20A
Degree of protection	IP 20
Module width	1.97 inch (50 mm)
Weight	8.8 lb (4 kg)



Toroidal Cores

To suppress occurrence of line interference, toroidal cores must be mounted in the motor leads, in the voltage supply lead, and in the lead to the braking resistor (only SA 301A, SA 311A, and SA 411A). Refer to **Table 2-3**, to determine the proper core.

Table 2-3, Connections for Toroidal Cores

Terminal on Inverter	Toroidal Core
Power Supply (X31)	Ø 87 mm (≅3.43 inch) (34000250)
Braking Resistor (X89)**1	Ø 42 mm (≅1.65 inch) (34000251)
Axis 1 to 3 (X81 to X83)	Ø 42 mm (≅1.65 inch) (34000251)
Axis 4 (X84)	Ø 59 mm (≅2.32 inch) (34000252)
Spindle (X80)	Ø 59 mm (≅2.32 inch) (34000252)

^{**1} Only for SA 301A, SA 311A, and SA 411A



Ribbon Cables and Covers (Only for SA xxxx)

50-Line Ribbon Cable (Power Supply to CNC Chassis)

The 50-line ribbon cable connects the SA series inverter to the CNC Chassis and supplies voltage to the CNC Chassis. It is supplied with SA xxxx (length 300 mm (≅11.8 inch), P/N 325 816-01).

20-Line Ribbon Cable (PWM Signals)

The 20-line ribbon cable connects the power module outputs of the CNC chassis to the power module connections on the inverter. One 20-line ribbon cable is required for each axis/ spindle. The 20-line ribbon cables for the connections on the inverter are supplied with the SA xxxx (length 200 mm (\cong 7.9 inch), P/N 250 479-08; length 400 mm (\cong 15.8 inch), P/N 250 479-10). If you are using an additional PM 107 power module, an additional 20-line ribbon cable is required. Refer to **Table 2-4**.

Table 2-4, 20-Line Ribbon Cable Specifications

PWM Connection on the PM 107 Power Module	Length of 20-Line Ribbon Cable	P/N
X111, X112	100 mm (≅4 inch)	34000263

40-Line Ribbon Cable (Unit Bus)

The 40-line ribbon cable serves as the unit bus. It is required if an additional PM 107 power module is being operated with the inverter. Refer to **Table 2-5**.

Table 2-5, 40-Line Ribbon Cable Specifications

Unit Bus Connection	Length of 40-Line Ribbon Cable	P/N
X79	50 mm (≅2 inch)	34000264

Ribbon Cable Covers

The ribbon cables must be covered to protect them from electrical interference. One cover is supplied with the OEM CNC; one cover is supplied with the inverter (197.5 mm, P/N 34000274).

The plastic lateral termination cap is P/N 34000278.

If you are using an additional PM 107 power supply, the cover for this module must be ordered separately. Refer to **Table 2-6**.

Table 2-6, Ribbon Cable Cover - Specifications

Additional Power Module	Length of Cover	P/N
PM 107	50 mm (≅2 inch)	34000265



Modular Amplifiers

The following topics are described:

- Components of the Modular Amplifier
- PS 122R, PS 130, PS 145R Power Supply Unit
- □ PM 1xx, PM 2xx, PMD 1xx, PMD 2xx Power Modules
- □ Current Consumption of the Entire Inverter System
- Ribbon Cables and Covers
- □ Ribbon Cable Covers

Components of the Modular Amplifier

For operation of the modular ANILAM **non-regenerative** amplifiers, the following components are required:

- PS 130 power supply unit
- PM 1xx power modules, depending on version
- Toroidal cores for interference suppression
- PW 210 (or PW 110, PW 120) braking resistor
- One PMD 107 power module (optional)
- Ribbon cables for Pulse Width Modulation (PWM) signals, unit bus, and power supply
- Covers for the ribbon cables

For operation of the modular ANILAM **regenerative** amplifiers, the following components are required:

- PS 122R or PS 145R power supply unit
- CR 135 or CR 170 commutating reactor
- Line filter
- If required, BR 9 braking resistor module
- One PMD 107 power module (optional)
- Ribbon cables for PWM signals, unit bus, and power supply
- Covers for the ribbon cables



PS 122R, PS 130, PS 145R Power Supply Unit

The PS 1xx power supply units supply the DC-link voltage as well as the power for the electronics to the CNC Chassis and power modules.

During braking, the motors feed energy into the DC-link. This energy is converted into heat by the PS 130 through the BR 18 (or BR 10F or BR 18F) braking resistor, or returned to the power line through the PS 122R or PS 145R. The PS 122R and PS 145R can be driven only with commutating reactor and line filter.

Refer to Table 2-7.

Table 2-7, Power Supply Technical Specifications and Power Requirements

Parameter	PS 122R (regenerative)	PS 130 (non-regenerative)	PS 145R (regenerative)	
ANILAM P/N	34000340	34000343	34000346	
Description	Amplifier, Power Supply, 22/30kW	Amplifier, Power Supply, 30/40kW	Amplifier, Power Supply, 45/65kW	
Power Supply	3 phase x 400 VAC	\pm 10 % (50 Hz to 60 H	z)	
DC-link Power				
Rated Power	22 kW	30 kW	45 kW	
Peak Power **1	30 kW	40 kW	65 kW	
Peak Power **2	40 kW	50 kW	80 kW	
Power Loss	≅ 300 W	≅ 140 W	≅ 570 W	
DC-link Voltage	650 VDC	565 VDC	650 VDC	
		(with supply voltage of 400 V)		
Current Consumption:				
15 V	270 mA	240 mA	380 mA	
24 V	310 mA	410 mA	310 mA	
Current Load**3				
15 V	1.5 A	1.5 A	1.5 A	
24 V	2.0 A	2.0 A	2.0 A	
Load Capacity +5 V	8.5 A			
Degree of protection	IP 20			
Weight	27 lb. (≅ 12.0 kg.)	22 (≅ 9.8 kg.)	44 lb. (≅ 20.0 kg.)	

^{**1 40%} cyclic duration factor for duration of 10 minutes (S6-40%)

^{**2 0.2} s cyclic duration factor for duration of 5 s

^{**3} After making your selection, check the current consumption of the 15 V and 24 V supply of the entire modular amplifier system.



PM 1xx, PM 2xx, PMD 1xx, PMD 2xx Power Modules

The power modules differ in the number of axes and the permissible maximum currents. They can be combined at random. The PWM signals are transferred from the CNC Chassis via external 20-line ribbon cables. Refer to **Table 2-8**.

Table 2-8, Power Module Technical Specifications

Specifications	PM 107	PMD 107	PM ^c	115A
	Axis	Axis	Axis	Spindle
ANILAM P/N	34000320	628663-01	34000321	
Rated current at a PWM frequency of:				
3333 Hz	9.0 A	9.0 A	18.4 A	24.5 A
4000 Hz	8.3 A	8.3 A	16.9 A	22.5 A
5000 Hz	7.5 A	7.5 A	15.0 A	20.0 A
6666 Hz	6.4 A	6.4 A	12.8 A	17.0 A
8000 Hz	5.3 A	5.3 A	10.9 A	14.5 A
10000 Hz	4.5 A	4.5 A	9.0 A	12.0 A
Current at S6-40%**1 at a				
PWM frequency of:				20.0.4
3333 Hz				30.0 A 30.0 A
4000 Hz 5000 Hz				30.0 A 30.0 A
6666 Hz				25.6 A
8000 Hz				21.8 A
10000 Hz				18.0 A
Maximum current**2 at a				
PWM frequency of:		***		
3333 Hz	15.0 A	18.0 A**3		0 A
4000 Hz	15.0 A	16.6 A 3		0 A
5000 Hz	15.0 A	15.0 A		0 A
6666 Hz	12.8 A 10.6 A	12.8 A		6 A
8000 Hz 10000 Hz	9.0 A	10.6 A 9.0 A	21.8 A 18.0 A	
Power loss	≅ 70 W		≅ 120 W	≅ 160 W
Current consumption**4				
15 V	120 mA		150 mA	
24 V	60 mA		170	mA
Degree of protection	IP 20			
Weight	12 lb. (≅ 5.5 kg.)			

^{**1} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

Spindle: 10 s cyclic duration factor for duration of 60 s with 70% rated current preload

^{**2} Axes: 0.2s cyclic duration factor for duration of 5 s with rated current preload; 0.2 s at standstill for synchronous motors

^{**3} As of mid-2005 (depending on software. Information available from ANILAM.

^{**4} After making your selection, check the current consumption of the 15 V and 24 V supply of the entire modular amplifier system.



Table 2-8, Power Module Technical Specifications (Continued)

Specifications	PMD	115	PM [*]	123A	PMI	D 125
	Axis	Spindle	Axis	Spindle	Axis	Spindle
ANILAM P/N	638664-0	1	34000322)	638665-0)1
Rated current at a PWM frequency of:						
3333 Hz 4000 Hz	18.4 A 16.9 A	24.5 A 22.5 A	28.2 A 26.0 A	38.0 A 35.0 A	29.5 A 27.7 A	40.0 A 37.0 A
5000 Hz 6666 Hz 8000 Hz	15.0 A 12.8 A 10.9 A	20.0 A 17.0 A 14.5 A	23.0 A 19.3 A 16.7 A	31.0 A 26.0 A 22.5 A	25.0 A 21.0 A 18.5 A	34.0 A 28.5 A 25.0 A
10000 Hz	9.0 A	12.0 A	14.1 A	19.0 A	15.5 A	21.0 A
Current at S6-40%**1 at a PWM frequency of: 3333 Hz 4000 Hz 5000 Hz 6666 Hz 8000 Hz 10000 Hz Maximum current**3 at a PWM frequency of: 3333 Hz 4000 Hz 5000 Hz 6666 Hz 8000 Hz 10000 Hz	33.0 30. 25. 21.	35.0 A**2 33.0 A**2 30.0 A 25.6 A 21.8 A 18.0 A	46. 46. 38. 33.	46.0 A 46.0 A 38.6 A 33.4 A 28.2 A 0 A 0 A 0 A 0 A 4 A 2 A	55.0 50 42 37	59.0 A**2 55.0 A**2 50.0 A 42.6 A 37.0 A 31.0 A 0 A**2 0 A**2 0 A**2 0 A A**2 0 A A**2 0 A A**2 0 A A A A A A A A A A A A A A A A A A A
Power loss	≅ 120 W	≅ 160 W		≅ 270 W	≅ 70 W	≘ 110 W
Current consumption**4 15 V 24 V	150 mA 170 mA		170	mA mA	120) mA) mA
Degree of protection			IP	20		_
Weight		lb. 5 kg.)		lb. kg.)		2 lb. 5 kg.)

^{**1} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**2} As of mid-2005 (depending on software. Information available from ANILAM.

^{**3} Axes: 0.2s cyclic duration factor for duration of 5 s with rated current preload; 0.2 s at standstill for synchronous motors

Spindle: 10 s cyclic duration factor for duration of 60 s with 70% rated current preload

^{**4} After making your selection, check the current consumption of the 15 V and 24 V supply of the entire modular amplifier system.



Table 2-8, Power Module Technical Specifications (Continued)

Specifications	PM ²	132A	PMC	140	PM	148A
	Axis	Spindle	Axis	Spindle	Axis	Spindle
ANILAM P/N	34000323		638666-0	1	34000324	4
Rated current at a PWM						
frequency of:						
3333 Hz	39.0 A	61.0 A	47.0 A	67.0 A	58.6 A	91.5 A
4000 Hz	36.2 A	56.5 A	44.0 A	62.0 A	54.4 A	85.0 A
5000 Hz	32.0 A	50.0 A	40.0 A	56.0 A	48.0 A	75.0 A
6666 Hz	26.9 A	42.0 A	33.5 A	47.0 A	40.3 A	63.0 A
8000 Hz	23.0 A	36.0 A	29.5 A	41.0 A	34.6 A	54.0 A
10000 Hz	19.5 A	30.5 A	24.5 A	34.0 A	29.4 A	46.0 A
Current at S6-40%**1 at a						
PWM frequency of:				**2		
3333 Hz		64.0 A		88.0 A**2		140.0 A
4000 Hz		64.0 A		82.0 A** ²		140.0 A
5000 Hz		64.0 A		75.0 A		140.0 A
6666 Hz		53.8 A		63.0 A		117.6 A
8000 Hz		46.0 A		55.0 A		100.8 A
10000 Hz		39.0 A		46.0 A		85.4 A
Maximum current**3 at a						
PWM frequency of:			***			
3333 Hz		0 A	94.0 A**2		140.0 A	
4000 Hz		0 A	88.0 A** ²		140.0 A	
5000 Hz		0 A	80.0 A		140.0 A	
6666 Hz		8 A	67.0 A		117.6 A	
8000 Hz		0 A	59.0 A		100.8 A	
10000 Hz	39.	0 A	49.0 A		85.4 A	
Power loss	≅ 280 W	≅ 420 W	≅ 180 W	≅ 270 W	≅ 420 W	≅ 650 W
Current consumption**4	1					
15 V	170 mA		170 mA		250) mA
24 V	250 mA		170 mA		420 mA	
Degree of protection	IP 20					
Weight		20	lb.		26.	5 lb.
		(≅ 9	kg.)		(≅ 12	.0 kg.)
		<u>'- c</u>	J-7		\- ·-	- ''/

^{**1} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**2} As of mid-2005 (depending on software. Information available from ANILAM.

^{**3} Axes: 0.2s cyclic duration factor for duration of 5 s with rated current preload; 0.2 s at standstill for synchronous motors

Spindle: 10 s cyclic duration factor for duration of 60 s with 70% rated current preload

^{**4} After making your selection, check the current consumption of the 15 V and 24 V supply of the entire modular amplifier system.



Table 2-8, Power Module Technical Specifications (Continued)

Specifications	PM	D 160	PM 1	170A	PM	PMD 196	
	Axis	Spindle	Axis	Spindle	Axis	Spindle	
ANILAM P/N	6386	667-01	34000325		34000325		
Rated current at a PWM frequency of:							
3333 Hz 4000 Hz 5000 Hz 6666 Hz 8000 Hz	70.0 A 66.0 A 60.0 A 55.0 A 44.0 A	108.0 A 99.0 A 90.0 A 76.5 A 66.0 A	85.4 A 79.1 A 70.0 A 58.5 A 50.4 A	122.0 A 113.0 A 100.0 A 84.0 A 72.0 A	115.0 A 106.0 A 96.0 A 80.0 A 70.0 A	150.0 A 138.0 A 125.0 A 105.0 A 92.0 A	
10000 Hz	37.0 A	55.0 A	42.7 A	61.0 A	59.0 A	76.0 A	
Current at S6-40%**1 at a PWM frequency of: 3333 Hz 4000 Hz 5000 Hz		125.0 A** ² 116.0 A** ² 105.0 A		140.0 A 140.0 A 140.0 A		180.0 A** ² 165.0 A** ² 150.0 A	
6666 Hz 8000 Hz 10000 Hz		88.0 A 77.0 A 64.0 A		117.6 A 100.8 A 85.4 A		126.0 A 126.0 A 110.0 A 92.0 A	
Maximum current**3 at a PWM frequency of: 3333 Hz	140.0 A***2		140.0 A		230.0 A** ²		
4000 Hz 5000 Hz 6666 Hz 8000 Hz	132.0 A ² 120.0 A 101.6 A		140.0 A 140.0 A 117.6 A 100.8 A		211.0 A**2 192.0 A 161.0 A 141.0 A		
10000 Hz	88.0 A 73.0 A		85.4 A		117.0 A		
Power loss	≅ 420 W	≅ 650 W	≅ 610 W	≅ 870 W	≅ 610 W	≅ 870 W	
Current consumption**4 15 V 24 V	250 mA 420 mA				0 mA 0 mA		
Degree of protection			IP 20				
Weight		26.5 lb. (≅ 12.0 kg.)		41.9 lb. (≅ 19.0 kg.)			

^{**1} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**2} As of mid-2005 (depending on software. Information available from ANILAM.

^{**3} Axes: 0.2s cyclic duration factor for duration of 5 s with rated current preload; 0.2 s at standstill for synchronous motors

Spindle: 10 s cyclic duration factor for duration of 60 s with 70% rated current preload
**4 After making your selection, check the current consumption of the 15 V and 24 V supply

of the entire modular amplifier system.



Table 2-8, Power Module Technical Specifications (Continued)

Specifications	PM 207	PMD 207	PM 2	15A**1
	Axis	Axes	Axis	Axis
ANILAM P/N	34000327	628663-01	34000328	
Rated current at a PWM				
frequency of:				
3333 Hz	9.0 A	9.0 A	18.40 A	24.5 A
4000 Hz	8.3 A	8.3 A	16.9 A	22.5 A
5000 Hz	7.5 A	7.5 A	15.0 A	20.0 A
6666 Hz	6.4 A	6.4 A	12.8 A	17.0 A
8000 Hz	5.3 A	5.3 A	10.9 A	14.5 A
10000 Hz	4.5 A	4.5 A	9.0 A	12.0 A
Current at S6-40%**2 at a				
PWM frequency of:				
3333 Hz				30.0 A
4000 Hz				30.0 A
5000 Hz				30.0 A
6666 Hz				25.6 A
8000 Hz				21.8 A
10000 Hz				18.0 A
Maximum current**4 at a				
PWM frequency of:		**3		
3333 Hz	15.0 A	18.0 A**3	30.0 A	
4000 Hz	15.0 A	16.6 A** ³	30.0 A 30.0 A	
5000 Hz	15.0 A	15.0 A		
6666 Hz	12.8 A	12.8 A		.6 A
8000 Hz	10.6 A	10.6 A		.8 A
10000 Hz	9.0 A	9.0 A 9.0 A		.0 A
Power loss	≅ 140 W		2 axes: ≅ 240	W
			1 axis, 1 spind	lle: ≅ 280 W
Current consumption**5				
15 V	200 mA		250) mA
24 V	11	0 mA	170) mA
Degree of protection	IP 20			
Weight	12 lb.			
- 3	(≅ 5.5 kg.)			

^{**1} For this power module only, the lower PWM connection can be used to control the spindle

^{**2} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**3} As of mid-2005 (depending on software. Information available from ANILAM.

^{**4} Axes: 0.2 s cyclic duration factor for duration of 5 s with rated current preload; 0.2 s at standstill for synchronous motors

Spindle: 10 s cyclic duration factor for duration of 60 s with 70% rated current preload

^{**5} After making your selection, check the current consumption of the 15 V and 24 V supply of the entire modular amplifier system.



Table 2-8, Power Module Technical Specifications (Continued)

Specifications	PMD	215**1	PM 2	23A ^{**1}	PME) 225 ^{**1}
	Axis	Spindle	Axis	Spindle	Axis	Spindle
ANILAM P/N	628671-1	0	34000329)	638672-0	1
Rated current at a PWM frequency of:						
3333 Hz 4000 Hz 5000 Hz 6666 Hz 8000 Hz 10000 Hz	17.5 A 16.5 A 15.0 A 12.8 A 10.9 A 9.0 A	24.5 A 22.5 A 20.0 A 17.0 A 14.5 A 12.0 A	28.2 A 26.0 A 23.0 A 19.3 A 16.7 A 14.1 A	38.0 A 35.0 A 31.0 A 26.0 A 22.5 A 19.0 A	29.5 A 27.7 A 25.0 A 21.0 A 18.5 A 15.5 A	40.0 A 37.0 A 34.0 A 28.5 A 25.0 A 21.0 A
Current at S6-40%**2 at a PWM frequency of: 3333 Hz 4000 Hz 5000 Hz 6666 Hz 8000 Hz 10000 Hz		35.0 A**3 33.0 A**3 30.0 A 25.6 A 21.8 A 18.0 A		46.0 A 46.0 A 46.0 A 38.6 A 33.4 A 28.2 A		59.0 A**3 55.0 A**3 50.0 A 42.0 A 37.0 A 31.0 A
Maximum current**4 at a PWM frequency of: 3333 Hz 4000 Hz 5000 Hz 6666 Hz 8000 Hz 10000 Hz	33.0 30 25 21	0 A** ³ 0 A** ³ 0 A** ³ 0 A 0 A 0 A 0 A	46. 46. 38. 33.	0 A 0 A 0 A 6 A 4 A 2 A	55. 50 42 37	.0 A** ³ .0 A** ³).0 A 2.0 A 7.0 A 1.0 A
Power loss	2 axes: ≅ 240 W 1 axis, 1 spindle: ≅ 280 W		2 axes: ≅ 360 W 1 axis, 1 spindle: ≅ 450 W		2 axes: ≅ 1 axis, 1 s ≅ 490 W	
Current consumption**5 15 V 24 V	250 mA 170 mA			mA mA		0 mA 0 mA
Degree of protection			IP 20		1	
Weight		? lb. 5 kg.)	20 lb. (≅ 9 kg.)		12 lb. (≅ 5.5 kg.)	

^{**1} For this power module only, the lower PWM connection can be used to control the spindle

^{**2} For spindle motors: 40% cyclic duration factor for duration of 10 minutes (S6-40%)

^{**3} As of mid-2005 (depending on software. Information available from ANILAM.

^{**4} Axes: 0.2 s cyclic duration factor for duration of 5 s with rated current preload; 0.2 s at standstill for synchronous motors

Spindle: 10 s cyclic duration factor for duration of 60 s with 70% rated current preload

^{**5} After making your selection, check the current consumption of the 15 V and 24 V supply of the entire modular amplifier system.



Current Consumption of the Entire Inverter System

The current consumption by the power modules from the 15 V and 24 V supply unit strongly depends on their performance. If several high-performance power modules are used, the maximum permissible current for the supply unit can be exceeded. Therefore, the current consumption must be controlled separately for the 15 V and 24 V supply units. The intrinsic needs of the supply unit must also be taken into account. The current consumption of the individual components is listed in the specifications table.

The following limit values apply (refer to **Table 2-9**):

Table 2-9, Current Limit Values

Power Supply Units	15 V Power Supply	24 V Power Supply
PS 130	Maximum: 1.5 A	Maximum: 2.0 A
PS 122R, PS 145R	Maximum: 3.5 A	Maximum: 4.0 A

If the total current consumption exceeds **one** limit value, contact ANILAM.

Example:

Device	15 V Power Supply	24 V Power Supply
PS 145R	0.38 A	0.31 A
PMD 160	0.25 A	0.42 A
PMD 215	0.25 A	0.17 A
PMD 207	0.20 A	0.11 A
PMD 107	0.12 A	0.06 A
Total	1.20 A	1.07 A

All rights reserved. Subject to change without notice. 25-January-08



Ribbon Cables and Covers

50-Line Ribbon Cable (Power Supply to CNC Chassis)

The 50-line ribbon cable connects the PS 1xx with the CNC Chassis and serves as voltage supply. This cable is only required once. Refer the **Table 2-10**.

Table 2-10, 50-Line Ribbon Cable P/N List

Ribbon Cable Length	P/N
300 mm (≅18.81 inches)	34000260
400 mm (≅15.74 inches)	34000280
500 mm (≅19.69 inches)	34000281
600 mm ^{**1} (≅23.62 inches)	34000282

^{**1} With lengths of 600 mm (23.62 inches) and longer, the ribbon cable is led doubled to the CNC Chassis to increase the line cross section.

To select the 50-line ribbon cable length:

- Add the widths of all modules (including BR 9) between PS 1xx and CNC Chassis.
- PS 130: Add 130 mm to the width and select the next-longer cable length from **Table 2-10**.

Select the next-longer cable length, unless there is an exact match.

20-Line Ribbon Cable (PWM Signals)

The 20-line ribbon cable connects the PWM outputs of the CNC Chassis with the corresponding PM 1xx power modules. One 20-line ribbon cable is required for each axis or spindle. If you are using an additional PMD 107 power module, you will need an additional 20-line ribbon cable: PWM connection on the PMD 107 power module: X111, X112, length of 20-line ribbon cable: 100 mm, P/N 34000263. Refer the **Table 2-11**.

Table 2-11, 20-Line Ribbon Cable P/N List

Ribbon Cable Length	P/N
100 mm (≅3.94 inches)	34000263
200 mm (≅7.87 inches)	34000261
300 mm (≅18.81 inches)	34000262
400 mm (≅15.74 inches)	34000270
500 mm (≅19.69 inches)	34000271
600 mm (≅23.62 inches)	34000272



To select the 20-line ribbon cable length:

- 1. See **Table 2-12** for distance *a* (See **Figure 2-1**) of the PWM input on the power module.
- 2. Add the widths *b* of all modules (including BR 9 and PS 120A) between the corresponding power module and the CNC Chassis.
- 3. Select the next-length cable length, unless there is an exact match.

Table 2-12, 20-Line Ribbon Cable Distance Guide

Power Module	Distance a	Module Width b
PM 107, PM 207	Approximately 40 mm	50 mm
PM 115A, PM 215A	Approximately 85 mm	100 mm
PM 123A, PM 132A, PM 148A, PM 223A	Approximately 90 mm	100 mm
PM 170A	Approximately 140 mm	150 mm

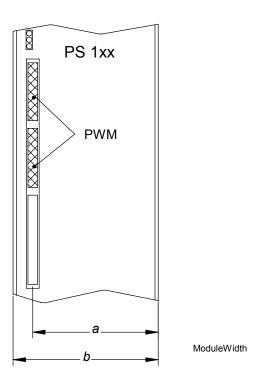


Figure 2-1, Module Width Measures



40-Line Ribbon Cable (Unit Bus)

The 40-line ribbon cable connects the PS 1xx power supplies with all of the PM 1xx, PM 2xx, PMD 1xx, and PMD 2xx power modules (and the PR 9 braking resistor module, if present), making the unit bus. This cable is only required once. The 40-line ribbon cable serves as the unit bus. It is required if an additional PMD 107 power module is being operated with the compact inverter. Unit bus connection: X79, length of the 40-line ribbon cable: 50 mm (\cong 1.97 inches), P/N 34000264. Refer to **Table 2-13**.

Table 2-13, 40-Line Ribbon Cable (Unit Bus) P/N List

Ribbon Cable Length	P/N
300 mm (≅18.81 inches)	34000275
400 mm (≅15.74 inches)	34000276
500 mm (≅19.69 inches)	34000277

To select the 40-line ribbon cable length:

- Add the widths of all modules (including BR 9) between:
 - PS 1xx and CNC Chassis
 - PS 1xx and PS 120A
- PS 130: Add 80 mm to the width and select the next-longer cable length from **Table 2-13**.

Select the next-longer cable length, unless there is an exact match.



Ribbon Cable Covers

The ribbon cables must be covered to protect against interference.

The cover for the CNC Chassis is supplied with the CNC Chassis.

If further power modules and the BR 9 braking resistor module are used, the corresponding covers must be ordered separately. Refer to **Table 2-14**.

Table 2-14, Ribbon Cable Covers P/N List

Width of the Cover	P/N
50 mm (≅1.97 inches)	34000265
100 mm (≅3.84 inches)	34000266
150 mm (≅5.90inches)	34000267
200 mm (≅7.87 inches)	34000268

To select the ribbon cable covers:

- 1. Add the widths of all modules (including BR 9) between:
 - PS 1xx and CNC Chassis.
 - PS 130 and PS 120A
- 2. Subtract 150 mm from this total (cover included with the PS 1xx)
- 3. Select the appropriate cover from the table in order to cover the remaining width.



Axis-Enabling Module

If no axis-enabling module is used, all axis power modules are switched off simultaneously via X72 of the PS 1xx power supply. The axis-enabling module makes it possible to switch off power modules group by group. Refer to **Figure 2-2**.

The module—instead of mounting pins for the covers—is screwed into the front panel of a power module.

The axis-enabling signal is transmitted via a line in the unit bus from power module to power module. This line is interrupted through the axis-enabling module so that all the power modules connected to the axis-enabling module are switched off. All other power modules are switched off via X72 of the PS 1xx.

Enable axis group 1 Spindle enable X72 PM 1xx, PM 2xx(SPINDLE) PM 1xx, PM 2xx (group 1) PM 1xx, PM 2xx (group 2) Enable axis group 2 AxisEnable

Axis-Enabling Module, P/N 34000385

Figure 2-2, Axis-Enabling Module

The unit bus requires a 40-line ribbon cable with connects the PS 1xx power supply unit, the axis-enabling module, and the power module to switch off via PS 1xx.

A further 40-line ribbon cable connects the axis-enabling module with the power modules, which are to be switched off via the axis-enabling module.

The width of the covers required for the ribbon cables for the modular amplifier system is reduced by the width of the axis-enabling module (50 mm). Suitable covers are included with the modular amplifier system.



Accessories for Inverters and Modular Amplifiers

The following topics are described:

- Braking Resistors
- Line Filters
- □ CC 3P Three-Phase Capacitor
- □ <u>CR 1xx Commutating Reactor</u>
- □ DLF 1x0 DC-Link Filter
- □ VPM 163 Voltage Protection Module
- Adapter Module

Braking Resistors

During braking, the braking resistors convert the energy fed back to the DC-link into heat. The BR 10F and BR 18F have a cooling fan; the BR 18 cools through heat radiation only.

Either one BR 18, BR 10F or BR 18F, or two BR 18s in parallel can be connected to a SA series compact inverter and a PM 107 power module.

For PS 122R and PS 145R in the energy-recovery inverter, the braking energy of the motors is normally returned to the line power. If in an exceptional case the line power is interrupted, the braking energy cannot be returned. This can lead to an excessive DC-link voltage that might switch off the inverter and let the motors coast without control. To prevent damage to the machine and workpiece resulting from uncontrolled machine movement, the axis motors must be equipped with brakes, or the energy must be dissipated with the BR 9 braking resistor module.

For PS 130, the BR 10F braking resistor is used.

BR 18 Braking Resistor

For BR 18, refer to Table 2-15.

Table 2-15, BR 18 Braking Resistor Technical Specifications

Specifications	BR 18
ANILAM P/N	34000450
Continuous Power	2 kW (4 kW)**1
Peak Power**2	27 kW (54 kW)**1
Resistance	18 Ω (9 Ω)
Degree of protection	IP 20
Weight	12.1 lb. (5.5 kg.)

^{**1} When two BR 18 units are connected in parallel

^{**2 1.5 %} cyclic duration factor for duration of 120 s



BR 10F and BR 18F Braking Resistor

For BR 10F and BR 18F, refer to Table 2-16.

Table 2-16, BR 10F and BR 18F Braking Resistor Technical Specifications

Specifications	BR 18F	BR 10F
ANILAM P/N	34000451	34000452
Continuous Power	2 kW	4 kW
Peak Power**1	27 kW	49 kW
Power Consumption by the Fan	2.5 W	2.4 W
Resistance	18 Ω	10 Ω
Degree of protection	IP 20	IP 20
Weight	13.2 lb. (6 kg.)	50.6 lb. (11 kg.)

*1 BR 18F: 1.5 % cyclic duration factor for duration of 120 s BR 10F: 2 % cyclic duration factor for duration of 120 s

WARNING: The surface of the braking resistor can exceed temperatures of up to greater than 150 °C (302 °F).

NOTE: The lines between the compact inverter/power supply unit and the braking resistor may have a length of 49.2 ft. (15 m.)

BR 9 Braking Resistor

In the energy-recovery inverter, the braking energy of the motors is normally returned to the line power. If in an exceptional case the line power is interrupted, the braking energy cannot be returned. This can lead to an excessive DC-link voltage that might switch off the inverter and let the motors coast without control. To prevent damage to the machine and workpiece resulting from uncontrolled machine movement, the energy must be dissipated with the BR 9 braking resistor module.

In specific cases, it may be sufficient that the motor is equipped with a brake or it may be considered uncritical that the axes or spindle coast to a stop (for example, spindle coasting to a stop when the protective doors are closed). However, it must be considered for each individual application whether this is sufficient. Refer to **Table 2-17**.

Table 2-17, BR 9 Braking Resistor Technical Specifications

Specifications	BR 9
ANILAM P/N	34000453
Power	60 kW (for 2 s)
Resistance	9 Ω
Degree of protection	IP 20
Weight	15.5 lb (7 kg.)



Line Filters

If you are using regenerative inverter systems, you must use a line filter in addition to the commutating reactor. Line filters suppress interference and ensure EMC-compatible energy recovery. The line filter must be connected between the power line and the commutating reactor.

The size of the line filter depends on the power module used. Refer to **Table 2-18**.

Table 2-18, Line Filter Technical Specifications

Parameter	LF 135A	LF 180A	
ANILAM P/N	34000359	34000358	
Suitable for:	PS 122R	PS 145R	
Rated Voltage	3 phase x 400 V		
Rated Frequency	50 Hz/60 Hz		
Rated Current	3 phase x 35 A 3 phase x 80 A		
Power Loss	Approximately 50 W Approximately 75 W		
Degree of protection	IP 20		
Weight	11 lb. (5 kg.)	24.25 lb. (11 kg.)	

CC 3P - Three-Phase Capacitor

If you are using regenerative inverter systems, we basically recommend that you use a three-phase capacitor. The three-phase capacitor suppresses low-frequency interference during energy recovery to the power line. It must be connected between the line filter and commutating reactor.

Refer to Table 2-19.

Table 2-19, CC 3P, Three-phase Capacitor, Specifications

Specifications	CC 3P
ANILAM P/N	34000386
Phase-to-phase voltage	525
Capacity	3 phase x 24.1 μF
Charging and discharging resistors)**1	3 phase x 630 kΩ
Discharge period (5 time constant)	75 s
Degree of protection	IP 00
Weight	2.86 lb. (Approximately 1.3 kg)

^{**1} Included in items supplied



CR 1xx – Commutating Reactor

The PS 122R and PS 145R power recovery modules must be connected to the main power line via the CR 1xx commutating reactor and the line filter. The commutating reactor serves as a power storage device for the step-up converter.

The size of the commutating reactor depends on the power module used. Refer to **Table 2-20**.

Table 2-20, CR 1xx – Commutating Reactor Technical Specifications

Specifications	CR 135	CR 170	CR 180
ANILAM P/N	34000355	34000356	34000357
Rated voltage	3 phase x 400 V		
Rated frequency	50 Hz/60 Hz		
Thermally permissible continuous current	3 phase x 35 A	3 phase x 70 A	3 phase x 80 A
Rated current	3 phase x 31.5 A	3 phase x 63 A	3 phase x 72 A
Power loss	≅ 200 W	≅ 340 W	≅ 350 W
Degree of protection	IP 00		
Weight	24.25 lb. (≅11 kg.)	48.5 lb (≅ 22 kg.)	51 lb (≅ 23 kg.)



DLF 1x0 - DC-Link Filter

Direct drives (linear motors, torque motors) used with regenerative inverter systems result in voltage peaks, which might destroy the drive. If you are using direct drives in conjunction with the regenerative PS 122R, PS 145R power supply and RA 201A, RA 301C, RA 411C compact inverters (amplifiers), you must therefore use DLF 1x0 DC-link filter.

Refer to Table 2-21.

Table 2-21, DLF 1x0 - DC-Link Filter Technical Specifications

Specifications	DLF 110	DLF 120	DLF 130
ANILAM P/N	647528-01	647530-01	647531-01
Rated power	30 kW	30 kW	55 kW
Peak power	47 kW**1	47 kW**1	80 kW**1
	67 kW**2	67 kW**2	100 kW**2
	110 kW** ³	110 kW** ³	110 kW** ³
Maximum leakage current	<1.3 A	<6.0 A	<6.0 A
Current consumption**4			
24 V	_	_	440 mA
Degree of protection	IP 20	IP 20	IP 20
Weight	22.04 lb. (≅10 kg.)	26.45 lb (≅ 12 kg.)	28.66 lb (≅ 13 kg.)

^{**1 40%} cyclic duration factor for duration of 10 minutes (S6-40%)

^{**4} After making your selection, check the current consumption of the 15 V and 24 V supply of the entire modular inverter system. See "Current Consumption of the Entire Inverter System."

WARNING:	
	maximum leakage current. If you are using the DLF
	110, an ANILAM technician must check on site whether
	the leakage current is less than 1.3 A. If you are using
	the DLF 120, this verification is not required because a
	leakage current of 6 A is sufficient in any case.

WARNING: The total power of the direct drives must not exceed the power of the filter.

^{**2 20%} cyclic duration factor for duration of 10 minutes (S6-20%)

^{**3} Pmax absolute



VPM 163 - Voltage Protection Module

When operating synchronous motors or direct drives in a field weakening range (for example, as spindle drives) in conjunction with regenerative inverters, the voltage can increase at the motor power connections if the power supply is interrupted (for example, power failure). This increased voltage can damage the inverters and the motor. The voltage protection module is installed between the motor and the inverters, and in case of an error, it short-circuits the motor phases. The released braking energy is converted into heat.

The present phase of a motor Imot can be determined using the following formula and must be less than the maximum phase current of the VPM 163, Voltage Protection Module:

$$I_{Mot} = \frac{U0}{\sqrt{3} \cdot XH} < 63 A$$

U0: No-load voltage [V], see motor table of the control

XH: Magnetizing reactance (Ω) , see motor table of the control

WARNING: The maximum cable length between the VPM 163 and the inverter is 2 m. (6.56 ft.)

Refer to Table 2-22.

Table 2-22, VPM 163 - Voltage Protection Module Specifications

Specifications	VPM 363
ANILAM P/N	34000387
Switching voltage	850 V
Maximum phase current	3 phase x 63 A
Maximum braking time at maximum phase current	10 s
Minimum duration between braking procedures	5 min
Degree of protection	IP 20
Weight	4.6 lb (≅ 2.1 kg.)



Adapter Module

In modular regenerative inverter systems an additional power supply unit may be come necessary if you are using inverter or motors with a high power demand. The adapter module gives you the possibility of connecting this power supply unit to the present inverter system. In this way one power supply unit can, for example, supply the power to a high-performance spindle and the pother power supply unit can used for the axes.

The two power supply units are coupled via the supply bus (X69a/X69b – X69) and in this way integrated in the system monitoring.

This results in two separate supply systems whose power modules operate independently of each other, but are also monitored by the control.

Refer to Table 2-23.

Table 2-23, Adapter Module Specifications

Specifications	Adapter Module
ANILAM P/N	647528-01
Weight	≅ 6.6 lb (3 kg.)



Section 3 - Selecting Motors and Inverters

The following topics are described in this section:

- □ Selecting an Axis Motor
- Selecting a Spindle Motor
- Selecting an Inverter
- Selection of the Braking Resistor

Selecting an Axis Motor

To select the appropriate axis motor and inverter for your needs, you will need to do some calculations. Refer to <u>Table 3-1</u>, <u>Calculation Data for Selecting Axis Motors and Inverters</u>.

- Calculate the static moment from the sum of:
 - Frictional moment (with horizontal axes)
 - Moment for overcoming the force of gravity (for vertical axis)
 - Machining moment
- □ Calculate the desired speed of the motor:
- Select the motor that meets the following requirements:
 - Stall torque of the motor ≥ static moment
 - Rated speed of the motor ≥ desired speed
- □ Select the inverter that meets the following requirement:
 - Rated current of the inverter ≥ continuous stall current of the motor
- Calculate the external moment of inertia:
 - Moment of inertia of the table
 - Moment of inertia of the ballscrew
 - Moment of inertia of the gearwheel on the ballscrew
 - Moment of inertia of the gearwheel on the motor
- Calculate the total moment of inertia from the following variables:
 - External moment of inertia
 - Moment of inertia of the motor
- □ Check the ratio of external moment of inertia to the moment of inertia of the motor.
- Calculate the acceleration moment.
- □ Compare the acceleration moment with the following variables:
 - Maximum moment of the inverter
 - Maximum moment of the motor



- Calculate the effective moment at a given load cycle.
- □ Compare the effective moment at a given load cycle with the rated torque of the motor.

Table 3-1, Calculation Data for Selecting Axis Motors and Inverters

Parameter	Formula	Variables	
Frictional moment		m: Mass [kg]	
$M_{ m frict}$	$m \cdot g \cdot \mu \cdot h \cdot \cos \alpha$	g: Acceleration of gravity [m/s ²]	
	$M_{\text{frict}} = \frac{m \cdot g \cdot \mu \cdot h \cdot \cos \alpha}{2 \cdot \pi \cdot i \cdot \eta}$	μ: Coefficient of friction [-]	
	•	h: Ballscrew pitch [m]	
		α: Axis angle [°] (0°=horizontal axis)	
		i: Gear ratio [-] (n _{motor} /n _{ballscrew})	
		η: Efficiency [-]	
Moment of		m: Mass [kg]	
overcoming the	$m \cdot g \cdot h \cdot \sin \alpha$	g: Acceleration of gravity [m/s ²]	
force of gravity Mwz	$Mwz = \frac{m \cdot g \cdot h \cdot \sin \alpha}{2 \cdot \pi \cdot i \cdot \eta}$	h: Ballscrew pitch [m]	
1 V1 W 4,	·	α: Axis angle [°] (90°=vertical axis)	
		i: Gear ratio [-] (n _{motor} /n _{ballscrew})	
		η: Efficiency [-]	
Machining moment		F _{mach} : Machining force [N]	
M_{mach}	$F_{mach} \cdot h$	h: Ballscrew pitch [m]	
	$M_{mach} = rac{F_{mach} \cdot h}{2 \cdot \pi \cdot i \cdot \eta}$	i: Gear ratio [-] (n _{motor} /n _{ballscrew})	
		η: Efficiency [-]	
Static moment		M _{frict} : Frictional moment [Nm]	
M _{Stat}	MStat = M frict + M wz + M mach	M _{wz} : Moment for overcoming the force of gravity [Nm]	
		M _{mach} : Machining moment [Nm]	
Rated motor speed	$v_{\max}\cdot i$	V _{max} : Rapid traverse [m/min]	
η_{Noml}	$n_{Noml} = \frac{v_{\text{max}} \cdot i}{h}$	i: Gear ratio [-] (n _{motor} /n _{ballscrew})	
		h: Ballscrew pitch [m]	
Motor selection		M _{0Motor} : Stall torque of the motor	
	$M_{0Motor} \geq M_{Stat}$	M _{Stat} : Static moment	
	$n_{NMotor} \ge n_{Noml}$	n _{NMotor} : Rated speed of the motor	
		n _{Noml} : Desired speed of the motor	
Modular Amplifier: Selection of the power module Compact Inverter:	$I_{\mathit{NInverter}} \geq I_{\mathit{0Motor}}$	I NInverter: Rated current of the inverter I OMotor: Continuous stall current of the motor	
Selection of the axis unit			

(Continued...)



Table 3-1, Calculation Data for Selecting Axis Motors and Inverters (Continued)

Parameter	Formula	Variables
Moment of inertia of the table	$J_T = m \cdot \left(\frac{h}{2 \cdot \pi}\right)^2$	m: Table mass [kg] h: Ballscrew pitch [m]
Moment of		d _s : Diameter of the ballscrew [m]
inertia of the	$ds^4 \cdot \pi \cdot l \cdot p$	I: Length of the ballscrew [m]
ballscrew J _S	$J_S = \frac{ds^3 \cdot \pi \cdot l \cdot p}{32}$	ρ: Density of the ballscrew material [kg/m³]
Moment of inertia of the	4 4 - 1 -	d _{GS} : Diameter of the gearwheel on the ballscrew [m]
gearwheel on the ballscrew	$J_{GS} = \frac{d_{GS}^4 \cdot \pi \cdot l \cdot p}{32}$	I: Length of the gearwheel on the spindle [m]
J _{GS}		ρ: Density of the gearwheel material [kg/m³]
Moment of inertia of the	$dGu^4 \cdot \pi \cdot l \cdot n$	d _{GM} : Diameter of the gearwheel on the ballscrew [m]
gearwheel on the motor	$J_{GM} = \frac{d_{GM}^4 \cdot \pi \cdot l \cdot p}{32}$	I: Length of the gearwheel on the spindle [m]
J _{GM}		ρ: Density of the gearwheel material [kg/m³]
External moment of	$J_T + J_S + J_{GS}$	J _T : Moment of inertia of the table [kgm ²]
inertia	$J_{ext} = \frac{J_T + J_S + J_{GS}}{i^2} + J_{GM}$	J _S : Moment of inertia of the
J _{ext}		ballscrew [kgm ²] J _{GS} : Moment of inertia of the
		gearwheel on the ballscrew [kgm²]
		i: Gear ratio (n _{motor} /n _{ballscrew})
		J _{GM} : Moment of inertia of the gearwheel on the motor [kgm ²]
Total moment of		J_{T} : Moment of inertia of the table [kgm ²]
inertia of the machine slide with motor	$J_{total} = \frac{J_T + J_S + J_{GS}}{i^2} + J_{GM} + J_M$	J_s: Moment of inertia of the ballscrew [kgm ²]
J _{total}		J _{GS} : Moment of inertia of the gearwheel on the ballscrew [kgm²]
		i: Gear ratio (n _{motor} /n _{ballscrew})
		J _{GM} : Moment of inertia of the gearwheel on the motor [kgm²]
		J_M: Moment of inertia of the motor [kgm ²]

(Continued...)



Table 3-1, Calculation Data for Selecting Axis Motors and Inverters (Continued)

Parameter	Formula	Variables
Ratio of external moment of inertia to the moment of inertia of the motor	$0.5 \le \frac{J_F}{J_M} \le 2$	 J_F: External moment of inertia [kgm²] J_M: Moment of inertia of the motor [kgm²] This ratio ensures a stable control response.
Acceleration moment Macci	$M_{acc} = \frac{J_{total} \cdot 2 \cdot \pi \cdot n_{M}}{60 \cdot \eta \cdot t_{acc}}$	J total: Total moment of inertia [kgm²] n _M : Desired speed of the motor [min⁻¹] η: Efficiency of the motor [-] t _{acc} : Desired acceleration time [s]
	\mathbf{M}_{Mmax} from data sheet, or: $\mathbf{M}_{\text{M max}} = 3 \cdot \mathbf{M}_0$	M₀: Stall torque of the motor [Nm]
$\begin{array}{c} \text{Maximum moment} \\ \text{of the inverter} \\ M_{\text{Umax}} \end{array}$	$M_{ m Umax} = rac{M_{M~max}}{I_{M~max}} \cdot I_{U~max}$ - or - $M_{ m Umax} = 0.8 \cdot rac{M_{MN}}{I_{MN}} \cdot I_{U~max}$	 M_{Mmax}: Maximum moment of the motors [Nm] I_{Mmax}: Maximum current of the motor [A] I_{Umax}: Maximum current of the inverter [A] M_{MN}: Rated torque of the motor [Nm] I_{MN}: Rated current of the motor [A]
Comparison of the acceleration moment with the maximum moment of the motor and inverter	M _{Mmax} > M _{acc} M _{Umax} > M _{acc}	 M_{Mmax}: Maximum moment of the motors [Nm] M_{acc}: Acceleration moment [Nm] M_{Umax}: Maximum moment of the inverter [Nm]
Weighting factors	$K_{mach} = \frac{t_{mach}}{t_{total}}$ $K_{pos} = \frac{t_{pos}}{t_{total}}$ $K_{acc} = \frac{t_{acc}}{t_{total}}$ $\textbf{NOTE:}$ $K_{mach} + K_{pos} + K_{acc} = 1$	 t_{mach}: Machining time t_{total}: Total running time t_{Pos}: Time for positioning operations t_{acc}: Time for acceleration All times must be given in the same unit of measure.

(Continued...)



Table 3-1, Calculation Data for Selecting Axis Motors and Inverters (Continued)

Parameter	Formula		Variables	
Effective moment at	MStat:	: Static moment [Nm]		
a given load cycle	Kmach:	Weighting factor for ma	chining operations [-]	
	Mfrict:	Frictional moment [Nm]		
	Mwz:	Moment for overcoming	the force of gravity [Nm]	
	KPos:	Weighting factor for pos	sitioning operations [-]	
	Macc:	Acceleration moment [Nm]		
	Kacc:	Weighting factor for acceleration operations [-]		
$M_{eff} = \sqrt{(M_{Stat})^2 \cdot Km}$	$M_{eff} = \sqrt{\left(M_{Stat}\right)^2 \cdot K_{mach} + \left(M_{frict} + M_{wz}\right)^2 \cdot K_{pos} + \left(M_{frict} + M_{wz} + M_{acc}\right)^2 \cdot K_{acc}}$			
Comparison of the	M _{MN} : Rated torque of the motor		M _{MN} : Rated torque of the motor (Nm)	
effective moment at a given load cycle with the rated motor torque.	M	M _{MN} ≥M _{eff}	M _{eff} : Effective moment at a given load cycle (Nm)	



Selecting a Spindle Motor

Select a spindle motor based on torque and speed requirements.

Selecting an Inverter

Modular Amplifier

The power modules were already selected together with the axis motors. The power supply unit must still be selected.

- Calculation of the DC-link power
- Selecting the power supply unit

Compact Inverter

The number of axes required and the current requirements determine which inverter is appropriate. It has not yet been determined whether the DC-link power of the compact inverter is sufficient. Refer to **Table 3-2**.

Table 3-2, Calculation Data for Selecting Inverters

Parameter	Formula	Variable	
DC-link power	D V	PNScr:	Power rating of the spindle motor [W]
FBC	$P_{DC} = \frac{P_{NScr}}{\eta_{Scr}} + \frac{\Sigma_{PNAx}}{\eta_{Ax}} \cdot F_{Mratio}$	η _{Scr} :	Efficiency of the spindle motor [-]
			Sum of the power ratings of the feed motors [W]
		η _{Ax} :	Efficiency of the feed motors [-], unless indicated otherwise η_{Ax} =1
		FMratio:	Ratio of mean power to rated power of the feed motors.
Selection of power		PDC:	DC-link power [W]
supply unit or examination of the compact inverter	$P_{DC} \le P_{NU}$	P _{NU} :	Rated power of the power supply unit or the compact inverter [W]



Selection of the Braking Resistor

The following topics are described:

- Introduction
- Mean Value of Braking Performance Example
- BR 18 Braking Resistor Example
- □ BR 10F Braking Resistor Example
- □ BR 18 F Braking Resistor Example

Introduction

To select the appropriate braking resistor for your system, you will need to do some calculations. Refer to <u>Table 3-3</u>, <u>Calculation Data for Selecting Braking Resistor</u>.

- Calculation of braking power
- Calculation of braking power with a specified alternation of load
- Calculation of braking energy
- Selection of the braking resistor according to:
 - Peak performance of the braking resistor
 - Reliable mean value of the braking power
 - · Maximum braking energy of the braking resistor



Table 3-3, Calculation Data for Selecting Braking Resistor

Parameter	Formula	Variable
Braking power P _{Br}	$P_{Br} = \frac{2 * \pi * M_{Br} * n_{\text{max}}}{60}$	 M_{Br}: Braking moment [N_M] n_{max}: Maximum speed at which braking occurs [rpm]
Braking energy E _{Br}	$E_{Br} = 2 * J * \pi^{2} * \left[\left(\frac{n_{2}}{60} \right)^{2} - \left(\frac{n_{1}}{60} \right)^{2} \right]$	J: Moment of inertia, including the motor [kgm²] n₂: Desired speed of the brakes [rpm] n₁: Desired speed after braking [rpm]
Mean value of the braking power with a specified alternation of load P _M	$P_M = P_{Br} * \frac{t_1}{T}$	P _{Br} : Braking power [W] t ₁ : Load time [s] T: Cycle duration [s]
Selection of braking resistor	$P_{BR} \le P_{\max}$ $P_{M} \le P_{Mzul}$ $E_{Br} \le E_{\max}$	 P_{BR}: Braking power [W] P_{max}: Peak performance of the braking resistor [W] P_{Mzul}: Permissible mean value of the braking performance according to the diagram as a function of E_{Br} [W] (see example on page 3-11) E_{max}: Maximum braking energy of the braking resistor [W_S]



Mean Value of Braking Performance Example

See **Figure 3-1**, for an illustration of a braking system with load time t_1 and cycle duration T .

 $\ensuremath{P_{M}}$ is the mean value of the braking performance in this load alternation.

Since E = P * t, the enclosed areas must be of equal size:

$$P_M = P_{\text{max}} * \frac{t_1}{T}$$

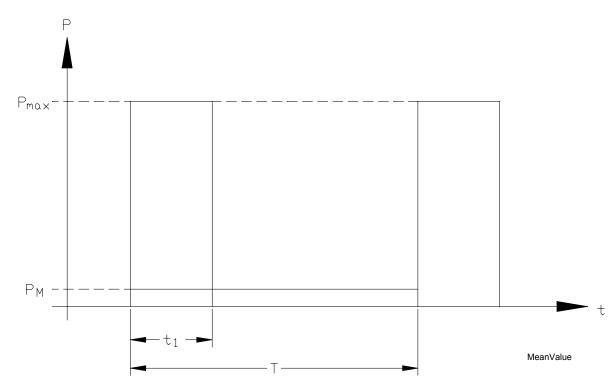


Figure 3-1, Mean Value of Braking Performance Example



BR 18 Braking Resistor Example

Permissible mean value of the braking performance P_{Mzul} as a function of the braking energy E. Refer to **Table 3-4** and **Figure 3-2**.

Table 3-4, BR 18 - Data for Mean Value Braking Performance

t ₁	Т	Pmax	Emax
0.37 s	5 s	27 kW	10 kWs
0.7 s	10 s	27 kW	18.9 kWs
1.1 s	20 s	27 kW	29.7 kWs
1.5 s	50 s	27 kW	40.5 kWs
2.4 s	120 s	27 kW	65 kWs

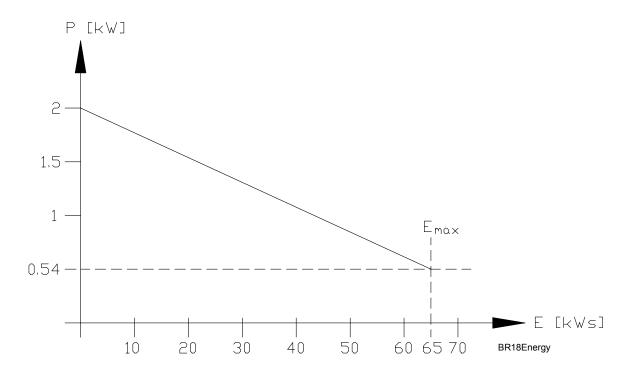


Figure 3-2, BR 18 - Braking Performance Function of Braking Energy



BR 10F Braking Resistor Example

Permissible mean value of the braking performance P_{Mzul} as a function of the braking energy E. Refer to **Table 3-5** and **Figure 3-3**.

Table 3-5, BR 10F - Data for Mean Value Braking Performance

t ₁	Т	P _{max}	E _{max}
0.37 s	5 s	27 kW	10 kWs
0.6 s	10 s	27 kW	16.2 kWs
0.9 s	20 s	27 kW	24.3 kWs
1.3 s	50 s	27 kW	35.1 kWs
1.8 s	120 s	27 kW	50 kWs

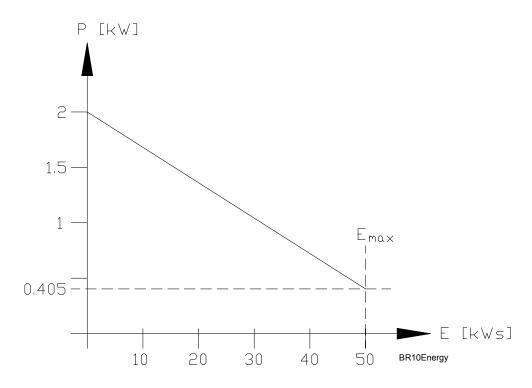


Figure 3-3, BR 10F - Braking Performance Function of Braking Energy



BR 18F Braking Resistor Example

Permissible mean value of the braking performance P_{Mzul} as a function of the braking energy E. Refer to **Table 3-6** and **Figure 3-4**.

Table 3-6, BR 18F - Data for Mean Value Braking Performance

t ₁	Т	P _{max}	E _{max}
0.37 s	5 s	49 kW	18 kWs
0.7 s	10 s	49 kW	34.3 kWs
1.1 s	20 s	49 kW	53.9 kWs
1.5 s	50 s	49 kW	73.5 kWs
2.4 s	120 s	49 kW	120 kWs

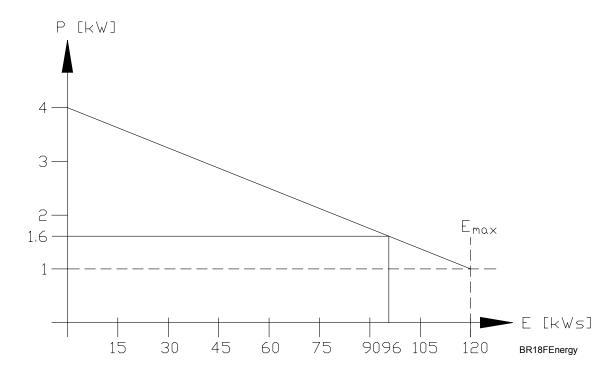


Figure 3-4, BR 18F - Braking Performance Function of Braking Energy

Example:

With the calculated braking energy E_{Br} = 96 kWs, the permissible mean value of the braking performance P_{Mzul} = 1.6 kW, meaning $P_{M} \le$ 1.6 kW.



Section 4 - Mounting and Operating Conditions

The following topics are described in this section:

- □ General Information
- Electromagnetic Compatibility
- Leakage Current from the Inverter Housing to the Grounding Connection
- Environmental Conditions
- Installation Guidelines
- Connection Overviews

General Information

The following topics are described:

- □ Trained Personnel
- Meaning of the Note Descriptions
- General Safety Precautions
- General Electrical Protective Measures
- Intended Area of Application
- Degree of Protection (IP Code)
- □ Fault-Current Circuit Breaker
- Overvoltage Protector
- Cross Sections of the Power Cables

WARNING:

Before mounting the inverter and making electrical connections, consider: local regulations concerning power installation, interference and noise immunity, environmental conditions, and mounting orientation of the unit (thermal considerations, accessibility, safety, and so forth).

Trained Personnel

In this document, "trained personnel" means persons who are familiar with the installation, mounting, commissioning, and operation of ANILAM inverter systems and motors. Furthermore, electrical engineering work on the system may be carried out only by trained electrical engineering technicians or persons trained specifically for the respective application.

Basically, persons who perform work on ANILAM inverter systems and motors must meet the following requirements:

- They must have been trained or instructed regarding the standards for safety engineering.
- They must be familiar with the use of appropriate safety equipment (gear, measuring systems).
- They should be skilled in first aid practice.



Meaning of the Note Descriptions

The Note boxes have the following descriptions:

Danger Failure to comply with this information could result in

serious up to fatal injuries or in substantial material

damage.

Warning Failure to comply with this information could result in

injuries and interruptions of operation up to material

damage.

Note Tips and important information about standards and

regulations as well as for better understanding of the

document.

General Safety Precautions

The inverter systems from ANILAM comply with the safety regulations for the electrical equipment of machines in accordance with EN 60204.

Danger:

- During the operation of electrical equipment certain parts can inevitably be under power.
- Work on ANILAM inverter systems and motors may be performed only by trained personnel or personnel familiar with the equipment.
- The personnel must be familiar with the <u>Inverter Systems and Motors for 6000i</u> and must keep the document well visible and easily accessible.
- The personnel must be familiar with the safety precautions and warning in the *Inverter Systems and Motors for 6000i*.
- The reliable and safe operation for ANILAM inverter systems requires proper transport as well as professional mounting, installation, and commissioning. Furthermore, careful maintenance and professional servicing of the ANILAM components must be ensured.
- ANILAM warns that the motors operated by inverter systems may cause hazardous movements of the machine axes.



General Electrical Protective Measures

Danger:

- With ANILAM inverter systems, the leakage current (current at the equipment grounding conductor) is sometimes higher than 3.5 mA.
- The equipment grounding conductor must therefore have a cross section of at least 10 mm² according to EN 50178.

Warning: ANILAM performs a voltage test according to EN 60204 on the inverters. If you want to perform this test on the entire system, you must disconnect the power connection of the ANILAM inverter system in order to prevent damage.

Intended Area of Application

WARNING:

Availability of this product is limited according to IEC 61800-3. This product can cause radio interferences in residential areas. This would require the operator to ensure appropriate measures are taken.



Degree of Protection (IP Code)

The IP Code number indicates the amount of protection afforded by the housing against penetration of solid foreign bodies and/or water. The first digit of this two-digit number indicates the degree of protection afforded by the housing against penetration of solid foreign bodies. The second number indicates the degree of protection against water. For example, an IP code of 20 refers to a chassis that protects against (2) particles ≥ 12.5 mm (0.48 in), and provides no protection (0) from water intrusion. Refer to **Table 4-1** and **Table 4-2**.

Table 4-1, IP Code Explanation

First Number	Protection against penetration of solid foreign bodies	Second Number	Protection against penetration of water with disruptive effect
0	No protection	0	No protection
1	≥ 50.0 mm (2 in)	1	Perpendicular droplets
2	≥ 12.5 mm (0.48 in)	2	Droplets at 15° angle
3	≥ 2.5 mm (0.09 in)	3	Spraying water
4	≥ 1 mm (0.04 in)	4	Splashing water
5	Dust protected	5	Flowing water
6	Dustproof	6	Heavily flowing water
		7	Temporary submersion
		8	Continuous submersion

Table 4-2, Inverter Component IP Ratings

Component	IP Rating
SA Series inverter	IP 20
PS amplifier power supply	IP 20
PM amplifier power modules	IP 20
BR Series braking resistors	IP 20
CR commutating reactors	IP 20
LF line filter	IP 20
SM Series spindle motors	IP 54
AM Series axis motors	IP 65 (shaft bore: IP 64)



Fault-Current Circuit Breaker

For TT and IT networks, power supply companies require that the inverters be connected via fault-current circuit breakers or isolating transformers. A type B fault-current circuit breaker (trigger threshold 300 mA) with frequency weighting is to be used. These are available up to the rated current $I_N = 63A$. This is enough for the compact inverters and modular amplifiers with PS 130 power supply units. If the PS 145R power supply unit is used at full capacity, the 63 A of the fault-current circuit breaker is exceeded (65A); in this case, an isolation transformer must be used. Refer to **Figure 4-1**.

For TN networks, ANILAM recommends connecting the inverter/amplifier without the fault-current circuit breaker. Ensure that the grounding conductor has a large enough cross section. Refer to **Table 4-3**. Refer to **Figure 4-1**.

Table 4-3, Power Supply Isolation Transformer

Power Supply Unit	Rated Power Output of the Isolation Transformer	Short-Circuit Voltage
PS 145R	S _N ≥ 58.3 kVA	U _K ≤ 3 %

NOTE: Type A and type AC fault-current circuit breakers may not be used.

Connection of Various Types of European Networks: 100 - 240 V AC networks

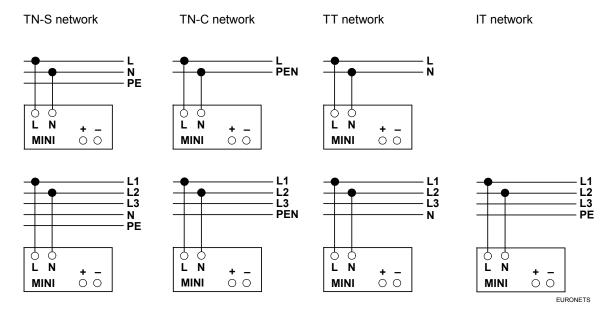


Figure 4-1, European Network Connections



Adjusting the Line Voltage by Means of a Transformer

In case no line power with 400 VAC \pm 10 % is available, an autotransformer may be used for adjusting the line voltage. See **Table 4-4**.

Table 4-4, Autotransformer Power Output

Device	Rated Power Output of the Autotransformer
SA 301E**1, SA 411E**1	S _N ≥ 15.0 Kva
SA 301A, SA 311A, SA 411A	S _N ≥ 22.5 Kva
SA 201A, SA 301C, SA 411C	S _N ≥ 33.0 Kva
RA 201A, RA 301C, SA 411C, PS 122R	S _N ≥ 28.6 kVA
PS 130	S _N ≥ 45.0 kVA
PS 145R	S _N ≥ 58.5 kVA

^{**1} The inverters can be operated up to a line voltage of 480 VAC \pm 10 %.

Overvoltage Protector

It may become necessary to insert an overvoltage protector in the supply voltage path (preferable in front of the line filter) in order to protect the inverters against overvoltage from the power line and against the resulting overvoltage. For information about the connection, see "Connection Overviews."

ANILAM recommends using an overvoltage protector which limits the voltage peaks from the power line to 2500 V.

Modules such as FLT-CP-3C-350 from the company Phoenix Contact, are available for this purpose.

NOTE: If a machine is required to comply with UL requirements, an overvoltage protector (such as mentioned above) **must** be inserted.



Cross Sections of the Power Cables

IEC 204-1 is valid for the dimensions of leads and cables.

A permissible current load value I_z is assigned to each cable cross section. This value must be corrected with two factors:

- Correction factor C₁ for increased ambient air temperature
 - C1 = 0.91 for +45 °C (113 °F)
 - C1 = 0.81 for +50 °C (122 °F)
 - C1 = 0.71 for +55 °C (133 °F)
- Correction factor C₂ = 1.13 for insulation material with increased operating temperature.

The following tables are valid for:

- An ambient air temperature of +40° C (104 °F)
- An operational temperature of +90 °C (194 °F) (only H07 V2-K and Lapp Őlflex-Servo-FD 795 P single conductors)
- Installation type B1
 Conductor in the installation armor and installation channels to be opened.
- Installation type B2
 Cables and leads in the installation armor and installation channels to be opened.
- Installation type C and E
 Cables and leads on walls and on open cable racks.



Refer to **Table 4-5** and **Table 4-6**.

Table 4-5, Cable Cross Section Current Load Specifications Installation Type B1

Cable Cross Section	Permissible Current Load with Installation Type B1		Permissible Current Load with Installation Type B2
	Single Conductor Standard PVC	Single Conductor H07 V2-K	Cable Lapp Őlfex-Servo-FD 795 P
1.0 mm ²	10.4 A	11.7 A	10.8 A
1.5 mm ²	13.5 A	15.2 A	13.8 A
2.5 mm ²	18.3 A	20.6 A	18.6 A
4.0 mm ²	25.0 A	28.2 A	26.0 A
6.0 mm ²	32.0 A	36.1 A	32.8 A
10.0 mm ²	44.0 A	49.7 A	45.2 A
16.0 mm ²	60.0 A	67.8 A	59.9 A
25.0 mm ²	77.0 A	87.0 A	75.7 A
35.0 mm ²	97.0 A	109.6 A	93.8 A

Table 4-6, Cable Cross Section Current Load Specifications Installation Type C and E

Cable Cross	Permissible Current Load with Installation Type C and E		
Section	Single Conductor Standard PVC	Single Conductor H07 V2-K	Cable Lapp Őlfex-Servo-FD 795 P
35.0 mm ²	104.0 A	117.5 A	117.5 A
50.0 mm ²	123.0 A	139.0 A	139.0 A
70.0 mm ²	155.0 A	175.1 A	175.1 A
95.0 mm ²	192.0 A	217.0 A	217.0 A
120.0 mm ²	221.0 A	249.7 A	249.7 A

Cable bundling is not taken into account in the tables. Consult IEC 204-1.

Example:

H07 V2-K single conductor with a cross section of 16 mm² and installation type B2 at an ambient temperature of + 50 °C (122 °F):

Permissible current load at 40 °C (according to table): 67.8 A Correction factor for ambient temperature of + 50 °C (122 °F): 0.82

Permissible current load (+ 50 °C) = (C1) x (permissible current load [+40 °C (104 °F)])

Permissible current load (+ 50 °C) = $(0.82) \times (67.8 \text{ A}) = 55.6 \text{ A}$



Electromagnetic Compatibility

The following topics are described:

- Valid Regulations
- □ Likely Sources of Interference
- Power Supply Stability Requirements
- CE Marking
- Interference and Noise Immunity
- Noise Immunity
- Protective Measures

Valid Regulations

The inverter systems and motors comply with the following standards based on European Community Electromagnetic Compatibility (EMC) directive No. 89/336/EWG:

- Power line disturbance and radio interference suppression Class A according to EN 55022
- Power line disturbance and radio interference suppression Class A according to EN 55011
- Radio interference and immunity to interference according to EN 61800-3

The inverter systems and motors are intended for operation in industrially zoned areas.

Protect your equipment from interference by observing the following rules and recommendations.

Likely Sources of Interference

Interference is mainly produced by capacitive and inductive coupling from electrical conductors or from device inputs/outputs such as:

- Strong magnetic fields from transformers or electric motors
- Relays, contactors, and solenoid valves
- High-frequency equipment, pulse equipment, and stray magnetic fields from switch-mode power supplies
- Power lines and leads to the above equipment



Power Supply Stability Requirements

Since the regenerative power supply units from ANILAM use sine commutation, there is no interference in the frequency range up to 2.5 kHz. This results in the following recommended values fore the required power supply stability. Refer to **Table 4-7**.

Table 4-7, Power Supply Stability Requirement

Regenerative Power Supply Unit	Minimum Short-Circuit Current**1	Minimum Short- Circuit Power
PS 122R	I _{SC} = 50 * I _N = 1600 A	S _K = 1.10 MVA
PS 145R	I _{SC} = 50 * I _N = 3300 A	S _K = 2.15 MVA

^{**1} This value applies only in conjunction with ANILAM three-phase capacitors.

CE Marking

Machine tool builders, system, and plant constructors are responsible for EMC compliance. Systems, machines, and complete drives with frequency inverters must therefore bear the CE mark. The ANILAM components all bear the CE mark.

Interference and Noise Immunity

The fast switching processes and high coupling capacitance of variablespeed three-phase motors with frequency inverters result in substantial interference to ground. This interference is not only spread along the lines, but is also radiated and must therefore be suppressed by taking adequate measures.

The following topics are described:

- Conducted Interference
- Radiated Interference

Conducted Interference

Conducted interference includes both high-frequency interference from the PWM (pulse width modulation) operation of the inverter system and power line disturbance due to non-sinusoidal current drain (not with ANILAM inverter systems) from the power line (for example, through commutation notches in the power rectifier). This type of interference is spread mainly through the power line. Appropriate protective measures must therefore be taken. See "Protective Measures."



Radiated Interference

Radiated interference is high-frequency interference spreading in the form of electromagnetic waves. They are primarily radiated from the motor cable, but also from the inverter housing as well as from the motor itself. These waves are taken up by electric leads and their connecting leads and then fed back into the power line as interference current. Appropriate protective measures must therefore be taken. See "Protective Measures."

Noise Immunity

External electromagnetic influences must not affect the functioning and operational reliability of the inverter systems. These also include conducted interference that affects the power input and radiated interference that may be caused by the inverter itself (self-induced interference). Appropriate protective measures must therefore be taken. See "Protective Measures."

Protective Measures

The following topics are described:

- □ General
- Compact Inverters (Modular Amplifiers): SA 301E, SA 411E,
 SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C
- □ Regenerative Inverter Systems: RA 201A, RA 301C, RA 411C
- Motors

General

- Keep a minimum distance of 20 cm (8 in) from the CNC chassis and its leads to interfering equipment.
- A minimum distance of 10 cm (4 in) from the CNC chassis and its leads to cables that carry interfering signals. For cables in metallic ducting, adequate decoupling can be achieved by using a grounded separation shield.
- Shielding according to IEC 742 and EN 50 178.
- Use potential compensating lines with a minimum cross section of 10 mm².
- Use genuine ANILAM cables, connectors, and couplings.
- Use ANILAM covers for the ribbon cables between the inverter units in modular inverter systems.



Compact Inverters (Modular Amplifiers): SA 301E, SA 411E, SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C

- Integration of toroidal cores in the motor leads (X80 to X84).
- Integration of one toroidal core in the voltage supply lead (X31).

These measures serve to suppress conducted interference (power line disturbance according the EN 55011 / 55022 Class A). The toroidal cores are included in the items supplied with the compact inverters.

Regenerative Inverter Systems: RA 201A, RA 301C, RA 411C

- A suitable ANILAM commutating reactor must be used.
- A LF line filter from ANILAM must be used.
- We recommend that you use an ANILAM three-phase capacitor to ensure additional interference suppression if you are using a line filter.

NOTE: High-frequency disturbances in the power line may occur with other commutating reactors or line filters.

Motors

- If the described EMC protective measures are taken, the ANILAM motors can be operated with cable lengths up to 15 m. (49.2 ft.) If greater cable lengths are required, additional measures for interference suppression must be taken.
- The shield of the line for the holding brake is to be kept as close as possible (< 30 mm [1.18 in.]) to ground. The best solution is t fasten the shield with a metal clamp directly onto the sheet metal housing of the electrical cabinet.



Leakage Current from the Inverter Housing to the Grounding Connection

ANILAM inverters are electronic equipment with a leakage current greater than 3.5 mA (from the housing to the ground). Therefore, a sticker with the following warning is on all inverter components. See **Figure 4-2**.

Ableitstrom> 3,5 mA
Potentialausgleich anschließen!

Leakage current > 3.5 mA Connect potential equalization!

Figure 4-2, Leakage Current Warning Label

Danger: Since humans must not be subjected to leakage currents greater than 3.5 mA, the following must be ensured according to EN 50 178 (protective low voltage):

- Power connection with clamping:
 The cable for the grounding connection must have a line cross section greater than half that of a line conductor, but at least
 (≥) Ø 10 mm².
- Power connection with connector:
 A second grounding conductor with a line cross section greater than half that of a line conductor, but a t least (≥) Ø 10 mm², along with the grounding conductor of the connector, must be firmly grounded.

This means that, in both cases, a clamped grounding connection must be installed.

If more than one piece of equipment is connected to the same grounding connection, the leakage currents add up. Therefore, the installer must ensure that the grounding connection is of sufficient low-impedance.

NOTE: ANILAM recommends placing a sign on the outside of the electrical cabinet with a warning and a connection recommendation for the grounding conductor.



Environmental Conditions

The following topics are described:

- Heat Generation and Cooling
- □ Air Humidity
- Mechanical Vibration
- Contamination

Heat Generation and Cooling

WARNING: T

The permissible ambient operating temperature for the SA Series inverter is between 0 °C and 40 °C (32 °F to 104 °F). Operation at temperatures outside these parameters will impair the operating safety.

The following measures can ensure adequate heat removal:

- Provide sufficient space for air circulation.
- An integrated ventilation system must remove the warm air and introduce cooling air, while ensuring that the permissible degree of contamination of the cooling air is not exceeded. See
 "Contamination." If this is not possible, a heat exchanger must be provided to avoid failures. ANILAM recommends that these units (with separate internal and external cooling circuit) always be installed for reasons of operational safety.
- Exit air from cooling systems of other devices must not be introduced into the unit. Install a fan to extract warm air. Do not allow prewarmed air to be blown into the unit.
- The warm air should flow over surfaces that have good thermal conductivity to the external surroundings (for example, sheet metal, which enables heat dissipation).
- Where the chassis is a closed steel housing without assisted cooling, the formula for heat conduction is 3 W/m² of surface per °C air temperature difference between inside and outside.
- Use of a cooler.

Air Humidity

Permissible air humidity:

- Maximum 75 % in continuous operation
- Maximum 95% for not more than 30 days a year (equally distributed)

NOTE: To avoid condensation on the circuit boards, leave units powered on in humid environments.



Mechanical Vibration

Permissible vibration: ± 0.075 mm, 10 to 41 Hz

5 m/s², 41 Hz to 500 Hz

Permissible shock: 50 m/c², 11 ms

Contamination

ENJ 50 178 permits contamination level 2. If this standard cannot be adhered to, be sure to use a heat exchanger in order to avoid failures. For reasons of operating safety, ANILAM in principle recommends installing the modules with a separate internal and external cooling circuit.

WARNING:

ANILAM cannot assume responsibility for inverter failures caused by impermissible contamination.

A conducting layer might form on the live components of the inverter from the following:

- Deposition of dust from the ambient air
- Precipitation of chemical particles contained in the air
- Natural formation of dew after the machine has been switched off

This conducting layer may cause flashovers of DC-link voltage that might damage the unit.

The so-called "protection by electrical separation" of:

- Line voltage
- DC-link voltages
- "Exposed" voltages,

which are required for safety reasons, are not guaranteed any longer.



Installation Guidelines

The following topics are described:

- Minimum Clearances for BR 10F and BR 18F Braking Resistors
- □ Installation Guidelines for BR 18 Braking Resistor
- Minimum Clearances for BR 18 Braking Resistor
- □ Minimum Clearances for SA Series Inverter

WARNING: When mounting the braking resistors and inverter, observe proper minimum clearance, space requirements, and length of connecting



Minimum Clearances for BR 10F and BR 18F Braking Resistors

WARNING:

Because of their high heat generation, these braking resistors must be mounted outside the CNC cabinet in a vertical position (with the fan at the bottom). Position braking resistors in a way that prevents mechanical damage from splashing water (coolant) and injury due to accidental human contact with hot surfaces.

Refer to Figure 4-3.

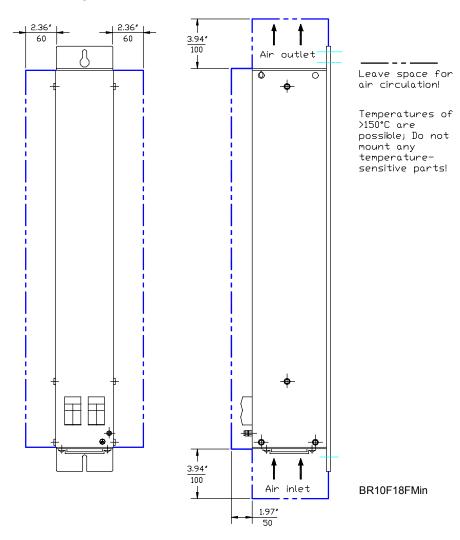


Figure 4-3, BR 10F and BR 18F - Minimum Clearance



Installation Guidelines for BR 18 Braking Resistor

WARNING: Because of their high heat generation, the BR 18 braking resistor must be mounted outside the CNC cabinet, either vertically

(connections at bottom) or horizontally (connections at rear).

Refer to Figure 4-4.

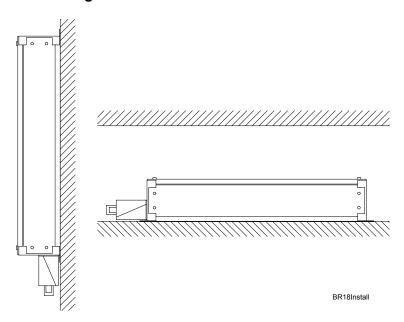


Figure 4-4, BR 18 – Correct Installation

The braking resistor may not be positioned so that the connections face upwards, since the heat produced rises. Refer to **Figure 4-5**.

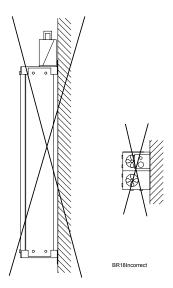


Figure 4-5, BR 18 - Incorrect Installation



Minimum Clearances for BR 18 Braking Resistor

WARNING: Because of their high heat generation, the BR 18 braking resistor must be mounted outside the CNC cabinet, either vertically (connections at bottom) or horizontally (connections at rear).

Refer to Figure 4-6.

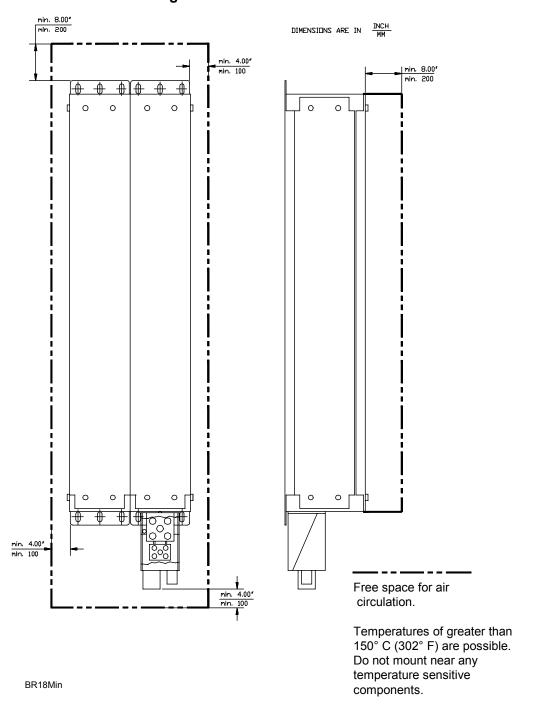


Figure 4-6, BR 18 - Minimum Clearances



Minimum Clearances for the SA Series Inverter

Refer to Figure 4-7. >3.54 Free space for air circulation! >90 5.91" Temperatures of >150°C are 150 possible with SA XXXX and with integrated braking resistor. Do not install any temperature sensitive components near the braking resistor. Leave space for servicing! <u>>4.7</u>2* Leave space for servicing! >120 7.87" 200 Leave space for servicingl Connecting cables must be laid to enable the CNC to be opened! >3.54* CC Inverter SA

Figure 4-7, SA Series Inverter - Minimum Clearances

SAINVERTERMin

>90



Connection Overviews

The following topics are described:

- Power Connection of Regenerative Inverter Systems
- Power Connection of Non-Regenerative Inverter Systems
- Arranging the Inverter Modules
- Arranging Additional Modules

Power Connection of Regenerative Inverter Systems

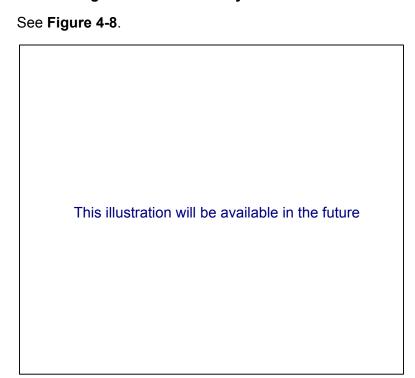


Figure 4-8, Power Connection of Regenerative Inverter Systems

Standard

A line filter and commutating reactor are required for connecting regenerative inverter systems. The use of ht three-phase capacitor for additional mains interference suppression is recommended.

If you are using a PS 120A as an additional 5 V power supply, you must connect it through an isolating transformer via separate fuses. For connecting the PS 120A, see "Section 6, Connecting the PS 120A Power Supply Unit."

UL Certification

In addition to the above mentioned components, an overvoltage protector is required for compliance with UL requirements. See "Overvoltage Protector."



See Figure 4-9. This illustration will be available in the future

Power Connection of Non-Regenerative Inverter Systems

Figure 4-9, Power Connection of Non-Regenerative Inverter Systems

Standard

A toroidal cores included in the items supplied must be mounted when connecting non-regenerative inverter systems. The procedure for mounting the toroidal cores is described in "<u>Section 5, Mounting the Toroidal Cores</u>."

If you are using a PS 120A as an additional 5 V power supply, you must connect it through an isolating transformer via separate fuses. For connecting the PS 120A, see "Section 6, Connecting the PS 120A Power Supply Unit."

UL Certification

In addition to the above mentioned components, an overvoltage protector is required for compliance with UL requirements. See "Overvoltage Protector."



Arranging the Inverter Modules

The following topics are described:

- Arrangement with the DLF 120
- □ Arrangement with the DLF 130
- Additional Inductance
- Voltage Protection Module

The following connection overview illustrates the combination of different types of drives in an inverter system. The arrangement of the inverter modules also depends on the combination used.

The following guidelines should be observed:

- The inverter modules for the most powerful motors (e.g., spindle, axis 1, axis 2, etc.) must be placed next to the right of the power supply module.
- If you want to connect motors requiring a DC-link filter (linear motors, torque motors, special synchronous spindle motors), primarily ensure that the PLF DC-link filter's maximum permissible load is not exceeded. The DC-link filter is inserted next to the left of the inverters in the DC-link and connected.

Depending on the application, there are the following possibilities:

- Arrangement with the DLF 120
- Arrangement with the DLF 130



Arrangement with the DLF 120

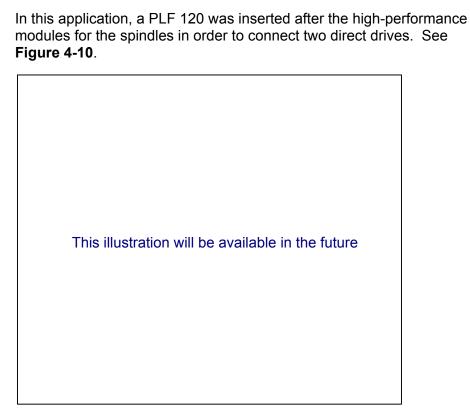


Figure 4-10, Arrangement with the DLF 120



Arrangement with the DLF 130

In this application, a PLF 130 was placed next to the power supply module, because a high-performance synchronous spindle motor requiring a DC-link filter was used. In this application, the total system power must not exceed the maximum permissible power the PLF 130. See **Figure 4-11**.

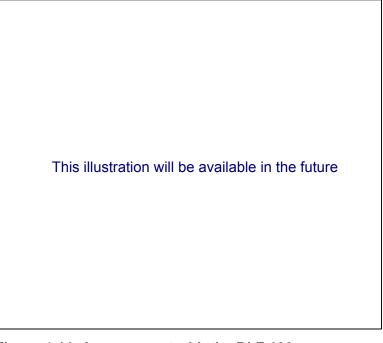


Figure 4-11, Arrangement with the DLF 130

Additional Inductance

Motors

- Whose self-inductance is insufficient for operation require additional inductance (e.g., series reactors) to ensure proper servo control. The formulas and values required for calculating the additional inductance can be found in the 6000i CNC Technical Manual, P/N 627787-21.
- With cable lengths over 49.2 ft. (15 m.) may require additional inductance for noise suppression.

Voltage Protection Module

For information on the VPM 163 voltage protection module, see "Section 2, VPM 163 – Voltage Protection Module."



Arranging Additional Modules

Increased power demand in modular regenerative inverter systems may make it necessary to use two power supply modules. In this case, an Adapter Module, P/N 647705-01 is required for connecting the supply bus of the power supply modules to the control. See **Figure 4-12**.

Details for connecting the adapter module and two power supply units are in "Section 6, Connecting the Adapter Module."

This illustration will be available in the future

Figure 4-12, Arranging Additional Modules



Section 5 - Installing Amplifier Systems

The following topics are described in this section:

- Connection Overview
- Mounting and Connecting the Amplifier
- Connecting the SA 301E, SA 411E Amplifier
- Connecting the SA 301A, SA 311A, Sa 411A, SA 201A, SA 301C,
 SA 411C, or RA 201A, RA 301C, RA 411C Amplifiers
- Connecting the PS 120A Power Supply Unit
- Connecting the BR 9 Braking Resistor Module
- Physical Dimensions

Connection Overview

Refer to Figure 5-1.



Figure 5-1, Series 6000 CNC, SA Series Amplifier and PM 107 Power Module

DANGER: Do not connect or disconnect any elements while the unit is powered up.



The following components and connections are illustrated:

- □ SA 311E/SA 411E
- □ Description of LEDs on the SA 311E/SA 411E Amplifiers
- □ SA 301A
- □ SA 311A
- □ SA 411A
- □ SA 201A
- □ SA 301C
- □ SA 411C
- Description of LEDs on the Amplifiers: SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C
- □ RA 201A
- □ RA 301C
- RA 411C
- Description of LEDs on the Amplifiers: RA 201A, RA 301C, RA 411C
- □ PS 120A Power Supply Unit
- □ BR 9 Braking Resistor Module
- □ BR 18 Braking Resistor
- □ BR 10F and BR 18F Braking Resistors



SA 301E/SA 411E

Refer to Figure 5-2.

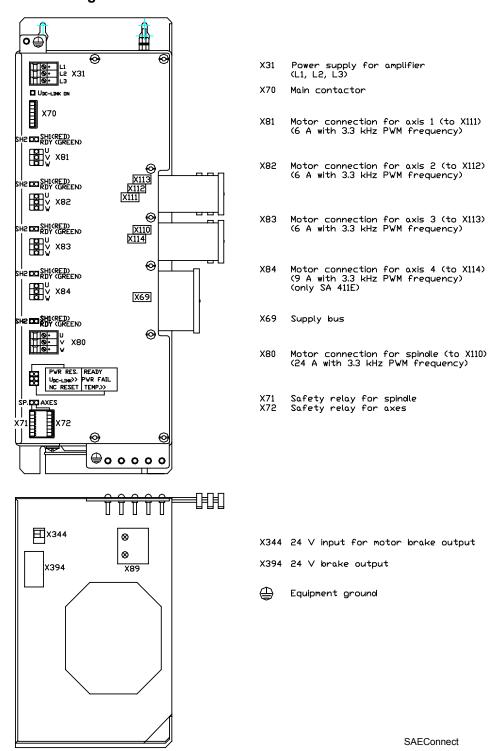


Figure 5-2, SA 301E/SA 411E



Description of LEDs on the SA 301E/SA 411E Amplifiers

LEDs on the front panel of the amplifier (a.k.a. compact inverter) indicate functional control, with the following meaning. Refer to **Table 5-1**.

Table 5-1, LED Designations for SA 301E/SA 401E Amplifiers

LED	Indicator	Signal Direction	Signal
NC RESET	Reset signal from CNC to SA	$CNC \rightarrow SA$	RES.LE
PWR FAIL (Power Fail)	U_Z too low, U_Z < 410 V (for example, caused by the failure of a phase under load, power < 290 V)	SA → CNC	PF.PS
PWR RES (Power Reset)	Reset signal from SA to CNC	$SA \rightarrow CNC$	RES.PS
READY	Amplifier ready	$SA \rightarrow CNC$	RDY
TEMP >>	Temperature of heat sink too high (>100 °C (212 °F))	$SA \rightarrow CNC$	ERR.TEMP
U _{DC LINK} >>	U _z too high. (> approximately 800 V); power modules are switched off.	$SA \rightarrow CNC$	ERR.UZ.GR
U _{DC LINK ON}	Main contactor on	_	_
X71 SP. (Spindle)	Safety relay for spindle on	_	_
X72 AXES	Safety relay for axes on	_	_
X 8x SH1 (Red)	Safe stop 1; no enable from control (main contactor not active, DSP error, PLC error with Emergency Stop, hardware or software error of CNC)	CNC → SA	SH1B
RDY (Green)	Axis/Spindle enabled	$SA \rightarrow CNC$	RDY
X 8x SH2	Safe stop 2; no drive enable from control (for example, by the PLC, active via external signal or SH1)	CNC → SA	SH2



SA 301A

Refer to Figure 5-3.

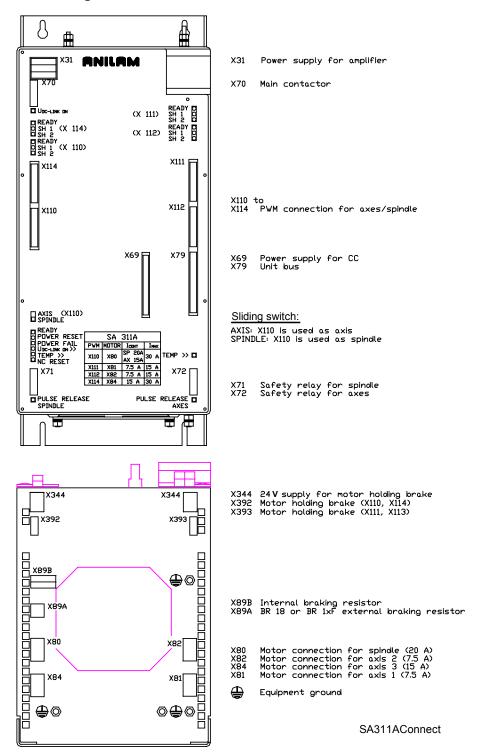


Figure 5-3, SA 301A



SA 311A

Refer to Figure 5-4.

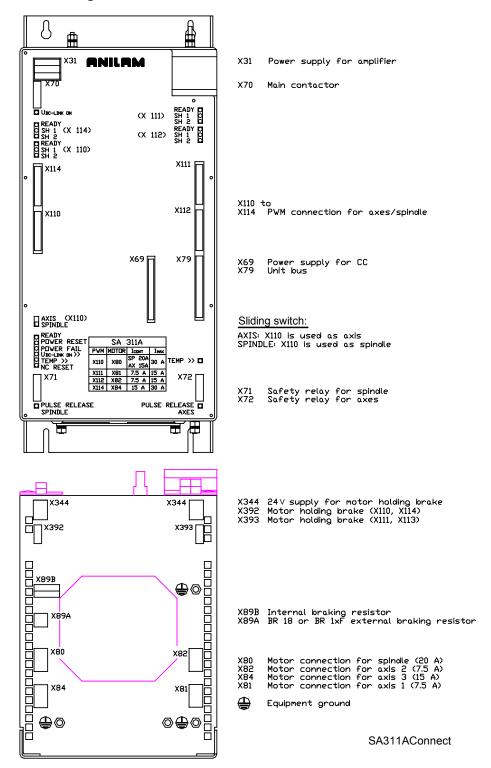


Figure 5-4, SA 311A



SA 411A

Refer to Figure 5-5.

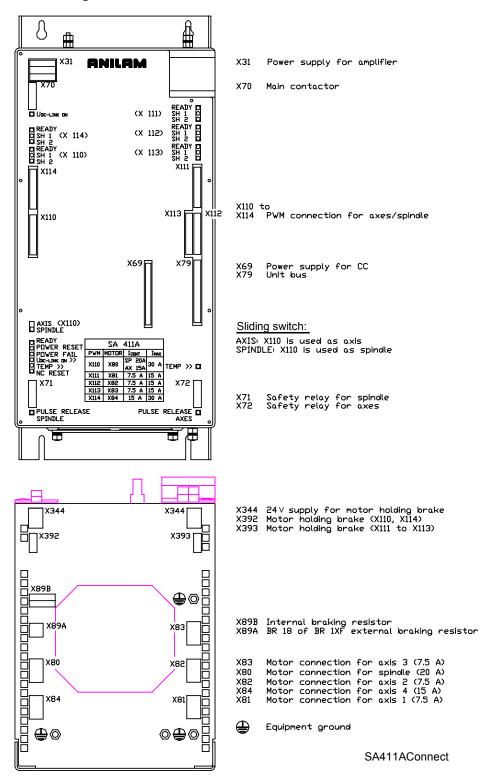


Figure 5-5, SA 411A



SA 201A

Refer to Figure 5-6.

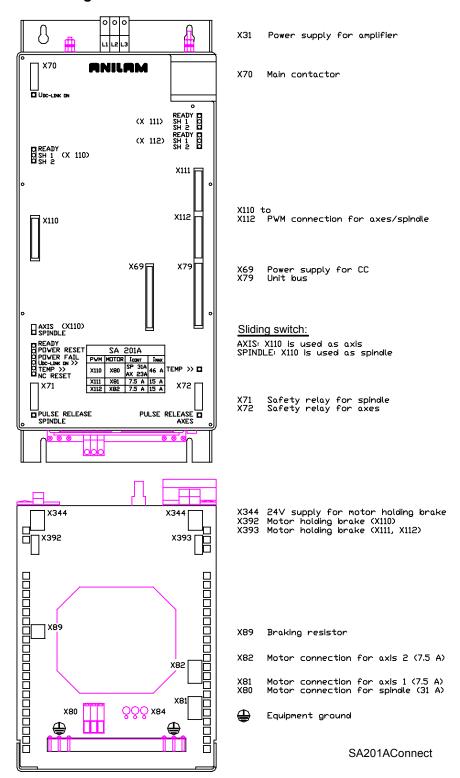


Figure 5-6, SA 201A



SA 301C

Refer to Figure 5-7.

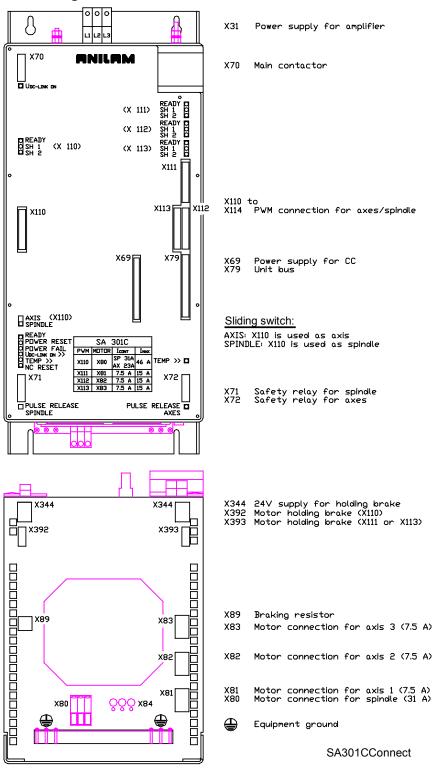


Figure 5-7, SA 301C



SA 411C

Refer to Figure 5-8.

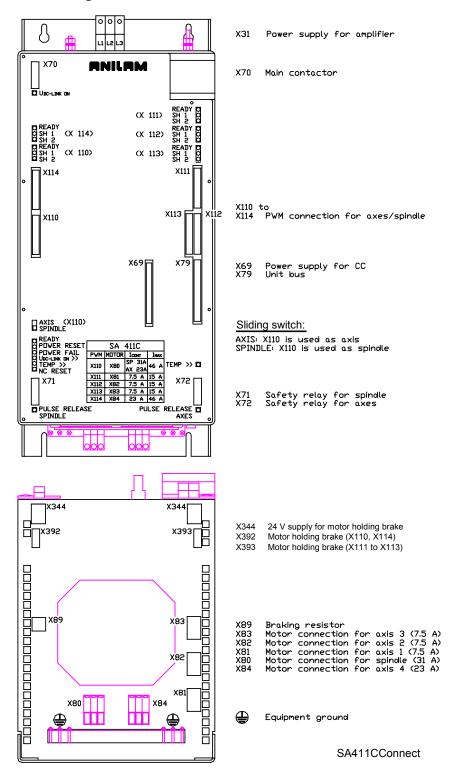


Figure 5-8, SA 411C



Description of LEDs on the Amplifiers: SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C

Light Emitting Diodes (LEDs) on the front panel of the amplifier indicate functional control, with the following meaning. Refer to **Table 5-2**.


Table 5-2, LED Designations for Amplifiers: SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C

LED	Indicator	Signal Direction	Signal
NC RESET	Reset signal from the CNC to the SA	$CNC \rightarrow SA$	RES.LE
POWER FAIL	U_Z too low, U_Z < 410 V (for example, caused by the failure of a phase under load, power < 290 V)	SA → CNC	PF.PS
POWER RESET	Reset signal from SA to CNC	$SA \rightarrow CNC$	RES.PS
PULSE RELEASE AXES	Safety relay for axes on	-	_
PULSE RELEASE SPINDLE	Safety relay for spindle on	_	_
READY	Amplifier ready	$SA \rightarrow CNC$	RDY
TEMP >> (left)	Heat sink temperature too high for axis 4 and spindle (>100 °C (212 °F))	$SA \rightarrow CNC$	ERR
TEMP >> (right)	Heat sink temperature too high for axis 1 to axis 3 (>100 °C (212 °F))	$SA \rightarrow CNC$	ERR
U _{DC LINK} >>	U _z too high. (> approximately 800 V); power modules are switched off.	$SA \rightarrow CNC$	ERR.UZ.GR
U _{DC LINK ON}	Main contactor on	_	_
X11× READY	Amplifier ready	$SA \rightarrow CNC$	RDY
X11× SH1	DSP error, PLC error with Emergency Stop, CNC hardware or software error	CNC → SA	SH1B
X11× SH2	No drive enabled (for example, by the PLC, active via external signal or SH1)	CNC → SA	SH2



RA 201A

Refer to Figure 5-9.

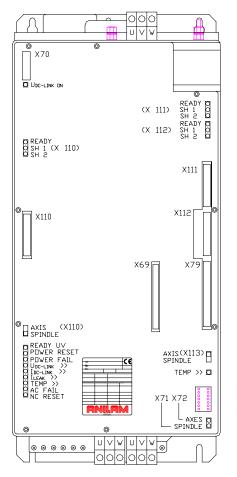


- X31 Power supply for amplifier
- X70 Main contactor

- X110 to X112 PWM connection for axes/spindle
- X69 Power supply for control X79 Unit bus

Sliding switch:

AXIS: X110 or X113 is used as axis SPINDLE: X110 or X113 is used as spindle

X71 Safety relay for spindleX72 Safety relay for axes

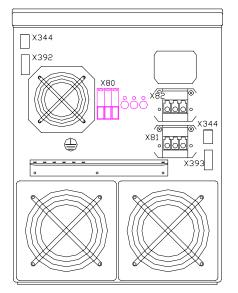

X34424 V supply for motor holding brake X392 Motor holding brake (X110)

X80 Motor connection for spindle (35A) X82 Motor connection for axis 2 (7.5A) X81 Motor connection for axis 1 (7.5A)

Equipment ground

X393 Motor holding brake (X111, X112)


RA201AConnect

Figure 5-9, RA 201A



RA 301C

Refer to Figure 5-10.

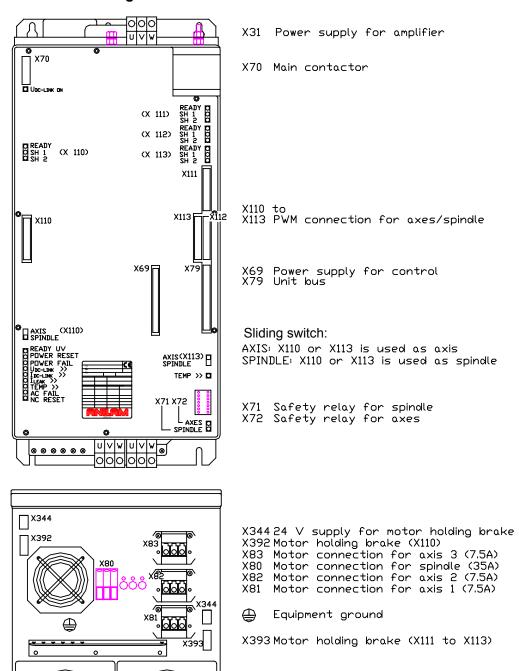

RA301CConnect

Figure 5-10, RA 301C



RA 411C

Refer to Figure 5-11.

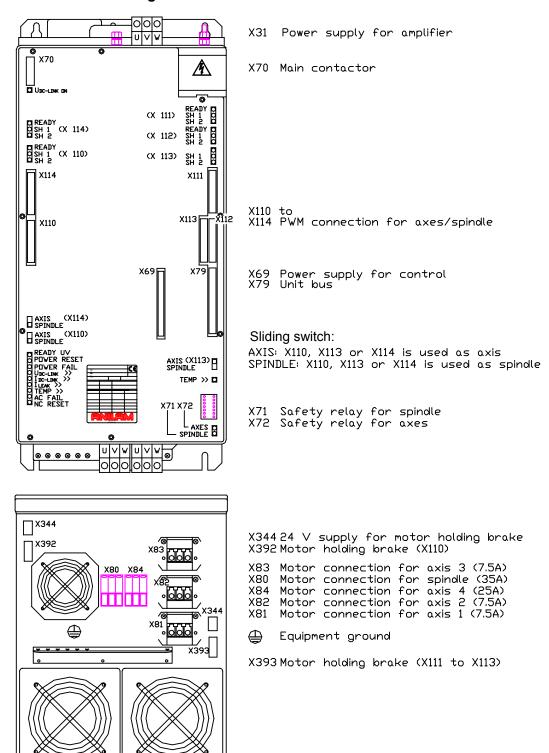


Figure 5-11, RA 411C

RA411CConnect



Description of LEDs on the Amplifiers: RA 201A, RA 301C, RA 411C

Light Emitting Diodes (LEDs) on the front panel of the amplifier indicate functional control, with the following meaning. Refer to **Table 5-3**.

Table 5-3, LED Designations for Amplifiers: RA 201A, RA 301C, RA 411C

LED	Indicator	Signal Direction	Signal
AC FAIL	Phase missing	$RA \rightarrow CNC$	PF.PS.AC
AXES	Safety relay for axes on	_	_
I _{DC LINK} >>	I _Z > 52 A, warning signal to control at 58 A	$RA \rightarrow CNC$	ERR.IZ.GR
I _{LEAK} >>			
NC RESET	Reset signal from the CNC to the RA	$CNC \rightarrow RA$	RES.LE
POWER FAIL	U_Z too low, U_Z < 410 V (for example, caused by the failure of a phase under load, power < 290 V)	$RA \rightarrow CNC$	PF.PS
POWER RESET	Reset signal from RA to CNC	$RA \rightarrow CNC$	RES.PS
READY UV	Amplifier ready	$RA \rightarrow CNC$	RDY
SPINDLE	Safety relay for spindle on	_	_
TEMP >> (left)	Heat sink temperature too high for axis 4 and spindle (>100 °C (212 °F))	$RA \rightarrow CNC$	ERR
TEMP >> (right)	Heat sink temperature too high for axis 1 to axis 3 (>100 °C (212 °F))	$RA \rightarrow CNC$	ERR
U _{DC LINK} >>	U _z too high. (> approximately 800 V); power modules are switched off.	$RA \rightarrow CNC$	ERR.UZ.GR
U _{DC LINK ON}	Main contactor on	_	_
X11× READY	Amplifier ready	$RA \rightarrow CNC$	RDY
X11× SH1	DSP error, PLC error with Emergency Stop, CNC hardware or software error	CNC → RA	SH1B
X11× SH2	No drive enabled (for example, by the PLC, active via external signal or SH1)	CNC → RA	SH2



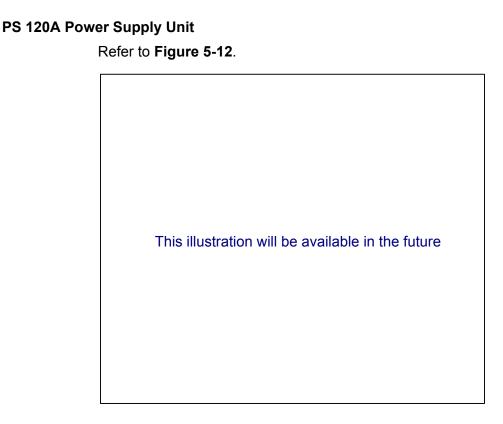


Figure 5-12, PS 120A Power Supply Unit



BR 9 Braking Resistor Module

Refer to Figure 5-13.

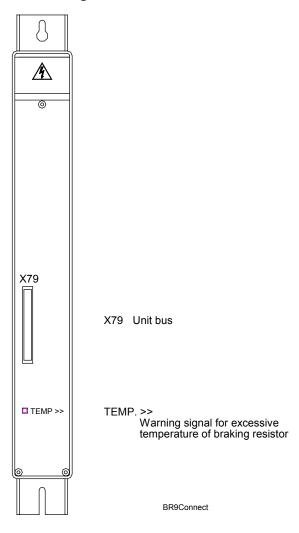


Figure 5-13, BR 9 Braking Resistor



BR 18 Braking Resistor

Refer to Figure 5-14.

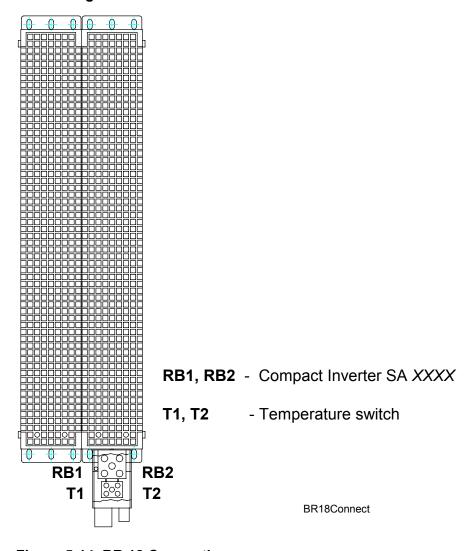


Figure 5-14, BR 18 Connections



BR 10F and BR 18F Braking Resistors

Refer to Figure 5-15.

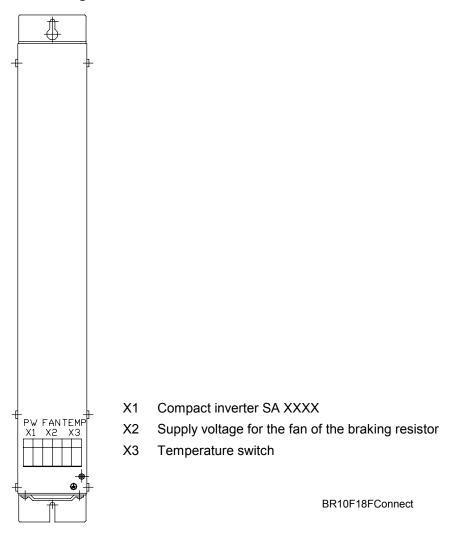


Figure 5-15, BR 10F and BR 18F Braking Resistors



Mounting and Connecting the Amplifier

The following products are illustrated:

- □ Arranging the Components
- □ Connecting the Components
- □ Direct Drives
- Module Covers
- Additional Power Supply
- □ Mounting the Amplifier
- □ Conducted Interference
- □ Mounting the Toroidal Cores

Arranging the Components

The amplifier is arranged next to the CNC at its left. Refer to **Figure 5-16**.

If the BR 9 braking resistor module is used together with the SA Series regenerative amplifier, the braking resistor is arranged between the weakest power module and the control.

SA Series Amplifiers (all) (SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C, and SA 301E, SA 411E)	Optional BR 9	Optional PS 120A	CNC
RA Series Amplifiers (RA 201A, RA 301C, RA 411C)			

Figure 5-16, Configuration of Amplifier, Braking Resistor, Power Supply, and CNC



Additional PMD 107 power module can be connected to SA Series Amplifier (SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C) and RA Series Amplifier (RA 201A, RA 301C, RA 411C). It must be placed between the CNC or BR 9 and the amplifier. Refer to **Figure 5-17**.

SA Series Amplifiers (SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C)	Optional With linear drive, DLF 1x0 DC-Link Filter to RA Series Amplifiers	Optional PMD 107	Optional BR 9	Optional PS 120A	CNC
RA Series Amplifiers (RA 201A, RA 301C, RA 411C)	(RA 201A, RA 301C, RA 411C)				

Figure 5-17, Configuration of Amplifier, Power Module, Braking Resistor, Power Supply, and CNC

Connecting the Components

The SA Series or RA Series amplifiers supply power to the control via the 50-line ribbon cable.

The control transmits the PWM signals for the axes and spindle(s) to the SA Series or RA Series amplifiers via 20-line ribbon cables.

 U_Z DC-link power is supplied to the additional PMD 107 power module from the SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 311C, SA 411C, or RA Series amplifier via a conductor bar, which is screwed to the power module and the amplifier. A second power conductor establishes the ground connection between the SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 311C, SA 411C, or RA Series amplifier and the PMD 107. The power bars are supplied as accessories with the power module.

A 40-line ribbon cable connects the SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 311C, SA 411C, or RA Series amplifier with the PMD 107 power module, forming the unit bus.

Direct Drives

Direct drives (linear motors, torque motors) used in conjunction with regenerative inverter systems require a DLF 1x0 DC-link filter, which is mounted to the left of the direct drives' power modules. The DC-link current is then led through this filter.



Module Covers

With the SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 311C, SA 411C, and RA Series amplifier, the ribbon cables must be covered to protect them against interference.

The covers for the CNC and the SA Series amplifier are included with each as accessories.

The cover for an optional PMD 107 power module must be ordered separately.

Additional Power Supply

If several encoders with a high current consumption (e.g., encoders with EnDat interface) are connected, an additional power supply source used in conjunction with the amplifier or a power supply unit might become necessary. The additional PS 120A power supply unit can be used for this purpose. It is mounted next to the CNC at its left.

The power supply unit is connected to the DC-link voltage via the conductor bar of the previous left module. The upper conductor bar also establishes the ground connection of the DE-link.

The 50-line ribbon cable of the amplifier / power supply unit for transmitting the status signals is connected to X69 of the PS 120A. The free ribbon cable of the PS 120A is connected to X69 of the CNC.

The 5 V power supply (X74) of the PS 120A is connected to the terminals on the CNC (X74) by means of the wires included in the PS 120A items supplied.



Mounting the Amplifier

Refer to **Figure 5-18** and <u>Figure 5-19</u>, <u>Mounting the SA 301A</u>, <u>SA 311A</u>, <u>SA 411A</u>, <u>SA 201A</u>, <u>SA 301C</u>, <u>SA 311C</u>, <u>SA 411C</u>, <u>or RA 201A</u>, <u>RA 301C</u>, <u>RA 411C</u> Amplifier.

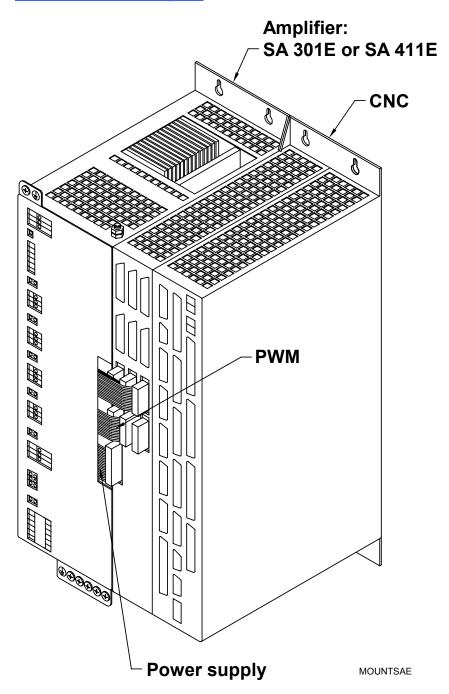


Figure 5-18, Mounting the SA 301E, SA 411E Amplifier

Warning: All electrical screw connections must be tightened after installation is complete (tightening torque 3.5 Nm [30.8 in-lb]).



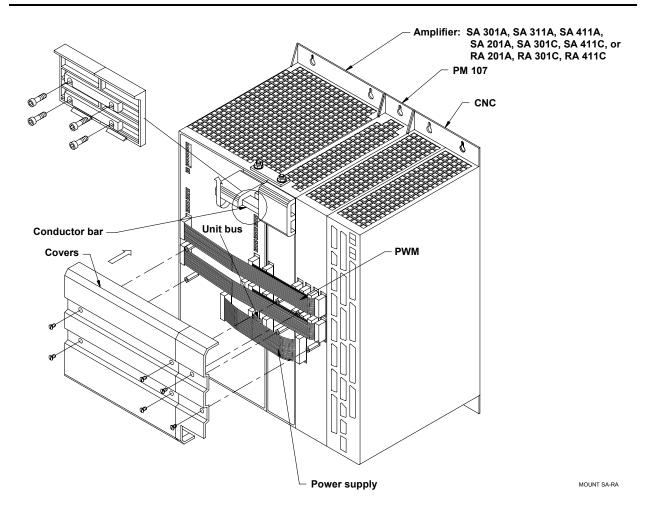


Figure 5-19, Mounting the SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 311C, SA 411C, or RA 201A, RA 301C, RA 411C Amplifier

Warning: All electrical screw connections must be tightened after installation is complete (tightening torque 3.5 Nm [30.8 in-lb]).

Conducted Interference

To suppress occurrence of conducted interference, toroidal cores must be mounted in the motor leads (X80 to X84), in the voltage supply lead (X31), and in the lead to the braking resistor (only for SA 301A, SA 311A, and SA 411A. See "Mounting the Toroidal Cores."

No toroidal cores are necessary for the RA 201A, RA 301C, RA 411C.



Mounting the Toroidal Cores

To suppress occurrence of conductive interference, toroidal cores must be mounted in the motor leads in the motor leads (X80 to X84) and in the voltage supply lead (X31). Refer to **Figure 5-20** and <u>Figure 5-21, SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C Toroidal Core Configuration.</u>

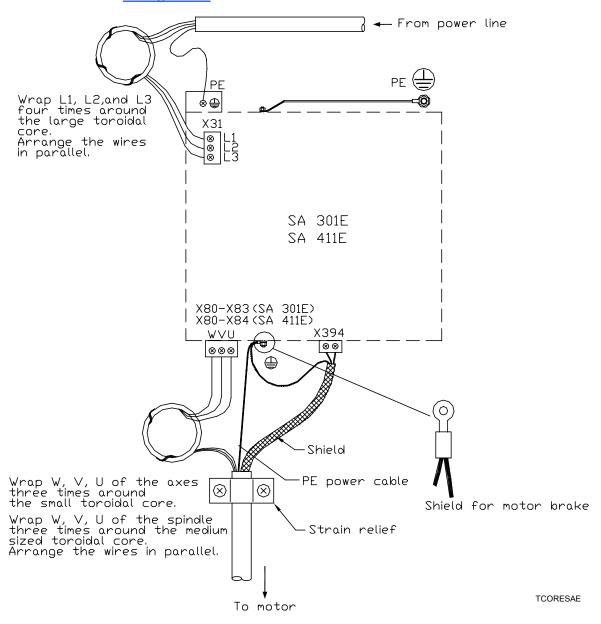


Figure 5-20, SA 301E, SA 411E Toroidal Core Configuration



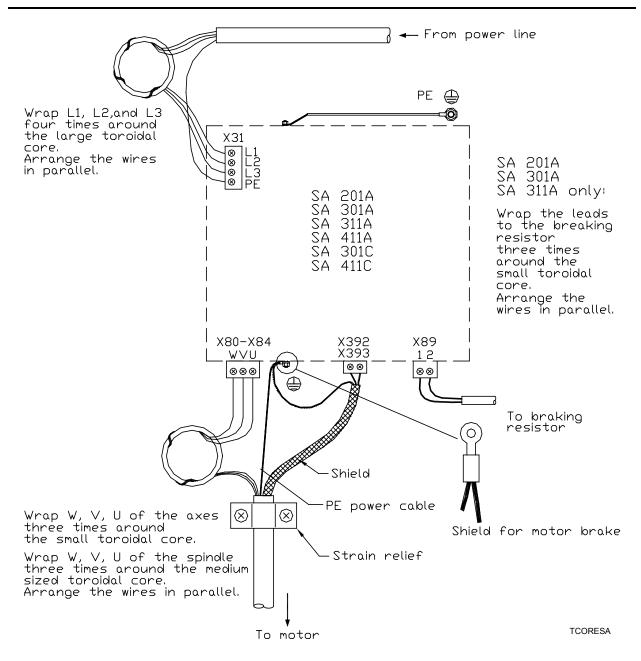


Figure 5-21, SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C Toroidal Core Configuration



Connecting the SA 301E, SA 411E Amplifier

DANGER: Danger of electrical shock.

Only ANILAM service engineers may open the amplifiers.

Do not engage or disengage any terminals while they are under power.

The following topics are described:

□ SA 301E, SA 411E Power Supplies

□ SA 301E, SA 411E Motor Connections

□ SA 301E, SA 411E Motor Holding Brakes

□ SA 301E, SA 411E Main Contactor and Safety Relay

□ SA 301E, SA 411E PWM Connection to CNC

□ SA 301E, SA 411E CNC Supply Voltage and Control Signals

SA 301E, SA 411E Power Supplies

NOTE: EN 50 178 requires a non-detachable connection to the line power supply.

If the power supply is other than 400 V, an autotransformer is required. It must comply at least with the connection specifications of the subsequent amplifier.



SA 301E, SA 411E: X31: Power Supply

With a power supply of 400 V, the amplifier voltage U_z is 565 VDC, and with a power supply of 480 V it is 678 VDC. Refer to **Table 5-4**.

Table 5-4, SA 301E, SA 411E: X31: Power Supply Connections

Terminals	SA 301E, SA 411E
Operation with 4	100 VAC
L1	400 VAC ± 10 %
L2	50 Hz to 60 Hz
L3	
Operation with 4	480 VAC ± 10 %
L2 L3	50 Hz to 60 Hz



SA 301E, SA 411E Motor Connections

SA 301E, SA 411E:

X80: Spindle Motor, X81: Axis Motor 1, X82: Axis Motor 2, X83: Axis Motor 3, (X84: Axis Motor 4)

Refer to **Table 5-5** and **Table 5-6**.

Table 5-5, SA 301E, SA 411E: Terminal Connections

Terminals	Assignment	
U	Motor connection U	
V	Motor connection V	
W	Motor connection W	

For information on synchronous motors, asynchronous motors, and power cables, refer to "Section 7, Cables and Connectors."

Table 5-6, SA 301E, SA 411E: X80, X81, X82, X83, X84: Connections

Terminals	Assignment
X80	X110
X81	X111
X82	X112
X83	X113
X84 (SA 411E)	X114 (SA 411E)



SA 301E, SA 411E Motor Holding Brakes

SA 301E, SA 411E:

X344: 24 V Supply for Motor Holding Brake

Refer to Table 5-7. :

Table 5-7, SA 301E, SA 411E: X344: 24 V Supply for Motor Holding Brake

X344 Connecting Terminals	Assignment
1	+ 24 V
2	0 V

SA 301E, SA 411E:

X394: Motor Holding Brake

Refer to Table 5-8.

Table 5-8, SA 301E, SA 411E: X394: Motor Holding Brake Pinout

X394 Connecting Terminals	Assignment
1	Holding brake (X111)
2	0 V (X111)
3	Holding brake (X112)
4	0 V (X112)
5	Holding brake (X113)
6	0 V (X113)
7	Holding brake (X114)
8	0 V (X114)

SA 301E, SA 411E:

Maximum Current for X394

Refer to Table 5-9.

Table 5-9, SA 301E, SA 411E: X394: Maximum Current

Amplifier	I _{max} (X394)
SA 301E	1.5 A
SA 411E	1.5 A



SA 301E, SA 411E Main Contactor and Safety Relay

SA 301E, SA 411E:

X70: Main Contactor,

X71: Safety Relay for Spindle,X72: Safety Relay for Axes

For information on the wiring and function, see the Basic Circuit Diagram for your CNC. Refer to **Table 5-10**.

Table 5-10, SA 301E, SA 411E: X70-X72: Terminal Assignments Pinout

X70-X72 Terminals	Assignment
1	+ 24 V output (maximum 250 mA)
2	0 V
3	+ 24 V input for U _Z ON, Axis ON, Spindle ON
4	Do not assign
5	Do not assign
6 ^{**1}	Normally closed contact (OE1, OE1A, or OE1S)
7**1	Normally closed contact (OE2, OE2A, or OE2S)

^{**1} Maximum 125 V

Warning: A recovery diode is required in the proximity of inductive loads (for example, relay or contactor coils.



SA 301E, SA 411E PWM Connection to the CNC

SA 301E, SA 411E:

X110 to X114: PWM Connection to the CNC

Refer to Table 5-11.

Table 5-11, SA 301E, SA 411E: X110-X114: PWM Connection to the CNC

20-line Ribbon Cable	Assignment
1a	PWM U1
1b	0 V U1
2a	PWM U2
2b	0 V U2
3a	PWM U3
3b	0 V U3
4a	SH2
4b	0 V (SH2)
5a	SH1
5b	0 V (SH1)
6a	+I _{Actl 1}
6b	-I _{Actl 1}
7a	0 V (analog)
7b	+I _{Actl 2}
8a	-I _{Actl 2}
8b	0 V (analog)
9a	Do not assign
9b	BRK
10a	ERR
10b	RDY

NOTE: The interface complies with the requirements of EN 50 178 for "low voltage electrical separation."



SA 301E, SA 411E CNC Supply Voltage and Control Signals

SA 301E, SA 411E:

X69: CNC Supply Voltage and Control Signals

For X69, CNC supply voltage and control signals refer to **Table 5-12**.

Table 5-12, SA 301E, SA 411E: X69: CNC Supply Voltage and Control Signals

50-line Ribbon Cable	Assignment
1a to 5b	+5 V
6a to 7b	+12 V
8a	+5 V (low voltage separation)
8b	0 V (low voltage separation)
9a	+15 V
9b	–15 V
10a	UZAN
10b	0 V
11a	IZAN
11b	0 V
12a	RES.PS
12b	OV
13a	PF.PS
13b	GND
14a	ERR.UZ.GR
14b	GND
15a	ERR.UZ.GR
15b	GND
16a	ERR.TEMP

50-line Ribbon	
Cable	Assignment
16a	GND
17a	RDY PS
17b	GND
18a	ERR.ILEAK
18b	GND
19a	Do not assign
19b	GND
20a	Do not assign
20b	GND
21a	Do not assign (SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C: 0V)
21b	GND
22a	Do not assign (SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C: 0V)
22b	GND
23a	Reserved (SDA)
23b	GND
24a	Reserved (SCL)
24b	GND
25a	RES.LE
25b	GND

NOTE: The interface complies with the requirements of EN 50 178 for "low voltage electrical separation."



Connecting the SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C, or RA 201A, RA 301C, RA 411C Amplifiers

DANGER: Danger of electrical shock.

Only ANILAM service engineers may open the amplifiers.

Do not engage or disengage any terminals while they are under power.

The following topics are described:

- Power Supplies
- RA 201A, RA 301C, RA 411C: Motor Connections
- □ RA 201A, RA 301C, RA 411C: Connection of the Motor Holding Brakes
- □ RA 201A, RA 301C, RA 411C: Main Contactor and Safety Relay
- □ RA 201A, RA 301C, RA 411C: PWM Connection to the CNC
- RA 201A, RA 301C, RA 411C: Unit Bus
- □ Unit Bus Amplifier to PMD 107 Power Module
- BR 18, BR 10F, BR 18F Braking Resistors for SA 301A, SA 311C,
 SA 411A, SA 201A, SA 301C, SA 411C Amplifiers



Power Supplies

NOTE: EN 50 178 requires a non-detachable connection to the line power supply.

If the power supply is other than 400 V, an autotransformer is required. It must comply at least with the connection specifications of the subsequent amplifier.

SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 311C, SA 411C: X31: Power Supply

Given a power supply of 400 V, the amplifier voltage U_z is 565 VDC. Refer to **Table 5-13** and <u>Table 5-14</u>, <u>RA 201A</u>, <u>RA 301C</u>, <u>RA 411C</u>: <u>X31</u>: Power Supply.

Table 5-13, SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 311C, SA 411C: X31: Supply Voltage Connections

Connecting Terminals X31	SA 301A, SA 311A, SA 411A	SA 201A, SA 301C, SA 311C, SA 411C
L1	400 Vac ± 10%	400 Vac ± 10%
L2	50 Hz to 60 Hz	50 Hz to 60 Hz
L3		
	Cable / single conductor (HT wire):	Cable / single conductor (HT wire):
	6 mm ²	10 mm ²
	Single conductor H07 V2-K:	Single conductor H07 V2-K:
	4 mm ²	6 mm ²
	Line fuse:	Line fuse:
	35A (gRL) Siemens Sitor type	50 A (gRL) Siemens Sitor type
	Grounding connection:	Grounding connection:
	≥ 10 mm ²	≥ 10 mm ²
Tightening torque for connecting terminals	0.7 Nm (6.5–7 lb/in)	2.0–2.7 Nm (18–20.5 lb/in)



RA 201A, RA 301C, RA 411C: X31: Power Supply

The amplifier voltage is U_z is 650 VDC. Refer to **Table 5-14**.

The RA 201A, RA 301C, RA 411C regenerative amplifiers must be connected to the main power line via the CR 135 commutating reactor and the line filter. This is necessary for keeping the main line free of disruptive higher harmonics.

Table 5-14, RA 201A, RA 301C, RA 411C: X31: Power Supply

Connecting Terminals X31	RA 201A, RA 301C, RA 411C
L1	400 VAC ± 10%
L2	50 Hz
L3	
	Cable / single conductor (HT wire):
	10 mm ²
	Single conductor H07 VS-K:
	6 mm ²
	Line fuse:
	35 A (gRL) Siemens Sitor type
	Grounding connection:
	≥ 10 mm ²
Tightening torque for connecting terminals	0.7 Nm (6.5–7 lb/in)

NOTE: The cables between the RA 201A, RA 301C, RA 411C amplifier and commutating reactor as well as between the commutating reactor and line filter must be as short as possible (< 0.4 m. (1.3 ft.)).



RA 201A, RA 301C, RA 411C: Motor Connections

RA 201A, RA 301C, RA 411C:

X80: Spindle Motor, X81: Axis Motor 1, X82: Axis Motor 2, X83: Axis Motor 3, X84: Axis Motor 4

Refer to Table 5-15 and Table 5-16.

Table 5-15, RA 201A, RA 301C, RA 411C Motor Connection Pinout

Terminals	Assignment	
U	Motor connection U	
V	Motor connection V	
W	Motor connection W	

For information on synchronous motors, asynchronous motors, and power cables, refer to "Section 7, Cables and Connectors."

Table 5-16, RA 201A, RA 301C, RA 411C PWM Inputs

Motor Connection	PWM Input
X80	X110
X81	X111
X82	X112
X83	X113
X84	X114



RA 201A, RA 301C, RA 411C:

Connection of the Motor Holding Brakes

RA 201A, RA 301C, RA 411C:

X344: 24 V Supply for Motor Holding Brake

Refer to Table 5-17. holding brake:

Table 5-17, RA 201A, RA 301C, RA 411C:

X344: 24 V Supply for Motor Holding Brake Pinout

Connecting Terminals X344	Assignment
1	+ 24 V
2	0 V

RA 201A, RA 301C, RA 411C:

X392: Motor Holding Brake

Refer to Table 5-18.

Table 5-18, RA 201A, RA 301C, RA 411C: X392 - Motor Holding Brake Pinout

Connecting Terminals X392	Assignment	
1	Holding brake (X110)	
2	0 V (X110)	
3	Holding brake (X114)	
4	0 V (X114)	

RA 201A, RA 301C, RA 411C:

X393: Motor Holding Brake

Refer to Table 5-19.

Table 5-19, RA 201A, RA 301C, RA 411C:

X393: Motor Holding Brake Pinout

Connecting Terminals X393	Assignment
1	Holding brake (X111)
2	0 V (X111)
3	Holding brake (X112)
4	0 V (X112)
5	Holding brake (X113)
6	0 V (X113)



SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C, RA 201A, RA 301C, RA 411C:

X392/X393 Maximum Current

Maximum current I_{max} for controlling the holding brake via X392 and X393. Refer to **Table 5-20**.

Table 5-20, SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C RA 201A, RA 301C, RA 411C:

X392/X393: Maximum Current

Amplifiers	I _{max} (X392)	I _{max} (X393)
SA 301A, SA 301C, RA 301C	3.0 A	1.5 A
SA 311A	2.0 A	2.0 A
SA 411A, SA 411C, RA 411C	2.0 A	1.5 A
SA 201A, RA 201A	3.0 A	2.0 A

RA 201A, RA 301C, RA 411C:

Main Contactor and Safety Relay

For information on wiring and function, refer to the Basic Circuit diagram for your CNC.

RA 201A, RA 301C, RA 411C:

X70: Main Contactor,

X71: Safety Relay for Spindle, X 72: Safety Relay for Axes

Refer to **Table 5-21**. for axes: for spindle

Table 5-21, RA 201A, RA 301C, RA 411C: X70 Main Contactor, X71 Safety Relay Spindle, and X72 Safety Relay for Axes

Terminals X70 to X72	Assignment
1	+24 V output (maximum 250 mA)
2	0 V
3	+24 V input for U _Z ON, Axis ON, Spindle ON
4	Do not assign
5	Do not assign
6 ^{**1}	Normally closed contact (OE1, OE1A, or OE1S)
7**1	Normally closed contact (OE2, OE2A, or OE2S)

^{**1} Maximum 125 V

Warning: A recovery diode is required in the proximity of inductive loads (for example, relay or contactor coils).



RA 201A, RA 301C, RA 411C: PWM Connection to the CNC

> RA 201A, RA 301C, RA 411C: X110-X114: PWM Connection to the CNC

> > Refer to **Table 5-22**.

Table 5-22, RA 201A, RA 301C, RA 411C: X110–X114 PWM Connection to the CNC

20-Pin Ribbon Connector	Assignment
1a	PWM U1
1b	0 V U1
2a	PWM U2
2b	0 V U2
3a	PWM U3
3b	0 V U3
4 a	SH2
4b	0 V (SH2)
5a	SH1
5b	0 V (SH1)
6a	+I _{Actl 1}
6b	-I _{Actl 1}
7a	0 V (analog)
7b	+I _{Actl 2}
8a	-I _{Acti 2}
8b	0 V (analog)
9a	Do not assign
9b	BRK
10a	ERR
10b	RDY

NOTE: The interface conforms with the requirements of EN 50 178 for "low voltage electrical separation."



RA 201A, RA 301C, RA 411C: Unit Bus

The unit bus connects the amplifier with a PM 107 power module. If you are not using a PM 107, you do not need to connect the unit bus.

RA 201A, RA 301C, RA 411C:

X79: Unit Bus

Refer to **Table 5-23**.

Table 5-23, RA 201A, RA 301C, RA 411C: X79 - Unit Bus Pinout

40-line Ribbon Connector	Assignment	
1a to 3b	O V**1	
4a	+24 V**1	
4b	+24 V**1	These voltages must not be
5a	+15 V**1	linked with other voltages (only basic insulation)!
5b	+24 V**1	(Offig basic insulation):
6a	+15 V**1	
6b	+15 V**1	
7a to 8b	Do not assign	
9a	Reserved (SDA)	
9b	Do not assign	
10a	Reserved (SCL)	
10b	ERR.TEMP	
11a	PF.PS	
11b	0 V	
12a	RES.PS	
12b	0 V	
13a	PWR.OFF	
13b	OV	
14a	5 V FS (spindle enable)	1
14b	0 V	
15a	5 V FA (axis enable)	
15b to 16b	0 V	
17a to 17b	–15 V	
18a to 18b	+ 15 V	
19a to 20b	+15 V	

NOTE: This interface complies with the requirements of EN 50 178 for "low voltage electrical separation" except for 1a to 6a.



Unit Bus - Amplifier to PM 107 Power Module

The unit bus connects the amplifier and the PM 107 power module. If you are not using a PM 107, you do not need to connect the unit bus. Refer to **Table 5-24**.

Table 5-24, Unit Bus Connection Pinout

40-Conductor Ribbon Connector	Assignment	
1a to 3b	0 V **1	
4a	+ 24 V **1	**1 These voltages
4b	+ 24 V **1	must not be linked with other voltages
5a	+ 15 V **1	(insulation limitation).
5b	+ 24 V **1	
6a	+ 15 V **1	
6b	+ 15 V **1	
7a to 8b	Do not assign	
9a	Reserved (SDA)	
9b	Do not assign	
10a	Reserved (SCL)	
10b	ERR.TEMP	
11a	PF.PS	
11b	0 V	
12a	RES.PS	
12b	0 V	
13a	PWR.OFF	
13b	0 V	
14a	5 V FS (spindle enable)	
14b	0 V	
15a	5 V FA (axis enable)	
15b to 16b	0 V	
17a and 17b	- 15 V	
18a and 18b	+ 15 V	
19a to 20b	+ 5 V	

NOTE: The interface complies with the requirements of EN 50 178 for "low voltage electrical separation" (except for 1a to 6b).



BR 18, BR 10F, BR 18F Braking Resistors for SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C Amplifiers

An external braking resistor must be connected to the SA 201A, SA 301C, and SA 411C amplifiers, as these amplifiers are not equipped with an internal braking resistor.

An external braking resistor can also be connected to the SA 301A, SA 311A, and SA 411A amplifiers to be used instead of the internal braking resistor. This may be necessary if the internal resistor fails to fully absorb the excessive braking energy, or if the braking resistor needs to be mounted outside the CNC cabinet.

Either one BR 10F or BR 18F, one BR 18F, one BR 18, or two BR 18 in parallel can be connected to the SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C amplifiers.

The braking resistor is switched on when the amplifier voltage U_z exceeds 700 V and is switched off as soon as the voltage falls below 670 V.

NOTE: If no braking resistor is connected, the amplifier voltage U_z can increase and at $U_z > 760$ V, all power stages are switched off (LED for $U_{DC-LINK} >> lights up)!$

The following topics are described:

- □ Cross Section
- □ X89 Braking Resistor Connection
- □ Temperature Switch on BR 18, BR 10F, and BR 18F Braking Resistor
- X2 Fan for the BR 10F and BR 18F External Braking Resistors

Cross Section

The following cross section is required for connecting the braking resistor. Refer to **Table 5-25**.

Table 5-25, SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C: Cross-Sections for Connection to Braking Resistors

Braking Resistor	Cross Section for Connection	
1 x BR 18	1.5 mm ²	
2 x BR 18F in parallel	4 mm ²	
1 x BR 10F	1.5 mm ²	
1 x BR 18F	4 mm ²	



X89 - Braking Resistor Connection

Refer to Table 5-26, Table 5-27, and Table 5-28.

Table 5-26, SA 301A, SA 301C, SA 411C: X89: Internal Braking Resistor Connections

Connecting Terminal X89A on SA 301A, SA 311A, and SA 411A	Assignment	Connecting Terminal X89B on SA 301A, SA 311A, and SA 411A	Assignment
1	Do not assign	1 -	Jumper
2	Do not assign	2 —	J

Table 5-27, SA 301A, SA 311A, SA 411A:

X89: External Braking Resistor Connections

Connecting Terminal X89B on SA 301A, SA 311A, and SA 411A	Assign- ment	Connecting Terminal X89A on SA 301A, SA 311A, and SA 411A	Assignment	BR 18	BR 10F, BR 18F Connecting Terminal X1
1	Do not assign	1	+U _z	RB 1	1
2	Do not assign	2	Switch against –U _z	RB 2	2

WARNING: Do not operate an internal and external braking resistor in parallel.

Table 5-28, SA 201 A, SA 301C, SA 411C:

X89: Braking Resistor Connections

Connecting Terminal X89 on SA 201A, SA 301C, and SA 411C	Assignment	BR 18	BR 10F, BR 18F Connecting Terminal X1
1	+U _z	RB 1	1
2	Switch against –U _z	RB 2	2



Temperature Switch on BR 18, BR 10F, and BR 18F Braking Resistor

The temperature switch is a normally closed contact and is set to protect the braking resistor from being damaged. It can have a maximum load of 250 V, 5 A. The switch can be connected to a PLC input on the CNC, and can be evaluated via the PLC. Refer to **Table 5-29** and **Table 5-30**.

Table 5-29, BR 18 Temperature Switch Pinout

Connecting Terminal on the BR 18	Assignment
T1	1
T2	2

Table 5-30, BR 10F, BR 18F Temperature Switch Pinout

Connecting Terminal X3 on the BR 10F, BR 18F	Assignment
1	1
2	2

X2 Fan for the BR 10F and BR 18F External Braking Resistors

Refer to Table 5-31.

Table 5-31, BR 10 and BR 18F - X2 Fan Connections Pinout

Connecting Terminal X2	Assignment
+	+ 24 V (PLC)
-	0 V



Connecting the PS 120A Power Supply Unit

X69, X169: CNC Supply Voltage and Control Signals

NOTE: For the control to be able to evaluate the status signals of the power supply units, connector X69 of the CNC must be connected by ribbon cable with X69 of the PS 120A.

Since non-ANILAM amplifiers do not send any status signals, an adapter connector (P/N 349 211-01) must be connected to X69 on the PS 120A. This connector is delivered with the PS 120A.

Table 5-32, PS 120A: X69, X169: CNC Supply Voltage and Control Signals

50-line Ribbon Cable	Assignment
1a to 5b	+5 V
6a to 7b	+12 V
8a	+5 V (low voltage separation)
8b	0 V (low voltage separation)
9a	+15 V
9b	–15 V
10a	UZAN
10b	0 V
11a	IZAN
11b	0 V
12a	RES.PS
12b	0V
13a	PF.PS
13b	GND
14a	ERR.UZ.GR
14b	GND
15a	ERR.UZ.GR
15b	GND
16a	ERR.TEMP

50-line Ribbon Cable	Assignment
16a	GND
17a	RDY PS
17b	GND
18a	ERR.ILEAK
18b	GND
19a	Do not assign
19b	GND
20a	Do not assign
20b	GND
21a	PF.PS.AC (only RA 201A, RA 301C, RA 411C)
21b	GND
22a	Do not assign
22b	GND
23a	Reserved (SDA)
23b	GND
24a	Reserved (SCL)
24b	GND
25a	RES.LE
25b	GND



X31: Supply Voltage for PS 120A

Supply voltage: 400 V

Refer to Table 5-33.

Table 5-33, PX 120A: X31: Power Supply

Connecting Terminals X31	Assignment
Tightening torque for connecting terminals	0.7 Nm (6.5–7 lb/in)
U	Phase 1 / 400 VAC ± 10% / 50 Hz to 60 Hz
V	Phase 2 / 400 VAC ± 10% / 50 Hz to 60 Hz
\(\big 	Equipment ground (YL/GY) ≥ 10 mm ₂
	Cable:
	Wire cross section: 1.5 mm ² (AWG 16
	Line fuse:
	6.5 A (gRL) Siemens Sitor type The screw terminal between X31 and the grounding terminal must be used for fixing the cable and for ensuring appropriate strain relief of the cable.
	Grounding connection:
	≥ 10 mm² (AWG 6)
Tightening torque for connecting terminals	0.7 Nm (6.5–7 lb/in)

NOTE:

- If you are using non-ANILAM inverter systems or regenerative ANILAM inverter systems, you must connect the supply voltage to the terminals U and V via an isolating transformer (300 VA, basic insulation as per EN 50 178 and VDE 0550).
- There is no need for an isolating transformer if non-regenerative ANILAM inverter systems are used.

Warning: When using an isolating transformer, do not ground this isolating transformer on the secondary side!

The isolating transformer decouples the DE-link voltage from ground. Grounding the isolating transformer on the secondary side leads to an addition of the DC-link voltage and the supply voltage. This overloads the PS 120A, thereby destroying it!

Please keep this in mind in your circuit diagrams.



X74: 5 V Connection of the PS 120A

Refer to Table 5-34.

Table 5-34, PS 120A: X74: 5 V Connections

Wire Color of 5 V Connection	5 V Terminal on CC 422
Black	0 V
Red	+5 V

U_z : Supply of the PS 120A with U_z

Since the power to PS 120A is supplied through the DC-link, the voltage fed into the DC-link by the motors that are still running can be used during the voltage failures. The PS 120A uses this voltage to maintain the power supply to the control until the system has been shut down properly by the control. Refer to **Table 5-35**.

Table 5-35, PS 120A: U_z : Supply of the with U_z Connection

Terminals	Assignment
-U _z	DC-link voltage –
+U _z	DC-link voltage +

The PS 120A is powered with DC-link voltage UZ through:

- The conductor bars (for ANILAM inverter systems)
- A cable which is connected instead of the conductor bar (for non-ANILAM inverter systems).



Connecting the BR 9 Braking Resistor Module

The BR 9 braking resistor module must be used when axis motors without brakes are used. In the event of power failure, it dissipates the energy returned by the motors to the DC-link. The BR 9 is switched on when the amplifier voltage U_Z exceeds 740 V and is switched off again as soon as it falls below 720V. The X79 cable provides the data communication to the BR 9.

DANGER: Danger of electrical shock.

Only ANILAM service engineers must open the BR 9 braking resistor

module.

Do not engage or disengage any terminals while they are under power.

X79 Unit Bus

Table 5-36, BR 9 - X79 Unit Bus Connection Pinout

40-line Ribbon]
Connector	Assignment	
1a to 3b	0 V**1	
4a	+ 24 V**1	**1 These voltages
4b	+ 24 V**1	must not be linked with
5a	+ 15 V**1	other voltages (only
5b	+ 24 V**1	basic insulation).
6a	+ 15 V**1	
6b	+ 15 V**1	
7a to 8b	Do not assign	
9a	Reserved (SDA)	
9b	Do not assign	
10a	Reserved (SCL)	
10b	ERR.TEMP	
11a	PF.PS	
11b	0 V	
12a	RES.PS	
12b	0 V	
13a	PWR.OFF	
13b	0 V	
14a	5 V FS (spindle enable)	
14b	0 V	
15a	5 V FA (axis enable)	
15b to 16b	0 V	
17a and 17b	– 15 V	
18a and 18b	+ 15 V	
19a to 20b	+ 5 V	

The interface complies with the requirements of EN 50 178 for NOTE: "low voltage electrical separation" (except for 1a to 6b).



Physical Dimensions

The following products are illustrated:

- SA 301E, SA 411E Amplifiers
- SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C
 Amplifiers
- □ RA 201A, RA 301C, RA 411C Amplifiers
- □ PS 120A Power Supply Unit
- Braking Resistors
- □ <u>CR 135 Commutating</u> Reactor

SA 301E, SA 411E Amplifiers

For SA 301E/SA 411E amplifiers, refer to Figure 5-22.

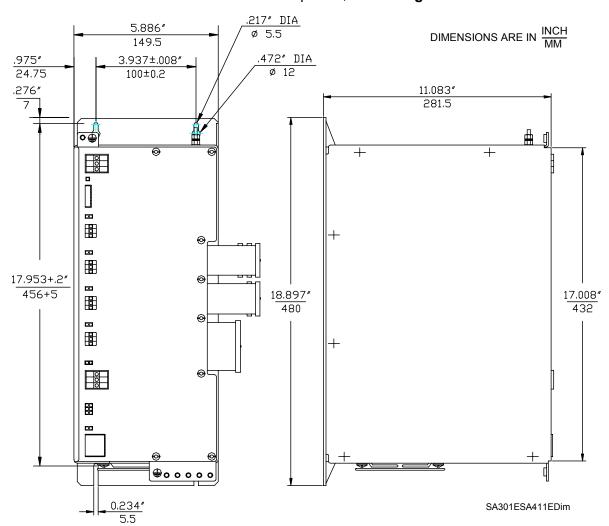


Figure 5-22, SA 301E/SA 411E Amplifiers Dimensions



SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C Amplifiers Refer to Figure 5-23.

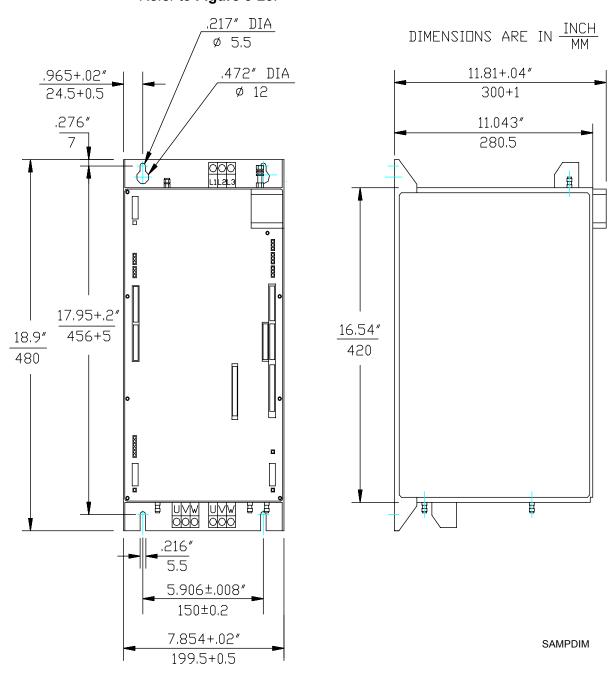


Figure 5-23, SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C Amplifier Dimensions



RA 201A, RA 301C, RA 411C Amplifiers

Refer to Figure 5-24.

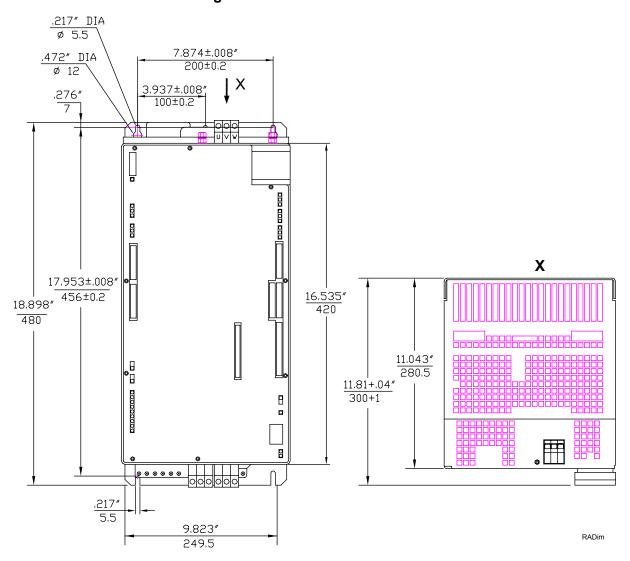


Figure 5-24, RA 201A, RA 301C, RA 411C Amplifier Dimensions



Refer to Figure 5-25. This illustration will be available in the future

Figure 5-25, PS 120A Power Supply Unit Dimensions



Braking Resistors

Refer to **Figure 5-26**, <u>Figure 5-27</u>, <u>BR 18 Braking Resistor Dimensions</u>, <u>Figure 5-28</u>, <u>BR 10F and BR 18F Braking Resistor Dimensions</u>, and <u>Table 5-37</u>, <u>Braking Resistors with Fans</u>.

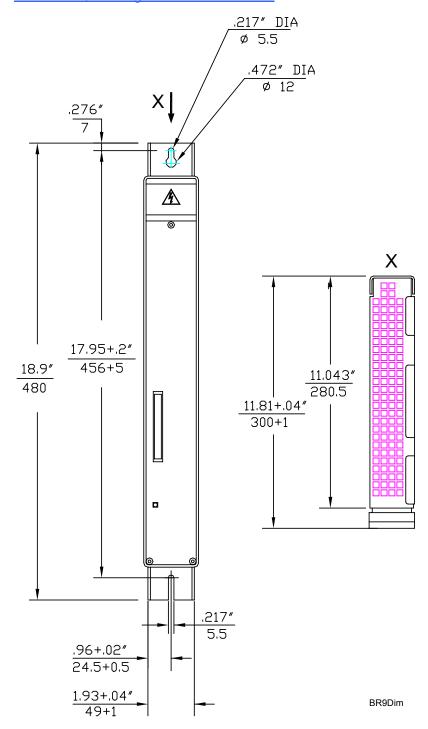


Figure 5-26, BR 9 Braking Resistor Dimensions



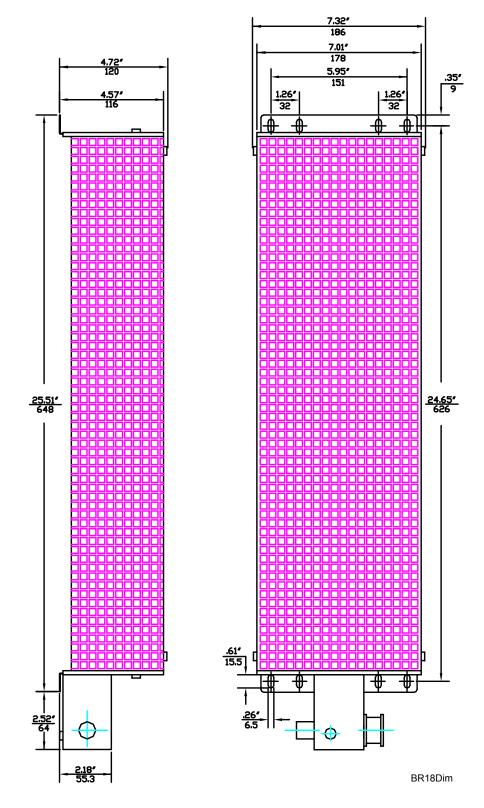


Figure 5-27, BR 18 Braking Resistor Dimensions



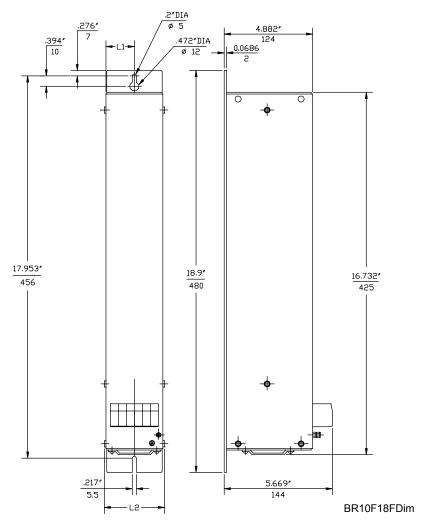


Figure 5-28, BR 10F and BR 18F Braking Resistor Dimensions


Table 5-37, Braking Resistors with Fans

Value	BR 18F	BR 10F
L1	38.5 mm	62.5 mm
	(1.516 in)	(2.461 in)
L2	77 mm	125 mm
	(3.031 in)	(4.921 in)



CR 135 Commutating Reactor

Refer to Figure 5-29.

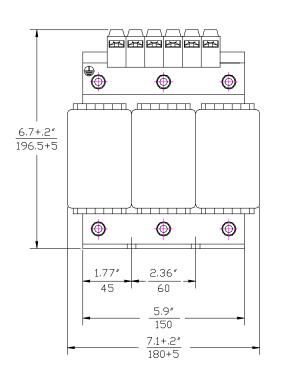

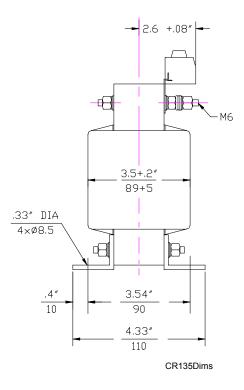


Figure 5-29, CR 135 Dimensions



Section 6 - Installing Modular Amplifiers

The following topics are described in this section:

- Connection Overview
- Mounting and Connection of the Modular Amplifier System
- □ Connection with BR 9 Braking Resistor Module
- Connections on the PM 1xz(A), PM 2xx(A), PMD 1xx, PMD 2xx
 Power Modules
- Connecting the PS 120A Power Supply Unit
- □ Connecting the DLF 1x0 DC-Link Filter
- Connecting the Adapter Module
- Physical Dimensions

Connection Overview

The following components and connections are illustrated:

- □ PS 122R Power Supply Unit
- □ Description of the LEDs on PS 122R
- □ PS 130 Power Supply Unit
- □ Description of the LEDs on PS 130
- PS 145 Power Supply Unit
- □ Description of the LEDs on PS 145R
- □ PM 107 Power Module
- □ PMD 107 Power Module
- PM 115A Power Module
- □ PMD 115 Power Module
- □ PM 123A Power Module
- □ PMD 125 and PMD 140 Power Module
- □ PM 132A and PM 148A Power Module
- □ PMD 160 Power Module
- □ PM 170A Power Module
- □ PMD 196 Power Module
- □ PM 207 Power Module
- □ PMD 207 Power Module
- PM 215A and PM 223A Power Module
- PMD 215 and PMD 225 Power Module
- Description of the LEDs on PM and PMD Power Modules
- □ PS 120A Power Supply Unit
- BR 9 Braking Resistor
- BR 10F and BR 18F Braking Resistor
- □ BR 18 Braking Resistor Module
- □ DLF 130 DC-Link Filter
- Adapter Module



PS 122R Power Supply Unit

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-1.

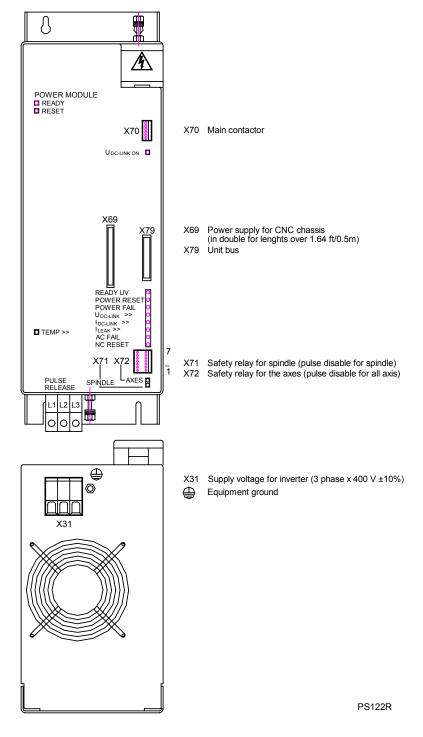


Figure 6-1, PS 122R Power Supply Unit, Connections



Description of LEDs on PS 122R

Refer to **Table 6-1**.

Table 6-1, PS 122R - LEDs Description

LED	Meaning	Signal Direction	Signal
U _{DC LINK ON}	Main contactor on	_	_
READY	End stage ready (only for service purposes)	_	_
RESET	Reset for end stage (only for service purposes)	_	_
READY UV	Supply unit ready	PS > CNC Chassis	RDY.PS
POWER RESET	Reset signal from PS 122R to CNC Chassis	PS > CNC Chassis	RES.PS
POWER FAIL	U_Z too low, U_Z < 410 A (e.g. line power < 290 V)	PS > CNC Chassis	PF.PS
U _{DC LINK} >>	U _z too high (>approx. 800 V); power modules are switched off	PS > CNC Chassis	ERR.UZ.GR
I _{DC LINK} >>	Warning signal to control at I _Z > 52 A**1	PS > CNC Chassis	ERR.IZ.GR
I _{LEAK}	Error current (e.g. through short to earth; warning signal to control)	PS > CNC Chassis	ERR.ILEAK
TEMP >>	Temperature of heat sink too high (>95 °C [203 °F])	PS > CNC Chassis	ERR.TEMP
AC FAIL	Phase missing	PS > CNC Chassis	PF.PS.AC
NC RESET	Reset signal from the CNC Chassis to the PS 122R	CNC Chassis > PS	RES.LE
AXES	Safety relay for axes on	_	_
SPINDLE	Safety relay for spindle on	_	_

^{**1} A further increase of approximately 10 % results in the drives being switched off.



PS 130 Power Supply Unit

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-2.

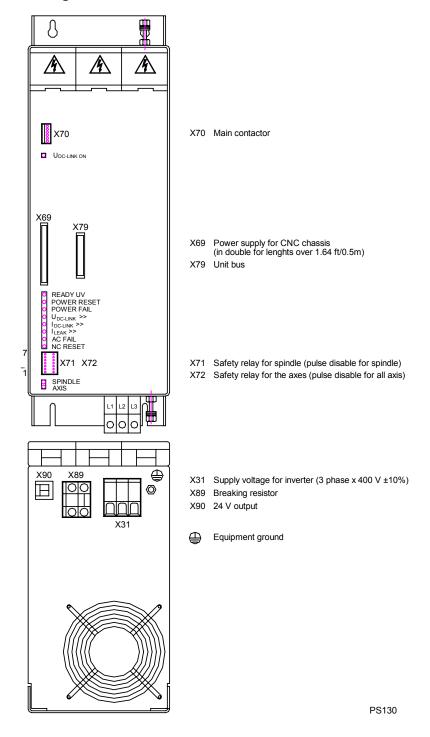


Figure 6-2, PS 130 Power Supply Unit, Connections



Description of LEDs on PS 130

Refer to Table 6-2.

Table 6-2, PS 130 - LEDs Description

LED	Meaning	Signal Direction	Signal
U _{DC LINK ON}	Main contactor on	_	_
READY UV	Supply unit ready	_	RDY.PS
POWER RESET	Reset signal from the PS 130 to CNC Chassis	PS > CNC Chassis	RES.PS
POWER FAIL	U_Z too low, U_Z < 410 A (e.g. line power < 290V)	PS > CNC Chassis	PF.PS
U _{DC LINK} >>	U _Z too high (>approximately 760 V); power modules are switched off	PS > CNC Chassis	ERR.UZ.GR
I _{DC LINK} >>	Warning signal to control at I _Z > 75 A**1	PS > CNC Chassis	ERR.IZ.GR
I _{LEAK}	Error current (e.g. through short to earth; warning signal to control)	PS > CNC Chassis	ERR.ILEAK
TEMP >>	Temperature of heat sink too high (>95 °C [203 °F])	PS > CNC Chassis	ERR.TEMP
NC RESET	Reset signal from the CNC Chassis to the PS 130	CNC Chassis > PS	RES.LE
AXES	Safety relay for axes on	_	_
SPINDLE	Safety relay for spindle on	_	_

^{**1} A further increase of approximately 10 % results in the drives being switched off.



PS 145R Power Supply Unit

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-3.

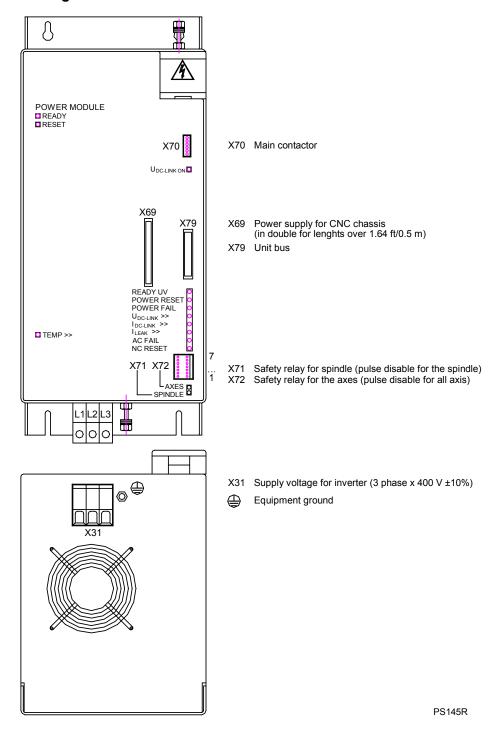


Figure 6-3, PS 145R Power Supply Unit, Connections



Description of LEDs on PS 145R

Refer to Table 6-3.

Table 6-3, PS 145R - LEDs Description

LED	Meaning	Signal Direction	Signal
U _{DC LINK ON}	Main contactor on	_	_
READY	End stage ready (only for service purposes)	_	_
RESET	Reset for end stage (only for service purposes)	_	_
READY UV	Supply unit ready	PS > CNC Chassis	RDY.PS
POWER RESET	Reset signal from the PS 145 to CNC Chassis	PS > CNC Chassis	RES.PS
POWER FAIL	U_Z too low, U_Z < 410 A (e.g. line power < 290 V)	PS > CNC Chassis	PF.PS
U _{DC LINK} >>	U _z too high (>approximately 800 V); power modules are switched off	PS > CNC Chassis	ERR.UZ.GR
I _{DC LINK} >>	Warning signal to control at $I_z > 103 \text{ A}^{**1}$	PS > CNC Chassis	ERR.IZ.GR
I _{LEAK}	Error current (e.g. through short to earth; warning signal to control)	PS > CNC Chassis	EFF.ILEAK
AC FAIL	Phase missing	PS > CNC Chassis	PF.PS.AC
NC RESET	Reset signal from the CNC Chassis to the PS 145	CNC Chassis > PS	RES.LE
TEMP >>	Temperature of heat sink too high (>95 °C [203 °F])	PS > CNC Chassis	ERR.TEMP
AXES	Safety relay for axes on	_	_
SPINDLE	Safety relay for spindle on	_	_

^{**1} A further increase of approximately 10 % results in the drives being switched off.



PM 107 Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-4.

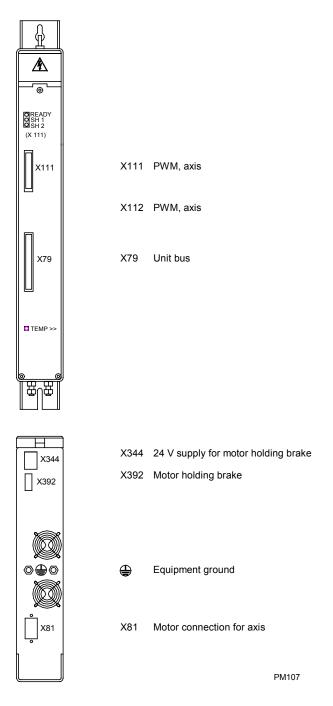



Figure 6-4, PM 107 Power Module, Connections



PMD 107 Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-5.

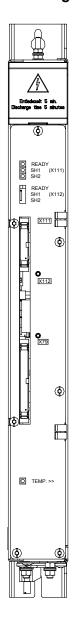

CNTR	DESCRIPTION
X79	Unit BUS
X81	Motor connection for axis
X111	PWM, axis
X344	+24V supply for motor holding brake
X392	Motor holding brake

X81	Assignment
U	Motor connection U
V	Motor connection V
W	Motor connection W


X344	Assignment
1	+24V
2	0V

X392	Assignment
1	Holding brake
2	٥V

MAXIMUM CURRENT FOR HOLDING BRAKE AT CONNECTOR X392 IS 3.0A

LED	Meaning
READY	Pwr module ready
SH1	DSP error, PLC error w/E-STOP,
3111	hardware or software error
SH2	No drive enable
TEMP.>>	IGBT temperature too high

Equipment ground

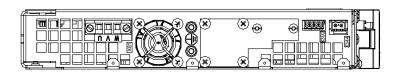

PMD 107 Power Module

Figure 6-5, PMD 107 Power Module, Connections



PM 115A Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-6.

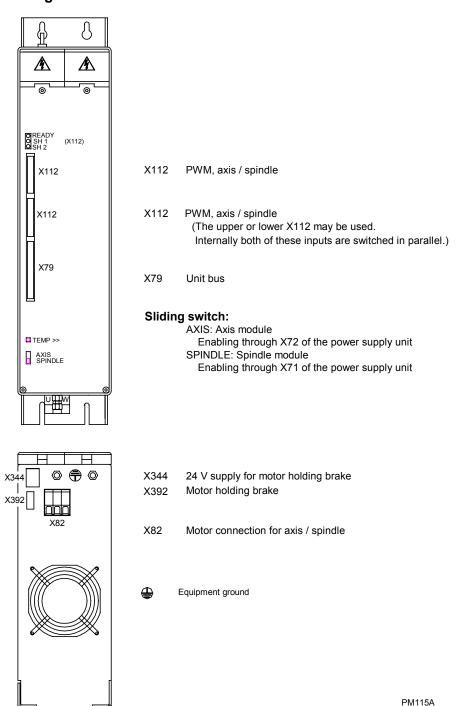



Figure 6-6, PM 115A Power Module, Connections



PMD 115 Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-7.

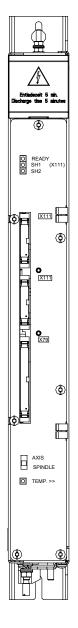

CNTR	DESCRIPTION
X79	Unit BUS
X81	Motor connection for axis / spindle
X111	PWM, axis / spindle
X344	+24V supply for motor holding brake
X392	Motor holding brake

X81	Assignment
U	Motor connection for U
V	Motor connection for V
W	Motor connection for W

X344	Assignment
1	+24V
2	0V

X392	Assignment
1	Holding brake
2	0V

MAXIMUM CURRENT FOR HOLDING BRAKE AT CONNECTOR X392 IS 2.0A


Sliding switch:

AXIS = axis module
Enabling through X72 of power supply unit

SPINDLE = spindle module Enabling through X71 of power supply unit

LED	Meaning
READY	Pwr module ready
SH1	DSP error, PLC error w/E-STOP, hardware or software error
SH2	No drive enable
TEMP.>>	IGBT temperature too high

Equipment ground

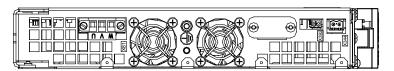

PMD 115 Power Module

Figure 6-7, PMD 115 Power Module, Connections



PM 123A Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-8.

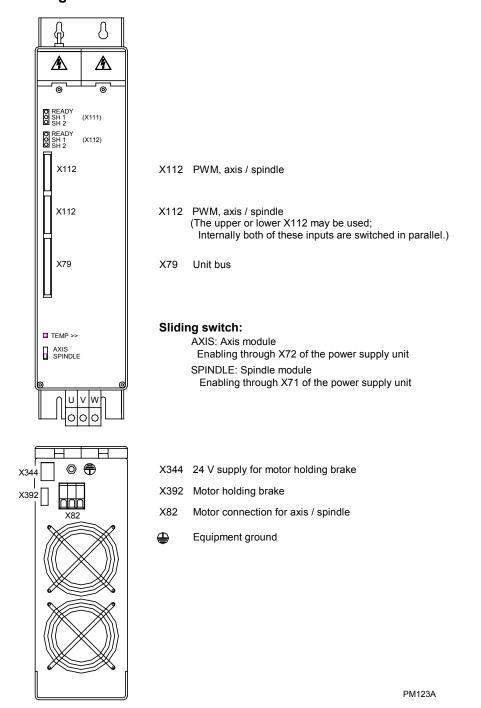



Figure 6-8, PM 123A Power Module, Connections



PMD 125 and PMD 140 Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-9.

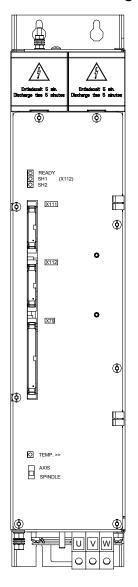

CNTR	DESCRIPTION
X79	Unit BUS
X81	Motor connection for axis / spindle
X112	PWM, axis / spindle
X344	+24V supply for motor holding brake
X392	Motor holding brake

X81	Assignment
U	Motor connection for U
V	Motor connection for V
W	Motor connection for W

X344	Assignment
1	+24V
2	0V

X392	Assignment
1	Holding brake
2	0V

MAXIMUM CURRENT FOR HOLDING BRAKE AT CONNECTOR X392 IS 2.0A


Sliding switch:

AXIS = axis module Enabling through X72 of power supply unit

SPINDLE = spindle module Enabling through X71 of power supply unit

LED	Meaning
READY	Pwr module ready
SH1	DSP error, PLC error w/E-STOP,
	hardware or software error
SH2	No drive enable
TEMP.>>	IGBT temperature too high

Equipment ground

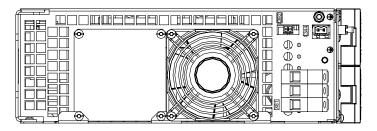

PMD 125-140 Power Module

Figure 6-9, PMD 125 and PMD 140 Power Module, Connections



PM 132A and PM 148A Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-10.

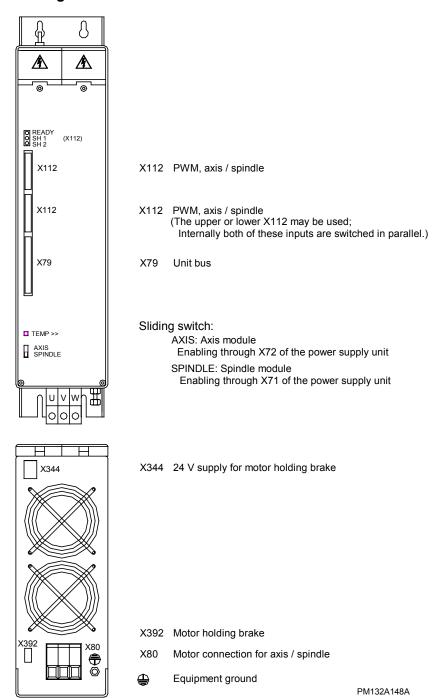



Figure 6-10, PM 132A and PM 148A Power Module, Connections



PMD 160 Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-11.

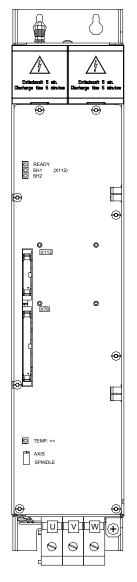

	CNTR	DESCRIPTION
I	X79	Unit BUS
	X81	Motor connection for axis / spindle
	X112	PWM, axis / spindle
	X344	+24V supply for motor holding brake
	X399	Motor holding brake

X81	Assignment
U	Motor connection for U
V	Motor connection for V
W	Motor connection for W

X344	Assignment
1	+24V
2	0V

X392	Assignment
1	Holding brake
2	0V

MAXIMUM CURRENT FOR HOLDING BRAKE AT CONNECTOR X392 IS 2.0A


Sliding switch:

AXIS = axis module Enabling through X72 of power supply unit

SPINDLE = spindle module Enabling through X71 of power supply unit

LED	Meaning
READY	Pwr module ready
SH1	DSP error, PLC error w/E-STOP, hardware or software error
SH2	No drive enable
TEMP.>>	IGBT temperature too high

Equipment ground

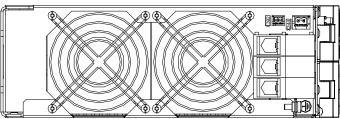

PMD 160 Power Module

Figure 6-11, PMD 160 Power Module, Connections



PM 170A Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-12.

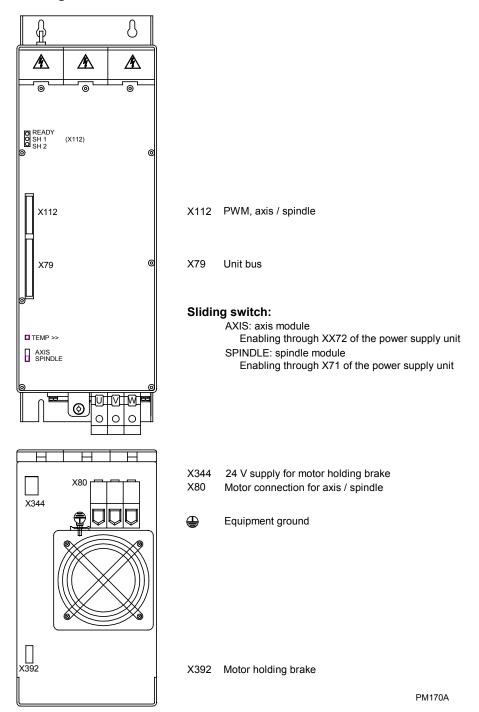



Figure 6-12, PM 170A Power Module, Connections



PMD 196 Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-13.

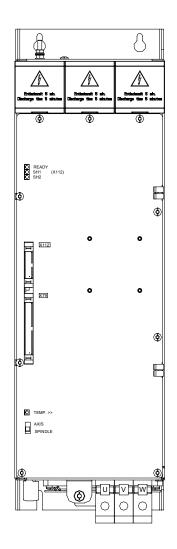

CNTR	DESCRIPTION
V70	
X79	Unit BUS
X80	Motor connection for axis / spindle
X112	PWM, axis / spindle
X344	+24V supply for motor holding brake
X399	Motor holding brake

X80	Assignment
U	Motor connection for U
V	Motor connection for V
W	Motor connection for W

X344	Assignment
1	+24V
2	0V

X392	Assignment
1	Holding brake
2	0V

MAXIMUM CURRENT FOR HOLDING BRAKE AT CONNECTOR X392 IS 2.0A


Sliding switch:

AXIS = axis module Enabling through X72 of power supply unit

SPINDLE = spindle module Enabling through X71 of power supply unit

LED	Meaning
READY	Pwr module ready
SH1	DSP error, PLC error w/E-STOP hardware or software error
SH2	No drive enable
TEMP.>>	IGBT temperature too high



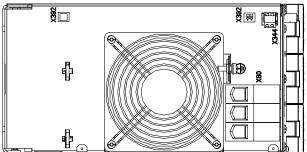

PMD 196 Power Module

Figure 6-13, PMD 196 Power Module, Connections



PM 207 Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-14.

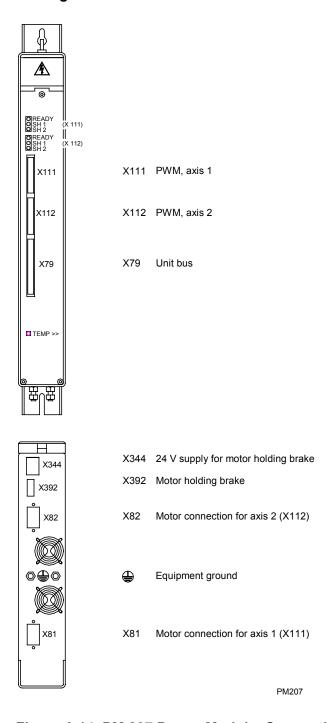



Figure 6-14, PM 207 Power Module, Connections



PMD 207 Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-15.

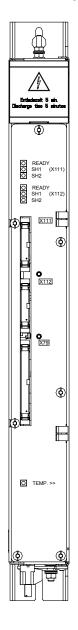

CNTR	DESCRIPTION
X79	Unit BUS
X81	Motor connection for axis 1 (X111)
X82	Motor connection for axis 2 (X112)
X111	PWM, axis 1
X112	PWM, axis 2
X344	+24V supply for motor holding brake
X392	Motor holding brake

X81/X82	Assignment
U	Motor connection U
V	Motor connection V
W	Motor connection W


X344	Assignment
1	+24V
2	0V

X392	Assignment
1	Holding brake
2	٥V

MAXIMUM CURRENT FOR HOLDING BRAKE AT CONNECTOR X392 IS 2.0A

LED	Meaning
READY	Pwr module ready
SH1	DSP error, PLC error w/E-STOP,
ЭПІ	hardware or software error
SH2	No drive enable
TEMP. >>	IGBT temperature too high

Equipment ground

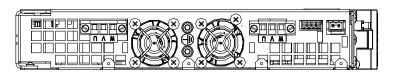

PMD 207 Power Module

Figure 6-15, PMD 207 Power Module, Connections



PM 215A and PM 223A Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-16.

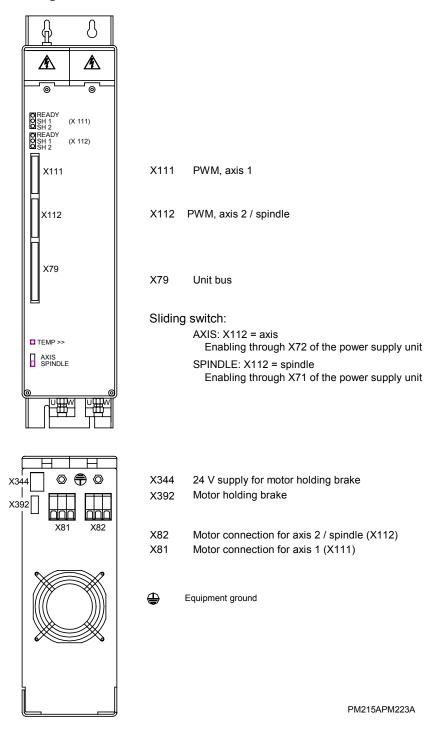



Figure 6-16, PM 215A and PM 223A Power Module, Connections



PMD 215 and PMD 225 Power Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-17.

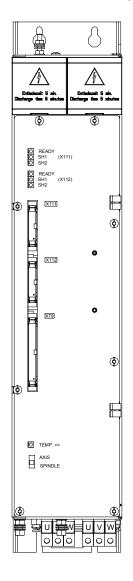

CNTR	DESCRIPTION
X79	Unit BUS
X81	Motor connection for axis 1 (X111)
X82	Motor connection for axis 2 / spindle (X112)
X111	PWM, axis 1
X112	PWM, axis 2 / spindle
X344	+24V supply for motor holding brake
X392	Motor holding brake

X81/X82	Assignment
U	Motor connection for U
V	Motor connection for V
W	Motor connection for W

X344	Assignment
1	+24V
2	0V

X392	Assignment
1	Holding brake
2	0V

MAXIMUM CURRENT FOR HOLDING BRAKE AT CONNECTOR X392 IS 2.0A

Sliding switch:


AXIS: X112 = axis

Enabling through X72 of power supply unit

SPINDLE: X112 = spindle Enabling through X71 of power supply unit

LED	Meaning	
READY	Pwr module ready	
SH1	DSP error, PLC error w/E-STOP,	
эпі	hardware or software error	
SH2	No drive enable	
TEMP.>> IGBT temperature too high		



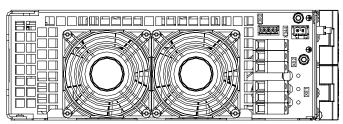

PMD 215-225 Power Module

Figure 6-17, PMD 215 and PMD 225 Power Module, Connections



Description of LEDs on PM and PMD Power Modules

For PM and PMD power modules description of the LEDs refer to **Table 6-4**.

Table 6-4, PM and PMD Power Modules - LEDs Description

LED	Meaning	Signal Direction	Signal
READY	Power module is ready	PM, PMD > CNC Chassis	RDY
SH 1	Flashing DSP error, PLC error with Emergency Stop, CNC Chassis hardware or software error	CNC Chassis > PM, PMD	SH1
SH 2	No drive available (e.g. by the PLC, active via external signal or SH1)	CNC Chassis > PM, PMD	SH2
TEMP >>	Warning signal for Insulated Gate Bipolar Transistor (IGBT) temperature too high	PM, PMD > CNC Chassis	ERR

PS 120A Power Supply Unit

Refer to Figure 5-12, PS 120A Power Supply Unit and "Section 5, "Connecting the PS 120A Power Supply Unit."



BR 9 Braking Resistor

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-18.

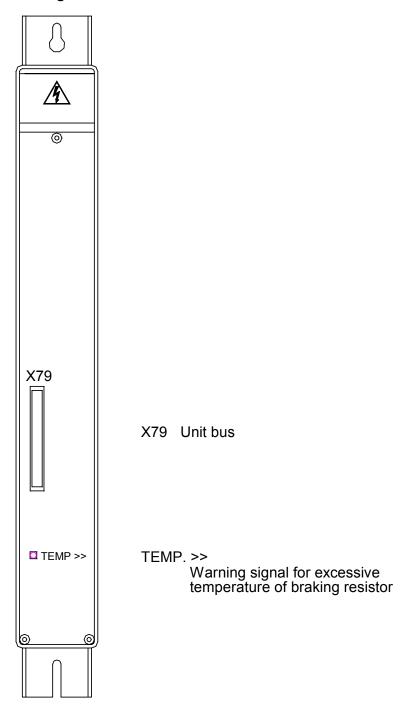


Figure 6-18, BR 9 Connections



BR 10F and BR 18F Braking Resistor

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-19.

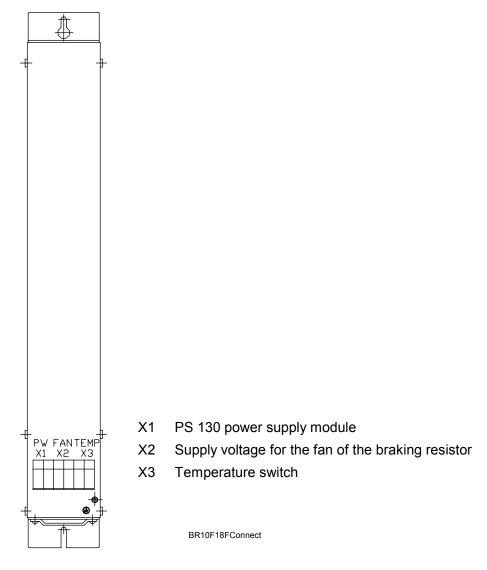


Figure 6-19, BR 10F and BR 18F Connections



BR 18 Braking Resistor Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-20.

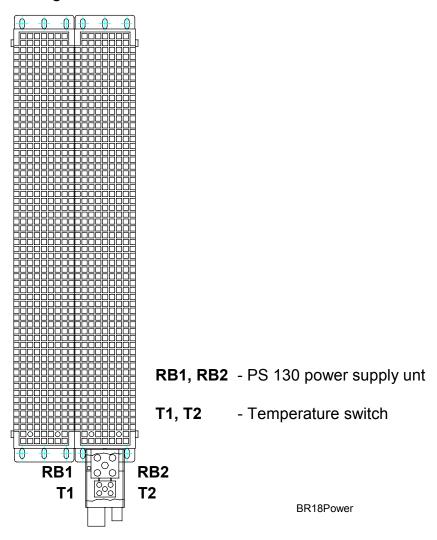


Figure 6-20, BR 18 Braking Resistor Module, Connections



DLF 130 DC-Link Filter

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

This illustration will be available in the future

Figure 6-21, DLF 130 DC-Link Filter, Connections



Adapter Module

DANGER: Do not engage or disengage any connecting elements while the unit is under power!

See Figure 6-22.

This illustration will be available in the future

Figure 6-22, Adapter Module, Connections



Mounting and Connection of the Modular Amplifier System

The following topics are described:

- Arranging the Modules
- Connecting the Modules
- Direct Drives
- Module Covers
- Additional Power Supply
- Mounting the Modular Amplifier System
- Connecting the Motors
- Connections on the PS 130 Power Supply Units
- Connections on the PS 122R and PS 145R Power Supply Units

Arranging the Modules

The power modules are arranged between the PS 1xx(R) power supply unit and the logic unit. The power module for the spindle is placed next to the PS 1xx(R) power supply unit, and the power modules for the axes are then place in order of decreasing rated current.

If the BR 9 braking resistor module is used together with the PS 122R and PS 145R energy-recovery power modules, the braking resistor is arranged between the weakest power module and the CNC Chassis. See **Figure 6-23**.

PS 1xx(R)	PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx for the first spindle	PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx for the second spindle (not on all controls)	Optional DLF 1x0	PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx	Optional BR 9 (only PS 122R or PS 145R)	CNC Chassis
-----------	---	---	---------------------	---	--	----------------

Figure 6-23, Configuration of Amplifier, CNC, and Power Supply



Connecting the Modules

The DC-link power supply U_Z is supplied to the amplifier modules for the PS 1xx power supply unit via power bars (screwed into each module, and if required, the BR 9 braking resistor.

A further power conductor bar establishes the ground connection between the individual modules.

Three power conductor bars are included as accessories with the power modules (two for the DC-link, one for the ground.)

The 50-line ribbon cable connects the CNC Chassis with the PS 1xx(R) and supplies the power to the CNC Chassis.

The 40-line ribbon cable connects the PS 1xx with the power modules and, if required, the BR 9, forming the unit base.

The 20-line ribbon cables connect the CNC Chassis and the power modules, and supply the PWM signals of the axes and the spindle(s).

Direct Drives

Direct drives (linear motors, torque motors) used in conjunction with regenerative inverter systems require a DLF 1x0 DC-link filter, which is mounted to the left of the direct drives' power modules. The DC-link current is then led through this filter.

Module Covers

The ribbon cables must be covered to protect against interference.

A cover is supplied as an accessory with the PS 1xx(R) (P/N 12324567), which protects the following modules:

- PS 1xx(R)
- PM 170A or
- One power module (PM 1xx(A), PM 2xx(A), PMD 1xx, or PMD 2xx) (100 mm width), and
 One power module (PM 1xx(A), PM 2xx(A), PMD 1xx, or PMD 2xx) (50 mm width)

The cover for the CNC Chassis is supplied with the CNC Chassis.

If further power modules are used, the corresponding covers must be ordered separately.



Additional Power Supply

If several encoders with a high current consumption (e.g., encoders with EnDat interface) are connected, an additional power supply source used in conjunction with the amplifier or a power supply unit might become necessary. The additional PS 120A power supply unit can be used for this purpose. It is mounted next to the CNC at its left.

The power supply unit is connected to the DC-link voltage via the conductor bar of the previous left module. The upper conductor bar also establishes the ground connection of the DE-link.

The 50-line ribbon cable of the amplifier / power supply unit for transmitting the status signals is connected to X69 of the PS 120A. The free ribbon cable of the PS 120A is connected to X69 of the CNC.

The 5 V power supply (X74) of the PS 120A is connected to the terminals on the CNC (X74) by means of the wires included in the PS 120A items supplied.



Mounting the Modular Amplifier System Refer to Figure 6-24.

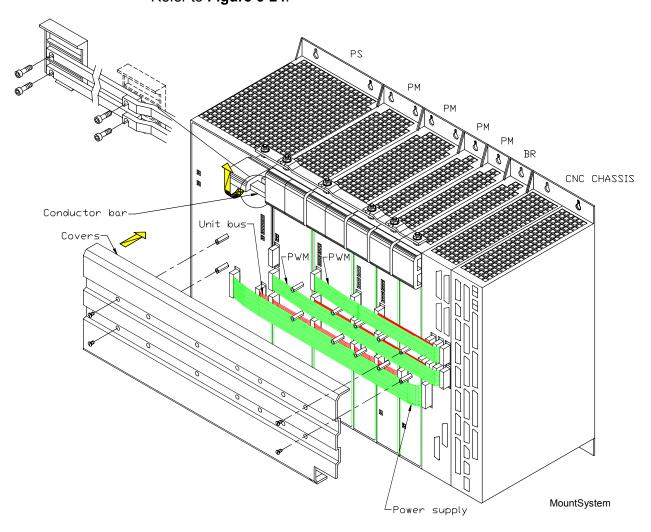


Figure 6-24, Mounting the Modular Amplifier System

WARNING: All electrical screw connections must be tightened after installation is complete (tightening torque 3.5 Nm).



Connecting the Motors

The shield of the lines for the holding brake is to be kept as close as possible (< 1.18 in. [30 mm]) to ground. The best solution is to fasten the shield with a metal clamp directly onto the sheet metal housing of the electrical cabinet. Refer to **Figure 6-25**.

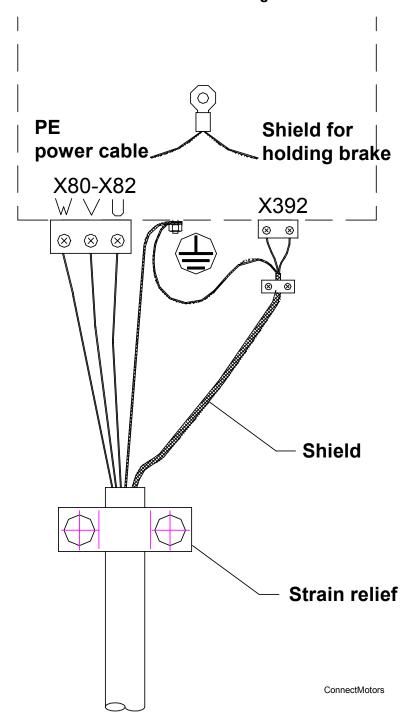


Figure 6-25, Connecting the Motors



Connections on the PS 130 Power Supply Units

DANGER: Danger of electrical shock!

The power supply unit may be opened only by ANILAM service engineers.

Do not engage or disengage any terminals while they are under power.

PS 130 - X31: Supply Voltage for Uz

With a power supply voltage of 400 V, the modular amplifier voltage U_Z is 565 VDC. Refer to **Table 6-5**.

Table 6-5, PS 130 - X31: Supply Voltage for Uz

Terminals	Assignment PS 130		
L1	400 VAC ± 10%		
L2	50 Hz to 60 Hz		
L3			
	Cable: (single conductor (HT wire)) Wire cross section: 16 mm² Line fuse: 63 A (gRL) Siemens Sitor type Grounding terminal: ≥ 10 mm²		
Tightening torque for connecting terminals:	4–4.5 Nm (35–40 lb-in)		

NOTE: EN 50 178 requires a non-detachable connection to the line power supply.

NOTE: If the power supply is other than 400 V, an autotransformer is required. It must comply at least with the connection specifications of the subsequent power supply unit.



PS 130 - Main Contactor and Safety Relay

PS 130 - X70: Main Contactor

Refer to Table 6-6.

Table 6-6, PS 130 - X70: Main Contactor Pinout

Connection Terminal X70	Assignment	
1	+24 V output (maximum 250 mA)	
2	0 V	
3	+24 V input for U _Z ON	
4	Do not assign	
5	Do not assign	
6** ¹	Normally closed contact (OE1)	
7**1	Normally closed contact (OE2)	

^{**&}lt;sup>1</sup> Maximum 125 V

Warning: A recovery diode is required in the proximity of the inductive loads, (for example, relay or contactor coils).

PS 130 - X71: Safety Relay Spindle, X72: Safety Relay Axes

Refer to Table 6-7.

Table 6-7, PS 130 - X71: Safety Relay Spindle, X72: Safety Relay Axes Pinout

Terminals X71 and X72	Assignment	
1	+24 V output (maximum 250 mA)	
2	0 V	
3	+24 V input for Axis ON, Spindle ON	
4	Do not assign	
5	Do not assign	
6** ¹	Normally closed contact (OE1A or OE1S)	
7** ¹	Normally closed contact (OE2A or OES2)	

^{**1} Maximum 125 V

Warning: A recovery diode is required in the proximity of the inductive loads, (for example, relay or contactor coils).



PS 130 - X90: 24 V Output (PS 130 only)

Refer to Table 6-8.

Table 6-8, PS 130 - X90: 24 V Output Pinout

Connection Terminal X90	Assignment	
+	+24 V (maximum 250 mA)	
-	0 V	

PS 130 - X69: CNC Power Supply and Control Signals

With lengths of 25.62 inches (600 mm) and longer, the 50-line ribbon cable for the CNC power supply and control signals is led doubled to the CNC Chassis to increase the wire cross section. Refer to **Table 6-9**.

Table 6-9, PS 130 - X69: CNC Supply Voltage and Control Signals Pinout

50-line Ribbon Connector	Assignment	
1a to 5b	+5 V	
6a to 7b	+12 V	
8a	+5 V (low-voltage separation)	
8b	0 V (low-voltage separation)	
9a	+15 V	
9b	–15 V	
10a	UZAN	
10b	0 V	
11a	IZAN	
11b	0 V	
12a	RES.PS	
12b	0 V	
13a	PF.PS	
13b	GND	
14a	ERR.UZ.GR	
14b	GND	
15a	ERR.IZ.GR	
15b	GND	
16a	ERR.TEMP	

50-line Ribbon Connector	Assignment	
16b	GND	
17a	RDY.PS	
17b	GND	
18a	ERR.ILEAK	
18b	GND	
19a	Do not assign	
19b	GND	
20a	Do not assign	
20b	GND	
21a	0 V	
21b	GND	
22a	0 V	
22b	GND	
23a	Reserved (SDA)	
23b	GND	
24a	Reserved (SCL)	
24b	GND	
25a	RES.LE	
25b	GND	

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation.



PS 130 – X74: 5 V Power Supply (PS 130 only)

Refer to **Table 6-10**.

Table 6-10, PS 130 - X74: 5 V Power Supply Pinout

Connection Terminal X74	Assignment	
+	+5 V (load capacity 20 A)	
_	0 V	

PS 130 - X79: Unit Bus

Refer to Table 6-11.

Table 6-11, PS 130 - X79 Unit Bus Pinout

40-line Ribbon Connector	Assignment	
1a to 3b	0 V ** ¹	**1 These voltages may
4a	+24 V ** ¹	not be linked with other
4b	+24 V ** ¹	─voltages (insulation —limitation).
5a	+15 V ** ¹	
5b	+24 V ** ¹	
6a	+15 V ** ¹	
6b	+15 V ** ¹	
7a to 8b	Do not assign	
9a	Reserved (SDA)	
9b	Do not assign	
10a	Reserved (SCL)	
10b	ERR.TEMP	
11a	PF.PS	
11b	0 V	
12a	RES.PS	
12b	0 V	
13a	PWR.OFF	
13b	0 V	
14a	5 V FS (spindle enable)	
14b	0 V	
15a	5 V FA (axes enable)	
15b to 16b	0 V	
17a and 17b	–15 V	
18a and 18b	+15 V	
19a to 20b	+5 V	
•		•

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation (except for 1a to 6b).



Connecting the Braking Resistors to the PS 130 Power Supply Unit

The following topics are described:

- □ PS 130: Cross Section
- □ PS 130: X89: Terminal for Braking Resistors
- □ PS 130: BR 18 and BR 18F Temperature Switch
- PS 130: X2: Fan for the BR 10F and BR 18F External Braking Resistor

One BR 10F, BR 18, BR 18F, or two BR 18 braking resistors in parallel must be connected with the PS 130 power supply unit.

The braking resistor is switched on when the modular amplifier voltage U_Z exceeds 700 V and is switched off again as soon as it falls below 670 V.

1	NOTE:	If no braking resistor is connected, the modular amplifier voltage
		U_Z can increase and at $U_Z > 800 \text{ V}$ all power stages will be
		switched off (LED for U _{DC-LINK} >> lights up)!

PS 130: Cross Section

The following cross section is required for connecting the braking resistor. Refer to **Table 6-12**.

Table 6-12, PS 130: Braking Resistors Cross Section

Braking Resistor	Cross Section
BR 18	1.5 mm ²
2 x BR 18 in parallel	4.0 mm ²
BR 18F	1.5 mm ²
BR 10F	4.0 mm ²



PS 130: X89: Terminal for Braking Resistors

For BR 18, refer to **Table 6-13**.

Table 6-13, PS 130: X89: BR 18 Terminal Connection

Connecting Terminal X89	Assignment	BR 18 Braking Resistor
1	+U _Z	RB1
2	Switch against –U _Z	RB2

For BR 10F and BR 18F, refer to Table 6-14.

Table 6-14, PS 130: X89: BR 10F and BR 18F Terminal Connection

Connecting Terminal X89	Assignment	BR 10F and BR 18F Braking Resistor, Connecting Terminal X1
1	+U _Z	1
2	Switch against –U _Z	2

PS 130: BR 18 and BR 18F Temperature Switch

The temperature switch is a normally closed contact and is set to protect the braking resistor from being damaged. It can have maximum load: 250V, 5 A. The switch can be connected to a PLC input on the CNC Chassis and evaluated via the PLC. Refer to **Table 6-15** and **Table 6-16**.

Table 6-15, PS 130: BR 18, Temperature Switch Pinout

BR 18 Connecting Terminal	Assignment
T1	1
T2	2

Table 6-16, PS 130: BR 18F, Temperature Switch Pinout

BR 18F Connecting Terminal	Assignment
1	1
2	2



PS 130: X2: Fan for the BR 10F and BR 18F External Braking Resistor

Refer to **Table 6-17** for the external braking resistors: BR 10F and BR 18F.

Table 6-17, PS 130 - X2 Fan for BR 10F and BR 18F

Connecting Terminal X2	Assignment
+	+24 V (PLC)
_	0 V

Connections on the PS 122R and PS 145R Power Supply Units

DANGER: Danger of electrical shock!

The power supply unit may be opened only by ANILAM service engineers.

Do not engage or disengage any terminals while they are under power.

The following topics are described:

- □ PS 122R and PS 145R: X31: Supply Voltage for U_Z
- □ PS 122R and PS 145R Main Contactor and Safety Relay
- □ PS 122R and PS 145R: X69: CNC Power Supply and Control Signals
- □ PS 122R and PS 145R: X79: Unit Bus
- □ PS 122R and PS 145R: X74: 5 V Power Supply (PS 130 only)



PS 122R and PS 145R: X31: Supply Voltage for Uz

The modular amplifier voltage U_Z is 650 VDC. Refer to **Table 6-18**.

The regenerative power supply units must be connected to the main power line via a commutating reactor and a line filter. This is necessary for keeping the main line free of disruptive higher harmonics.

Table 6-18, PS 122R and PD 145R: X31: Supply Voltage for Uz

Terminals	Assignment PS 122R and PS 145R	
L1	400 VAC ± 10%	
L2	50 Hz to 60 Hz	
L3		
PE		
	PS 122R:	
	Cable: (single conductor (HT wire))	
	Wire cross section: 10 mm ²	
	Single conductor: H07 V2-K: 6 mm ²	
	Line fuse: 35 A (gRL) Siemens Sitor type	
	Grounding terminal: ≥ 10 mm²	
Tightening torque for connecting terminals:	2.0–2.3 Nm (18–20.5 lb-in)	
	PS 142R:	
	Cable: (single conductor (HT wire))	
	Wire cross section: 35 mm ²	
	Single conductor: H07 V2-K: 25 mm ²	
	Line fuse: 80 A (gRL) Siemens Sitor type	
	Grounding terminal: ≥ 16 mm ²	
Tightening torque for connecting terminals:	4.0–4.5 Nm (35–40 lb-in)	

NOTE: The cables between the power supply unit and commutating reactor as well as between the commutating reactor and line filter must be as short as possible (< 1.3 ft (0.4 m)).



PS 122R and PS 145R - Main Contactor and Safety Relay

The following topics are described:

□ PS 122R and PS 145R: X70: Main Contactor

□ PS 122R and PS 145R: X71: Safety Relay Spindle, X72: Safety Relay Axes

PS 122R and PS 145R: X70: Main Contactor

Refer to Table 6-19.

Table 6-19, PS 122R and PS 145R: X70: Main Contactor Pinout

Connection Terminal X70	Assignment
1	+24 V output (maximum 250 mA)
2	0 V
3	+24 V input for U _Z ON
4	Do not assign
5	Do not assign
6** ¹	Normally closed contact (OE1)
7** ¹	Normally closed contact (OE2)

^{**1} Maximum 125 V

Warning: A recovery diode is required in the proximity of the inductive loads, (for example, relay or contactor coils).

PS 122R and PS 145R: X71: Safety Relay Spindle, X72: Safety Relay Axes Refer to Table 6-20.

Table 6-20, PS 122R and PS 145R: X71: Safety Relay Spindle, X72: Safety Relay Axes Pinout

Terminals X71 and X72	Assignment
1	+24 V output (maximum 250 mA)
2	0 V
3	+24 V input for Axis ON, Spindle ON
4	Do not assign
5	Do not assign
6** ¹	Normally closed contact (OE1A or OE1S)
7** ¹	Normally closed contact (OE2A or OES2)

^{**&}lt;sup>1</sup> Maximum 125 V

Warning: A recovery diode is required in the proximity of the inductive loads, (for example, relay or contactor coils).



PS 122R and PS 145R: X69: CNC Power Supply and Control Signals

With lengths of 25.62 inches (600 mm) and longer, the 50-line ribbon cable for the CNC power supply and control signals is led doubled to the CNC Chassis to increase the wire cross section. Refer to **Table 6-21**.

Table 6-21, PS 122R and PS 145R: X69: CNC Supply Voltage and Control Signals Pinout

50-line Ribbon Connector	Assignment
1a to 5b	+5 V
6a to 7b	+12 V
8a	+5 V (low-voltage separation)
8b	0 V (low-voltage separation)
9a	+15 V
9b	–15 V
10a	UZAN
10b	0 V
11a	IZAN
11b	0 V
12a	RES.PS
12b	0 V
13a	PF.PS.ZK
13b	GND
14a	ERR.UZ.GR
14b	GND
15a	ERR.IZ.GR
15b	GND
16a	ERR.TEMP

50-line Ribbon Connector	Assignment
16b	GND
17a	RDY.PS
17b	GND
18a	ERR.ILEAK
18b	GND
19a	PF.PS.AC
19b	GND
20a	Do not assign
20b	GND
21a	Do not assign
21b	GND
22a	0 V
22b	GND
23a	Reserved (SDA)
23b	GND
24a	Reserved (SCL)
24b	GND
25a	RES.LE
25b	GND

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation.



PS 122R and PS 145R: X79: Unit Bus

Refer to **Table 6-22**.

Table 6-22, PS 122R and PS 145R: X79: Unit Bus Pinout

40-line Ribbon Connector	Assignment	
1a to 3b	0 V ** ¹	**1 These voltages
4a	+24 V ** ¹	may not be linked
4b	+24 V ** ¹	with other voltages (insulation limitation).
5a	+15 V ** ¹	
5b	+24 V ** ¹	
6a	+15 V ** ¹	
6b	+15 V ** ¹	
7a to 8b	Do not assign	
9a	Reserved (SDA)	
9b	Do not assign	
10a	Reserved (SCL)	
10b	ERR.TEMP	
11a	PF.PS	
11b	0 V	
12a	RES.PS	
12b	0 V	
13a	PWR.OFF	
13b	0 V	
14a	5 V FS (spindle enable)	
14b	0 V	
15a	5 V FA (axes enable)	
15b to 16b	0 V	
17a and 17b	–15 V	
18a and 18b	+15 V	
19a to 20b	+5 V	

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation (except for 1a to 6b).

PS 122R and PS 145R: X74: 5 V Power Supply (PS 130 only)

Refer to Table 6-23.

Table 6-23, PS 122R and PS 145R: X74: 5 V Power Supply Pinout

Connection Terminal X74	Assignment
+	+5 V (load capacity 20 A)
-	0 V



Connections with BR 9 Braking Resistor Module

The BR 9 braking resistor module must be used when axis motors with brakes are used. In the event of power failure, it dissipates the energy returned by the motors to the DC-link. The BR 9 is switched on when the inverter voltage U_Z exceeds 740 V and is switched off again as soon as it falls below 720 V. Refer to **Table 6-24**.

DANGER: Danger of electrical shock!

The BR 9 braking resistor module may be opened only by ANILAM service engineers.

Do not engage or disengage any terminals while they are under power.

Table 6-24, BR 9 - X79: Unit Bus Pinout

40-line Ribbon Connector	Assignment	
1a to 3b	0 V ** ¹	**1 These voltages
4a	+24 V ** ¹	may not be linked
4b	+24 V **1	with other voltages
5a	+15 V ** ¹	(insulation limitation).
5b	+24 V ** ¹	
6a	+15 V ** ¹	
6b	+15 V ** ¹	
7a to 8b	Do not assign	
9a	Reserved (SDA)	
9b	Do not assign	
10a	Reserved (SCL)	
10b	ERR.TEMP	
11a	PF.PS	
11b	0 V	
12a	RES.PS	
12b	0 V	
13a	PWR.OFF	
13b	0 V	
14a	5 V FS (spindle enable)	
14b	0 V	
15a	5 V FA (axes enable)	
15b to 16b	0 V	
17a and 17b	–15 V	
18a and 18b	+15 V	
19a to 20b	+5 V	

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation (except for 1a to 6b).



Connections on the PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx Power Modules

DANGER: Danger of electrical shock!

Only ANILAM service engineers must open the PM 1xx and PM 2xx power supply unit.

Do not engage or disengage any terminals while they are under power.

The following topics are described:

- PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx PWM connection to the CNC Chassis
- □ PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx X79: Unit Bus
- □ PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx − Motor Connections
- □ PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx Connection of the Motor Holding Brakes



PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx – PWM Connection to the CNC Chassis

For PM 107, PM 115A, PM 123A, PM 132A, PM 148A, PM 170A, PM 207, PM 215A, PM 223A, PMD 107, PMD 115, PMD 125, PMD 140, PMD160, PMD 196, PMD 207, PMD 215, and PMD 225 power modules PWM connection (X111, X112) to the CNC Chassis refer to **Table 6-25**.

Table 6-25, X111, X112 PWM Connection to the CNC Chassis Pinout

Ribbon Connector 20-pin	Assignment
1a	PWM U1
1b	0 V U1
2a	PWM U2
2b	0 V U2
3a	PWM U3
3b	0 V U3
4a	SH2
4b	0 V (SH2)
5a	SH1
5b	0 V (SH 1)
6a	+I _{actl} 1
6b	-l _{actl} 1
7a	0 V (analog)
7b	+I _{acti} 2
8a	-I _{acti} 2
8b	0 V (analog)
9a	Do not assign
9b	BRK
10a	ERR
10b	RDY

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation.



PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx - X79: Unit Bus

For PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx power modules X79 unit bus connections pinout refer to **Table 6-26**.

Table 6-26, PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx: X79: Unit Bus Pinout

40-line Ribbon Connector	Assignment	
1a to 3b	0 V ** ¹	**1 These voltages
4a	+24 V ** ¹	may not be linked with other voltages
4b	+24 V ** ¹	(insulation limitation).
5a	+15 V ** ¹	,
5b	+24 V ** ¹	
6a	+15 V ** ¹	
6b	+15 V ** ¹	
7a to 8b	Do not assign	
9a	Reserved (SDA)	
9b	Do not assign	
10a	Reserved (SCL)	
10b	ERR.TEMP	
11a	PF.PS	
11b	0 V	
12a	RES.PS	
12b	0 V	
13a	PWR.OFF	
13b	0 V	
14a	5 V FS (spindle enable)	
14b	0 V	
15a	5 V FA (axes enable)	
15b to 16b	0 V	
17a and 17b	–15 V	
18a and 18b	+15 V	
19a to 20b	+5 V	

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation (except for 1a to 6b).



PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx - Motor Connections

For PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx power modules X81 and X82 motor connections pinout refer to **Table 6-27**.

Table 6-27, PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx: X81, X82: Axis/Spindle Motor Connections Pinout

Terminals X81, X82	Assignment
U	Motor connection U
V	Motor connection V
W	Motor connection W

For information on synchronous (axis) motors, asynchronous (spindle) motors, and power cables, refer to "Section 7, Available Motors and Accessories."

PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx – Connection of the Motor Holding Brakes

The following topics are described:

- □ PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx: X344: 24-V Supply for Motor Holding Brake
- PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx: X392: Motor Holding Brake

PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx: X344: 24-V Supply for Motor Holding Brake

For PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx power modules X344 24-V supply for the motor holding brake pinout refer to **Table 6-28**.

Table 6-28, PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx: X344: 24-V Supply for Motor Holding Brake Pinout

Connecting Terminal X344	Assignment
1	+24 V
2	0 V



PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx: X392: Motor Holding Brake

For PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx power modules X392 connection of the motor holding brake pinout refer to **Table 6-29** (2-pin pinout) and/or **Table 6-30** (4-Pin Pinout). For X392 maximum current for controlling the holding brake, refer to **Table 6-31**.

Table 6-29, PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx: X392: Motor Holding Brake (2-Pin Pinout)

Connecting Terminal X392	Assignment
1	Holding brake
2	0 V

Table 6-30, PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx: X392: Motor Holding Brake (4-Pin Pinout)

Connecting Terminal X392	Assignment
1	Holding brake (X112)
2	0 V (X112)
3	Holding brake (X111)
4	0 V (X111)

Table 6-31, PM 1xx(A), PM 2xx(A), PMD 1xx, PMD 2xx: X392:

Maximum Current I_{max} for Controlling the Holding Brake

Power Module	I _{max}
PM 1xx(A)	3.0 A
PM 2xx(A)	2.0 A

Connecting the PS 120A Power Supply Unit

Refer to "Section 5, Connecting the PS 120A Power Supply Unit."



Connecting the DLF 1x0 DC-Link Filter

Direct drives (linear motors, torque motors) used with regenerative inverter systems result in voltage peaks, which might destroy the drive. If you are using direct drives in conjunction with regenerative RA 201A, RA 301C, RA 411C inverters, you must use the DLF 1x0 DC-link filter.

X79: Unit bus (only DLF 130)

Refer to Table 6-32.

Table 6-32, DLF 130: X79: Unit Bus Pinout

40-line Ribbon Connector	Assignment	
1a to 3b	0 V ** ¹	**1 These voltages
4a	+24 V ** ¹	may not be linked
4b	+24 V ** ¹	with other voltages (only basic
5a	+15 V ** ¹	insulation).
5b	+24 V **1	
6a	+15 V ** ¹	
6b	+15 V ** ¹	
7a to 8b	Do not assign	
9a	Reserved (SDA)	
9b	Do not assign	
10a	Reserved (SCL)	
10b	ERR.TEMP	
11a	PF.PS	
11b	0 V	
12a	RES.PS	
12b	0 V	
13a	PWR.OFF	
13b	0 V	
14a	5 V FS (spindle enable)	
14b	0 V	
15a	5 V FA (axes enable)	
15b to 16b	0 V	
17a and 17b	–15 V	
18a and 18b	+15 V	
19a to 20b	+5 V	

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation (except for 1a to 6b).



Uz: DC-Link Voltage

The inverters for the direct drives are mounted to the right of the DLF DC-link filter in order to separate the DC-link of the direct drives from the DC-link of the conventional drives through the filter. Refer to **Table 6-33**.

Table 6-33, DC-Link Filter Connecting Terminals

Connecting Terminals	Assignment
–U _z in	DC-link voltage –, from power supply unit
+U _z in	DC-link voltage +, from power supply unit
–U _z out	DC-link voltage –, to direct drives
+Uzout	DC-link voltage +, to direct drives

The DC-link is mounted by using:

- The conductor bars (for ANILAM inverter systems).
- A cable which is connected instead of the conductor bar (for non-ANILAM inverter systems).



Connecting the Adapter Module

The following topics are described:

- □ General
- Important Notes for the Connection
- Adapter Module X69a: From the First Power Supply Unit (Diagnosable)
- Adapter Module X69b: From the Second Power Supply Unit (No Diagnosis)
- □ Adapter Module X69: Ribbon Cable to the CNC
- □ Adapter Module X75: Service Connector

General

In modular regenerative inverter systems an additional power supply unit may become necessary if you are using inverters or motors with a high power demand. The adapter module gives you the possibility of connecting this power supply unit to the present inverter system. In this way one power supply unit can, for example, supply the power to high-performance spindle and the other power supply unit can be used for the axes.

The two power supply units are connected to the control via the supply bus (X69a/X69b – X69) and in this way integrated in the system monitoring.

The two supply buses are linked in the adapter module. The reset signal, analog signals, and the power supply are used by the module connected to X69a. The ready signals of the power supply units are AND-gated. All other digital signals are OE-gated. X75 is an interface for service purposes. This connector must not be wired.

Important Notes for the Connection

For connection overview, see <u>"Section 2, Accessories for Inverters and Modular Amplifiers."</u>

Please keep the following in mind for connecting the inverter system and for integrating the status and control signals in its diagnosis or monitoring functions:

 The two power supply units form tow separate DC-links and must therefore not be connected through the DC-link conductor bars. The power of each DC-link must therefore be rated separately. Motors whose power exceeds that of an individual power supply module can not be operated with two power supply units either.



- Each of the power supply units must have a separate power connection. This means that upstream filters and other devices fro noise suppression, such as the LF 1xxA Line Filter, commutating reactor, and three-phase capacitor, must be provided separately for each of the power supply lines.
- If the machine requires the use of braking resistors (e.g., BR 9) a separate module must be used for each DC-link.
- Since, in principle, two separate inverter systems result, each of the systems requires its own unit bus (X79).
- Error messages from the power supply units are received by the adapter module and transmitted to the control. However, the control cannot determine which of the supply buses is responsible for eh error messages.
- The ready signals from the power supply unit are combined in the adapter module and transmitted to the control. If a ready signal is missing, the control cannot determine which of the inverter systems has not sent the ready signal.

□ Supply Bus X69a/b:

The DC-links to be monitored must be evaluated. The present system architecture allows monitoring of only one DC-links voltage and current. The DC-link with the greater load or the more critical components should be monitored and the power supply module concerned must be connected to X69a. The other power supply module must be connected to X69b accordingly.

Diagnosability:

The information given above also applies to diagnosability. The control is able to diagnose power supply units, such as the PS 145R, only if the supply bus (X69) of the PS 145R is connected to X69a of the adapter module. The power supply unit connected to X69b cannot be addressed by the system diagnosis.

□ 5 V Power Supply X74:

The 5 V power supply must be routed from the power supply unit connected to X69a to the control.



Adapter Module - X69a: From the First Power Supply Unit (Diagnosable)

For lengths of ≅23.62" (600 mm) and longer, the 50-line ribbon cable for the CNC power supply and control signals is led doubled to the CNC Chassis in order to increase the wire cross section. Refer to **Table 6-34**.

Table 6-34, Adapter Module - X69a: CNC Supply Voltage and Control Signals Pinout

50-line Ribbon Connector	Assignment
1a to 5b	+5 V
6a to 7b	+12 V
8a	+5 V (low-voltage separation)
8b	0 V (low-voltage separation)
9a	+15 V
9b	–15 V
10a	UZAN_U1
10b	0 V
11a	IZAN_U1
11b	0 V
12a	RES.PS_U1
12b	0 V
13a	PF.PS_U1
13b	GND
14a	ERR.UZ.GR_U1
14b	GND
15a	ERR.IZ.GR_U1
15b	GND
16a	ERR.TEMP_U1 (PS, DLF, BR)

50-line Ribbon Connector	Assignment
16b	GND
17a	RDY.PS_U1
17b	GND
18a	ERR.ILEAK_U1
18b	GND
19a	Not connected
19b	GND
20a	Not connected
20b	GND
21a	0 V
21b	GND
22a	Not connected
22b	GND
23a	SDA
23b	GND
24a	SCL
24b	GND
25a	RES.LE
25b	GND

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation.



Adapter Module – X69b: From the Second Power Supply Unit (No Diagnosis)

For lengths of ≅23.62" (600 mm) and longer, the 50-line ribbon cable for the CNC power supply and control signals is led doubled to the CNC Chassis in order to increase the wire cross section. Refer to **Table 6-35**.

Table 6-35, Adapter Module - X69b: CNC Supply Voltage and Control Signals Pinout

50-line Ribbon Connector	Assignment
1a to 5b	+5 V
6a to 7b	Not connected
8a	Not connected
8b	Not connected
9a	Not connected
9b	Not connected
10a	UZAN_U2
10b	Not connected
11a	IZAN_U2
11b	Not connected
12a	Not connected
12b	0 V
13a	PF.PS_U2
13b	GND
14a	ERR.UZ.GR_U2
14b	GND
15a	ERR.IZ.GR_U2
15b	GND
16a	ERR.TEMP_U2 (PS, DLF, BR)

50-line Ribbon	Assignment
Connector	
16b	GND
17a	RDY.PS_U2
17b	GND
18a	ERR.ILEAK_U2
18b	GND
19a	Not connected
19b	GND
20a	Not connected
20b	GND
21a	Not connected
21b	GND
22a	Not connected
22b	GND
23a	Not connected
23b	GND
24a	Not connected
24b	GND
25a	RES.LE
25b	GND

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation.



Adapter Module - X69: Ribbon Cable to the CNC

For lengths of ≅23.62" (600 mm) and longer, the 50-line ribbon cable for the CNC power supply and control signals is led doubled to the CNC Chassis in order to increase the wire cross section. Refer to **Table 6-36**.

Table 6-36, Adapter Module - X69: CNC Supply Voltage and Control Signals Pinout

50-line Ribbon Connector	Assignment
1a to 5b	+5 V
6a to 7b	+12 V
8a	+5 V (low-voltage separation)
8b	0 V (low-voltage separation)
9a	+15 V
9b	–15 V
10a	UZAN
10b	0 V
11a	IZAN
11b	0 V
12a	RES.PS
12b	0 V
13a	PF.PS
13b	GND
14a	ERR.UZ.GR
14b	GND
15a	ERR.IZ.GR
15b	GND
16a —	ERR.TEMP (PS, DLF, BR)

50-line Ribbon	Assignment
Connector	Assignment
16b	GND
17a	RDY.PS
17b	GND
18a	ERR.ILEAK
18b	GND
19a	Do not assign
19b	GND
20a	Do not assign
20b	GND
21a	0 V
21b	GND
22a	0 V
22b	GND
23a	Reserved (SDA)
23b	GND
24a	Reserved (SCL)
24b	GND
25a	RES.LE
25b	GND

NOTE: The interface complies with the requirements of EN 50 178 for low voltage electrical separation.

Adapter Module - X75: Service Connector

WARNING: X75F must not be assigned. It is only for service purposes.



Physical Dimensions

The following components dimensions are illustrated:

- □ PS 122R Power Supply Unit
- □ PS 130 Power Supply Unit
- □ PS 145R Power Supply Unit
- PS 120A Power Supply Unit
- □ CR 135 Commutating Reactor
- □ CR 170, CR 180 Commutating Reactors
- □ LF 135A Line Filter
- □ LF 180A Line Filter
- □ BR 9 Braking Resistor
- BR 18 Braking Resistor
- BR 10F and BR 18F Braking Resistor
- Three-Phase Current Capacitor
- PM 107, PM 207 Power Modules
- PM 115A, PM 123A, PM 132A, PM 148A, PM 215A, and PM 223A Power Modules
- PM 107A Power Module
- □ PMD 107 Power Module
- □ PMD 115 Power Module
- □ PMD 125, PMD 140 Power Module
- □ PMD 160 Power Module
- □ PMD 196 Power Module
- PMD 207 Power Module
- PMD 215, PMD 225 Power Module
- □ DLF 110 DC-Link Filter
- □ DLF 120 DC-Link Filter
- DLF 130 DC-Link Filter
- Adapter Module



PS 122R Power Supply Unit

Refer to Figure 6-26.

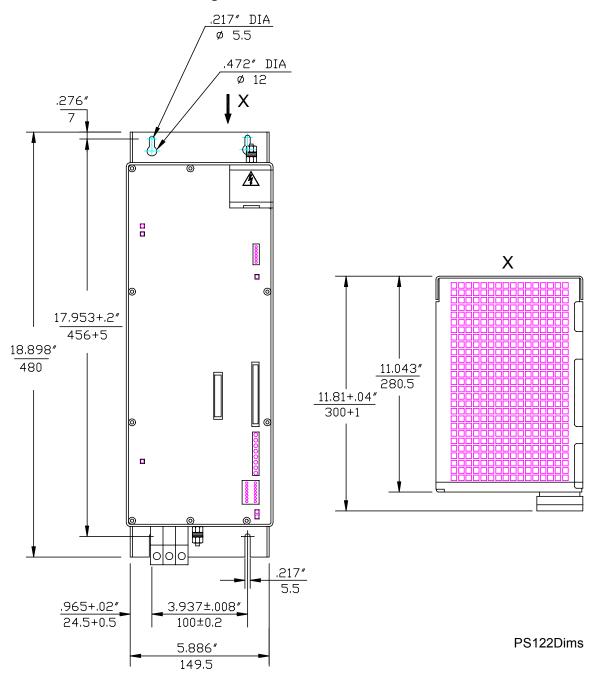


Figure 6-26, PS 122R Power Supply Unit, Dimensions



PS 130 Power Supply Unit

Refer to Figure 6-27.

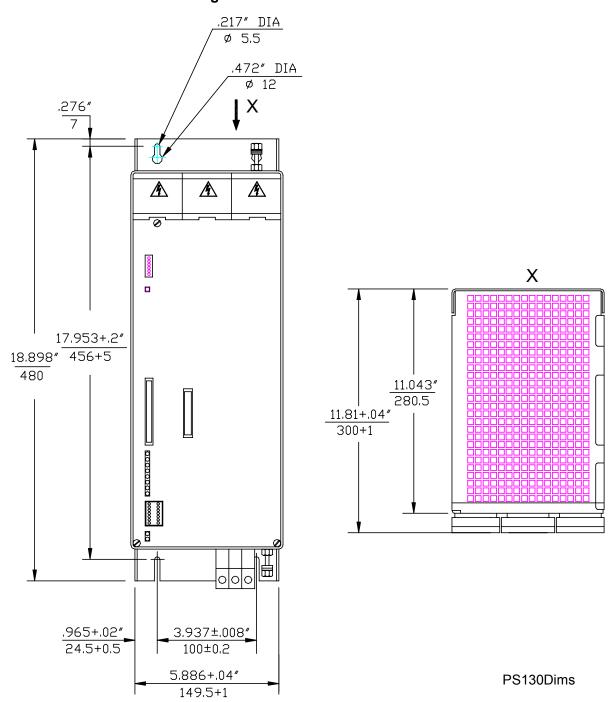


Figure 6-27, PS 130 Power Supply Unit, Dimensions



PS 145R Power Supply Unit

Refer to Figure 6-28.

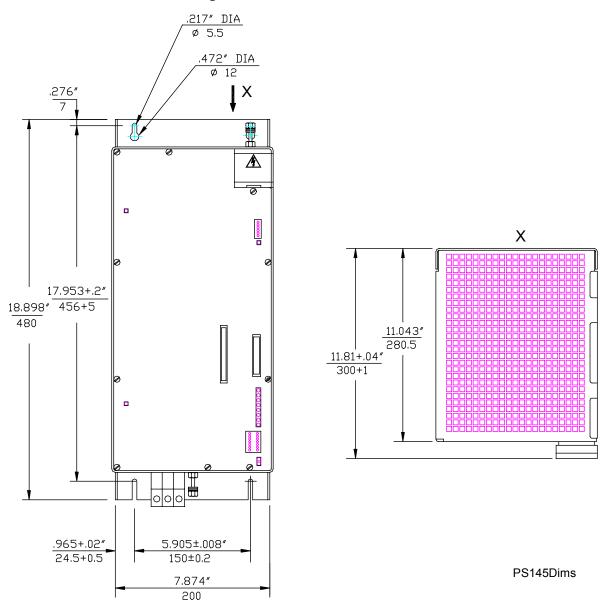


Figure 6-28, PS 145R Power Supply Unit, Dimensions



PS 120A Power Supply Unit

Refer to "Section 5, Physical Dimensions, PS 120A Power Supply Unit," Figure 5-25, PS 120A Power Supply Unit Dimensions.

CR 135 Commutating Reactor

Refer to Figure 6-29.


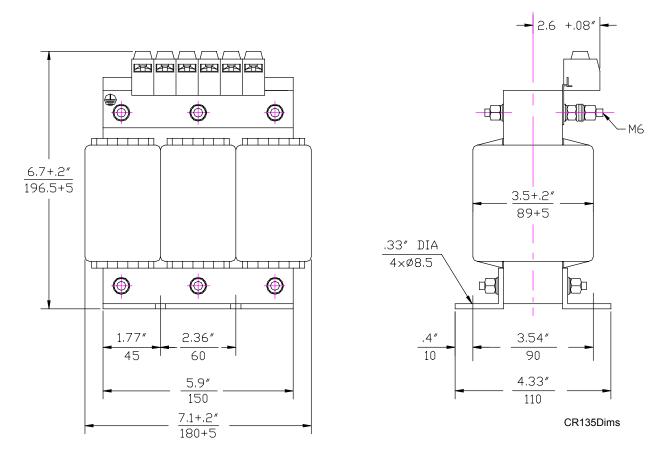


Figure 6-29, CR 135 Commutating Reactor, Dimensions

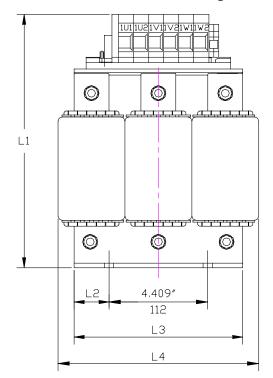

CR 170, CR 180 Commutating Reactor

Refer to Figure 6-30 and Table 6-37.



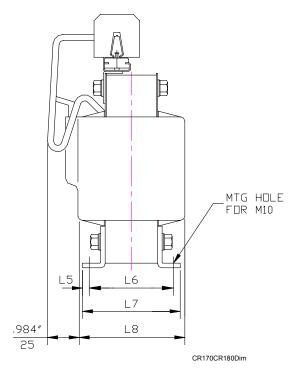


Figure 6-30, CR 170, CR 180 Commutating Reactor, Dimensions Table 6-37, CR 170, CR 180 Commutating Reactor, Dimensions

Value	CR 170	CR 180
L1	10.748" 273 mm	11.299" 287 mm
L2	1.535" 39 mm	1.732" 44 mm
L3	7.480" 190 mm	7.874" 200 mm
L4	9.448" 240 mm	9.842" 250 mm
L5	<u>0.393"</u> 10 mm	<u>0.433"</u> 11 mm
L6	3.740" 95 mm	4.055" 103 mm
L7	4.527" 115 mm	4.921" 125 mm
L8	4.527" 115 mm	<u>5.118"</u> 130 mm



LF 135A Line Filter

Refer to Figure 6-31.

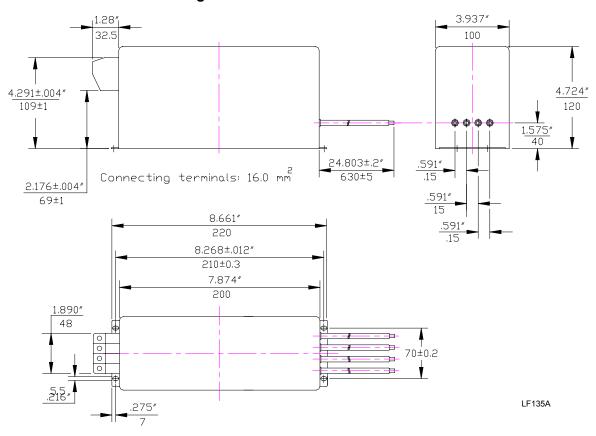


Figure 6-31, LF 135A Line Filter, Dimensions



LF 180A Line Filter

Refer to Figure 6-32.

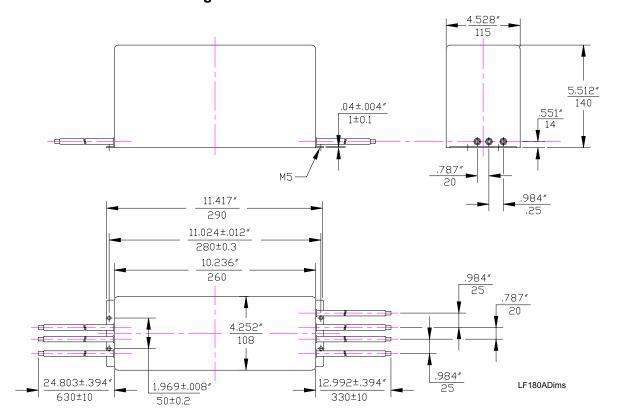


Figure 6-32, LF 180A Line Filter, Dimensions



BR 9 Braking Resistor

Refer to Figure 5-26, BR 9 Dimensions.

BR 18 Braking Resistor

Refer to Figure 5-27, BR 18 Dimensions.

BR 10F and BR 18F Braking Resistor

Refer to Figure 5-28, BR 10F and BR 18F Dimensions.

Three-Phase Current Capacitor

Refer to Figure 6-33.

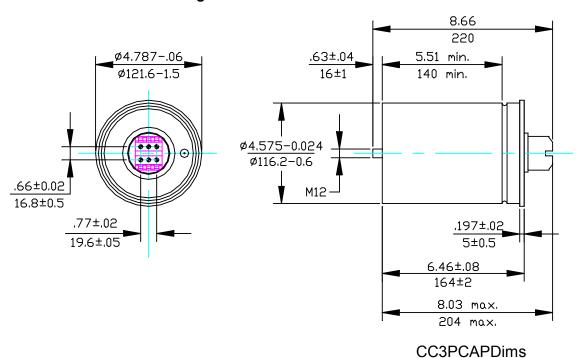


Figure 6-33, Three-Phase Current Capacitor, CC 3P, Dimensions



PM 107, PM 207 Power Module

Refer to Figure 6-34.

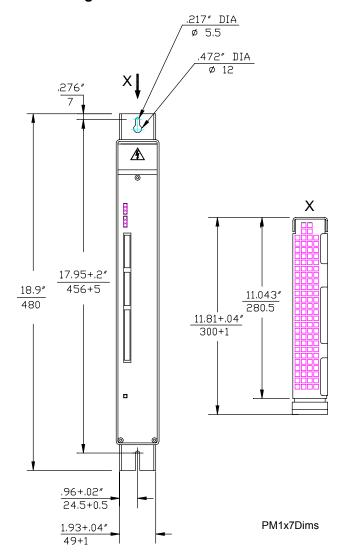


Figure 6-34, PM 107, PM 207 Power Module, Dimensions



PM 115A, PM 123A, PM 132A, PM 148A, PM 215A, and PM 223A Power Modules Refer to Figure 6-35.

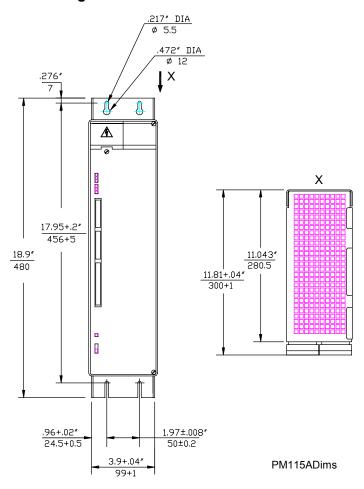


Figure 6-35, PM 115A, PM 123A, PM 132A, PM 148A, PM 215A, and PM 223A Power Module, Dimensions



PM 170A Power Module

Refer to Figure 6-36.


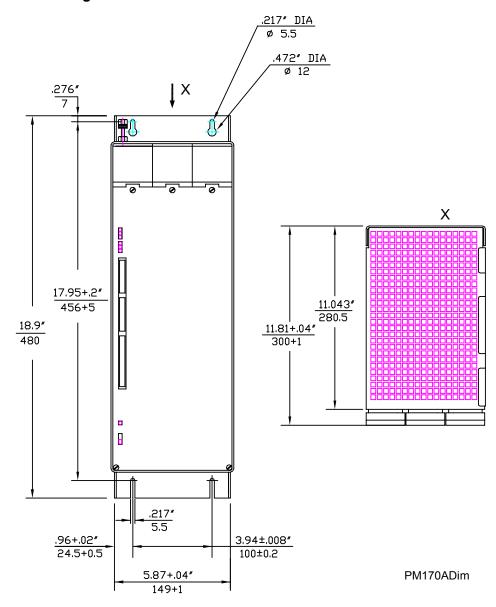


Figure 6-36, PM 170A Power Module, Dimensions

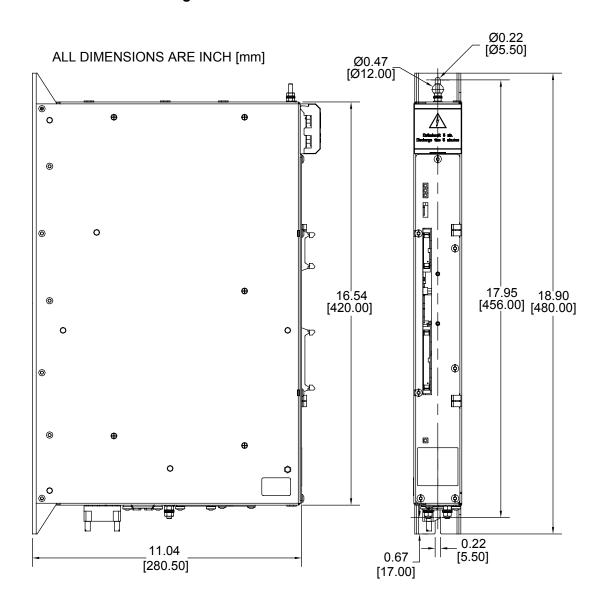

PMD 107 Power Module

Refer to Figure 6-37.



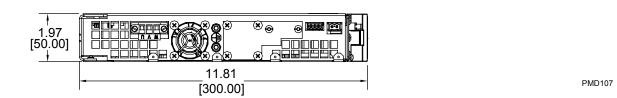


Figure 6-37, PMD 107 Power Module, Dimensions



PMD 115 Power Module

Refer to Figure 6-38.

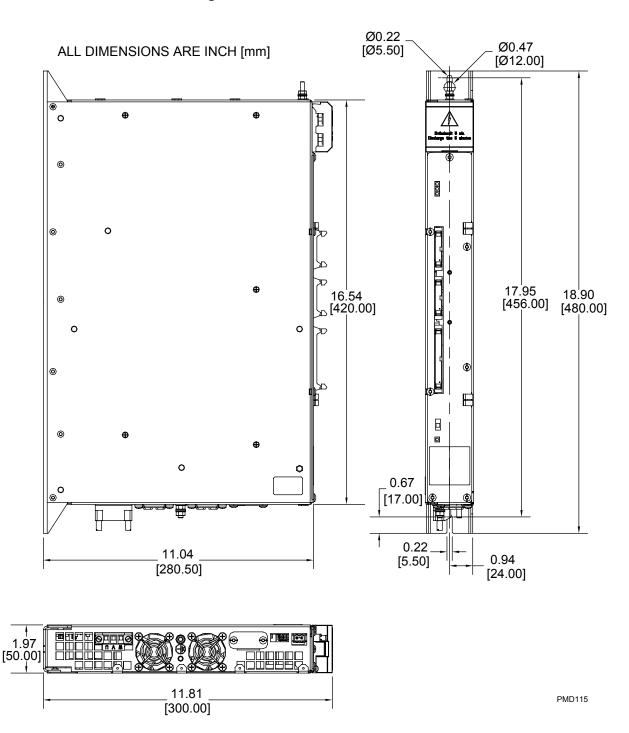


Figure 6-38, PMD 115 Power Module, Dimensions



PMD 125, PMD 140 Power Module Refer to Figure 6-39.

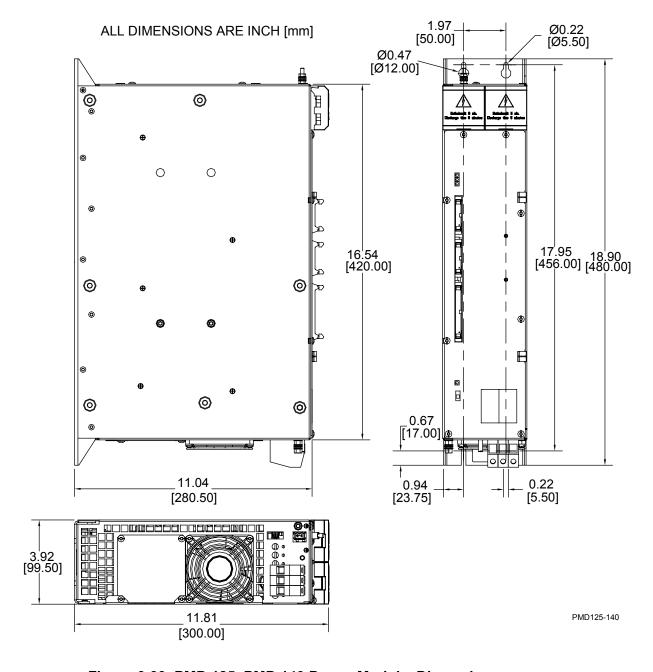


Figure 6-39, PMD 125, PMD 140 Power Module, Dimensions



PMD 160 Power Module Refer to Figure 6-40.

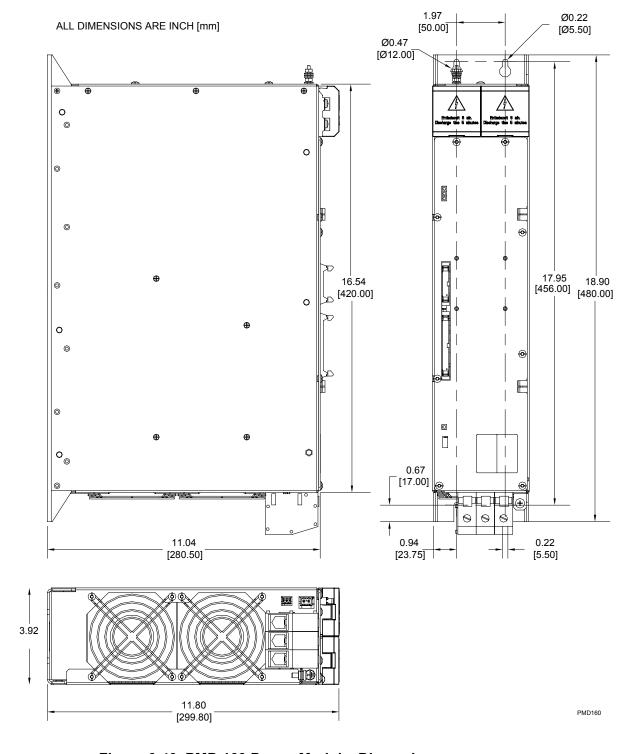


Figure 6-40, PMD 160 Power Module, Dimensions



PMD 196 Power Module

Refer to Figure 6-41.


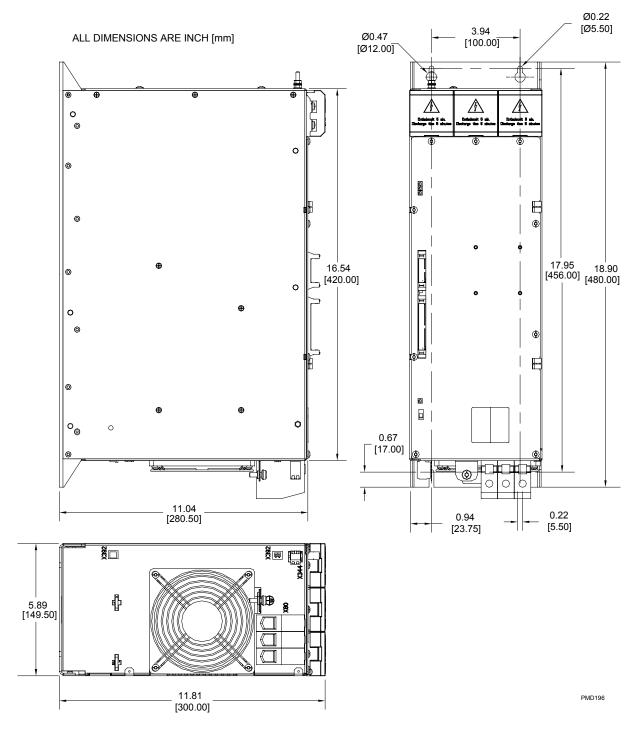



Figure 6-41, PMD 196 Power Module, Dimensions



PMD 207 Power Module

Refer to Figure 6-42.

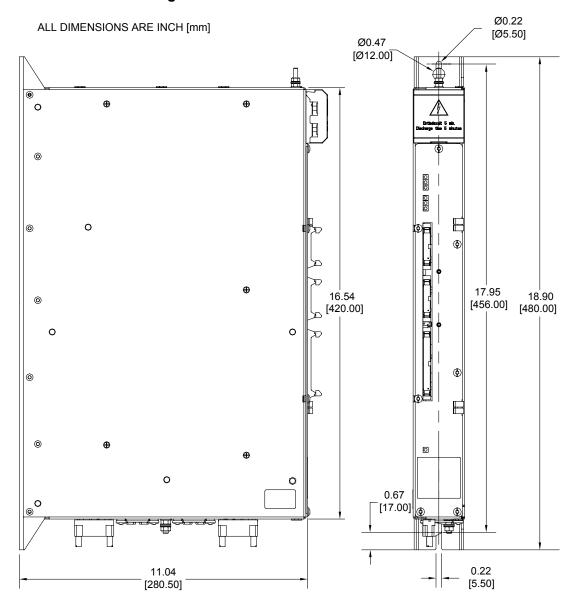

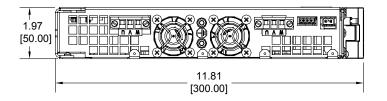

PMD207

Figure 6-42, PMD 207 Power Module, Dimensions



PMD 215, PMD 225 Power Module

Refer to Figure 6-43.

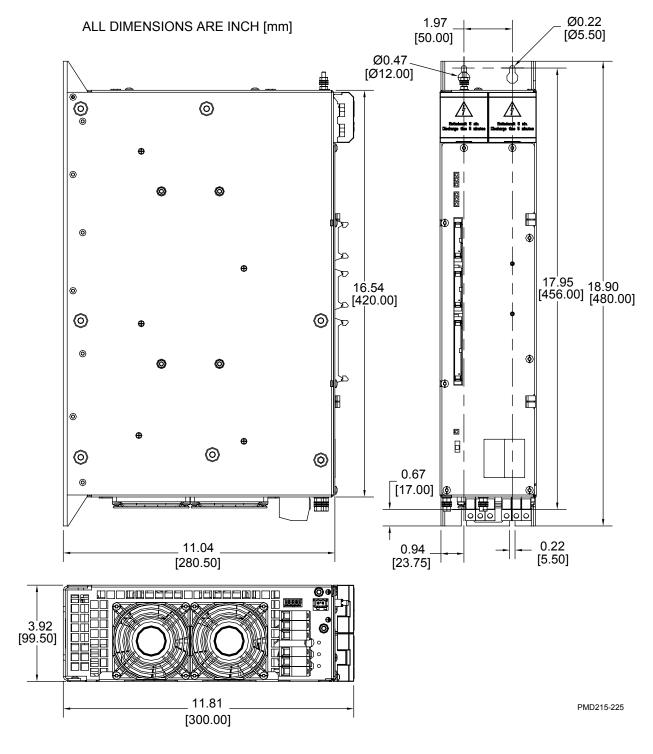


Figure 6-43, PMD 215, PMD 225 Power Module, Dimensions



Refer to Figure 6-44. This illustration will be available in the future

Figure 6-44, DLF 110 DC-Link Filter, Dimensions



DLF 120 DC-Link Filter

Refer to Figure 6-45.

This illustration will be available in the future

Figure 6-45, DLF 120 DC-Link Filter, Dimensions



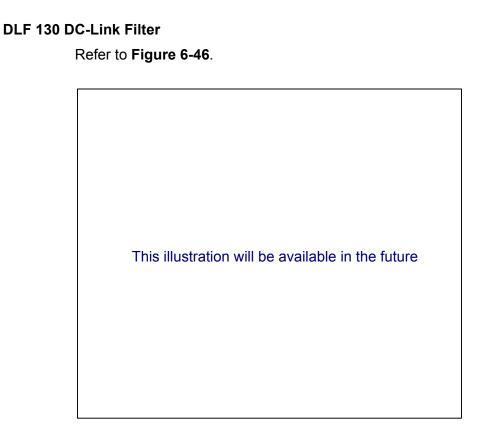


Figure 6-46, DLF 120 DC-Link Filter, Dimensions



Adapter Module Refer to Figure 6-47. This illustration will be available in the future

Figure 6-47, Adapter Module, Dimensions



Section 7 - Available Motors and Accessories

The following topics are described in this section:

- Available Motors
- Cables and Connectors
- Required Power Modules and Compact Inverters
- Safety and Labeling Information
- DC-Link Voltages for ANILAM Motors
- Connecting Speed (Rotary) Encoders to the Motors
- Power Connection of the ANILAM Motors
- Connecting the Holding Brake
- Connecting the Fan to the Spindle Motor
- Mechanical Data
- □ Axis Motors AM Series
- □ Spindle Motors SM Series
- Permissible Forces on the Motor Shaft



Available Motors

The following topics are described:

- Spindle Motors
- Axis Motors



Spindle Motors

Refer to **Table 7-1** for spindle (asynchronous) motors.

Table 7-1, Spindle Motor Specifications

Model Number (features)	Rated Power	Rated Speed	P/N
SM 055A	5.5 kW	1500 rpm	34100600
SM 075A	7.5 kW	1500 rpm	34100605
SM 100A	10.0 kW	1500 rpm	34100610
SM 120A	12.0 kW	1500 rpm	34100615
SM 055C (with standard bearing & with key)	5.5 kW	1500 rpm	34100625
SM 055D (with spindle bearing & with key)	5.5 kW	1500 rpm	34100626
SM 055E (with standard bearing & without key)	5.5 kW	1500 rpm	34100627
SM 055F (with spindle bearing & without key)	5.5 kW	1500 rpm	34100628
SM 075C (with standard bearing & with key)	7.5 kW	1500 rpm	34100630
SM 075D (with spindle bearing & with key)	7.5 kW	1500 rpm	34100631
SM 075E (with standard bearing & without key)	7.5 kW	1500 rpm	34100632
SM 075F (with spindle bearing & without key)	7.5 kW	1500 rpm	34100633

(Continued...)



Table 7-1, Spindle Motor Specifications (Continued)

Model Number (features)	Rated Power	Rated Speed	P/N
SM 100C (with standard bearing & with key)	10.0 kW	1500 rpm	34100635
SM 100D (with spindle bearing & with key)	10.0 kW	1500 rpm	34100636
SM 100E (with standard bearing & without key)	10.0 kW	1500 rpm	34100637
SM 100F (with spindle bearing & without key)	10.0 kW	1500 rpm	34100638
SM 120C (with standard bearing & with key)	12.0 kW	750 rpm	34100640
SM 120E (with standard bearing & without key)	12.0 kW	750 rpm	34100642
SM 150C (with standard bearing & with key)	15.5 kW	1500 rpm	34100645
SM 150D (with spindle bearing & with key)	15.5 kW	1500 rpm	34100646
SM 150E (with standard bearing & without key)	15.5 kW	1500 rpm	34100647
SM 150F (with spindle bearing & without key)	15.5 kW	1500 rpm	34100648
SM 200C (with standard bearing & with key)	20.0 kW	1500 rpm	34100650
SM 200D (with spindle bearing & with key)	20.0 kW	1500 rpm	34100651
SM 200E (with standard bearing & without key)	20.0 kW	1500 rpm	34100652
SM 200F (with spindle bearing & without key)	20.0 kW	1500 rpm	34100653
SM 240C (with standard bearing & with key)	24.0 kW	1500 rpm	34100655
SM 240D (with spindle bearing & with key)	24.0 kW	1500 rpm	34100656
SM 240E (with standard bearing & without key)	24.0 kW	1500 rpm	34100657
SM 240F (with spindle bearing & without key)	24.0 kW	1500 rpm	34100658



Axis Motors

Axis motors (synchronous motors) fulfill all requirements of a Numerical Control (NC) machine tool. Some special characteristics include:

- An excellent running smoothness
- An appropriate mass moment of inertia
- A very good ration of the rated torque to the stall torque
- A low torque ripple

Refer to **Table 7-2**. The B in the model number indicates that the motor has a brake. The –E in the model number indicates that the motor is an EcoDyn motor.

Table 7-2, Axis Motor Specifications

Model Number	Stall Torque (100 K)	Rated Speed	P/N
AM 820A	3.0 Nm	3000 rpm	34100400
AM 820AB	3.0 Nm	3000 rpm	34100401
AM 960A	5.2 Nm	4500 rpm	34100200
AM 960AB	5.2 Nm	4500 rpm	34100201
AM 1150A	9.0 Nm	3000 rpm	34100310
AM 1150AB	9.0 Nm	3000 rpm	34100311
AM 1160A	5.2 Nm	3000 rpm	34100210
AM 1160AB	5.2 Nm	3000 rpm	34100211
AM 1160C	7.2 Nm	3000 rpm	34100220
AM 1160CB	7.2 Nm	3000 rpm	34100221
AM 1160E	10.0 Nm	3000 rpm	34100230
AM 1160EB	10.0 Nm	3000 rpm	34100231
AM 1300A-E	6.0 Nm	3000 rpm	34100240
AM 1300AB-E	6.0 Nm	3000 rpm	34100241
AM 1300C-E	9.0 Nm	3000 rpm	34100245
AM 1300CB-E	9.0 Nm	3000 rpm	34100246
AM 1400A	13.0 Nm	3000 rpm	34100430
AM 1400AB	13.0 Nm	3000 rpm	34100431
AM 1400C	13.0 Nm	2000 rpm	34100420
AM 1400CB	13.0 Nm	2000 rpm	34100421

(Continued...)



Table 7-2, Axis Motor Specifications (Continued)

Model Number	Stall Torque (100 K)	Rated Speed	P/N
AM 1550C	13.0 Nm	3000 rpm	34100250
AM 1550CB	13.0 Nm	3000 rpm	34100251
AM 1550E	17.7 Nm	3000 rpm	34100260
AM 1550EB	17.7 Nm	3000 rpm	34100261
AM 1550G	26.1 Nm	3000 rpm	34100270
AM 1550GB	26.1 Nm	3000 rpm	34100271
AM 1550A-E	13.0 Nm	3000 rpm	24100280
AM 1550AB-E	13.0 Nm	3000 rpm	24100281
AM 1550C-E	17.7 Nm	3000 rpm	34100285
AM 1550CB-E	17.7 Nm	3000 rpm	34100286
AM 1550D-E	21.6 Nm	3000 rpm	34100290
AM 1550DB-E	21.6 Nm	3000 rpm	34100291
AM 1550G-E	26.1 Nm	3000 rpm	34100295
AM 1550GB-E	26.1 Nm	3000 rpm	34100296



Cables and Connectors

The following topics are described:

- Power Cables for Axis Motors
- Power Cables for Spindle Motors
- Miscellaneous Cables and Connectors
- Maximum Bend Radii of Power Cables with UL Certification

DANGER:

Ensure appropriate strain relief on all lines. Never work on the unit while it is powered up. Ensure that the motor is properly grounded. Ensure that the toroidal cores are mounted correctly. For cable lengths longer than 15 m (49.2 ft) between motor and inverter, additional noise suppression measures could be necessary.

Power Cables for Axis Motors

All connections are to the SA Series compact inverter. Refer to Table 7-3.

Table 7-3, Power Cables for Axis Motors

Motors	Cable P/N	Axes Requiring Cables
AM 960 Series, AM 1160 Series	342001XX**1	Axes 1 to 4
AM 820 Series, AM 1150 Series, AM 1400 Series	342003XX**1	Axes 1 to 4
AM 1550 Series	342002XX**1	Axes 1 to 4

^{**1} Sold as cable assemblies (that is, with connector) in 5-foot increments, where: XX = the length in feet.



Power Cables for Spindle Motors

Refer to Table 7-4.

NOTE: All cables have a UL certification and are suited for use at ambient temperatures of up to 40 °C (104 °F). The conductor material consists of copper (Cu).

Table 7-4, Power and Fan Cables for Spindle Motors

Motors	Cable P/N	Axes Requiring Cables	Fan Cable P/N
SM 055A	34201305 ^{**2}	Spindle	34201311 ^{**2}
SM 055C-F	34201305 ^{**2}	Spindle	34201311 ^{**2}
SM 075A	34201305 ^{**2}	Spindle	34201311 ^{**2}
SM 075C-F	34201305 ^{**2}	Spindle	34201311 ^{**2}
SM 100A	34201306** ²	Spindle	34201311 ^{**2}
SM 100C-F	34201306** ²	Spindle	34201311 ^{**2}
SM 120A	34201306** ²	Spindle	34201311 ^{**2}
SM 120C, E	34201306**2	Spindle	34201311 ^{**2}
SM 150C-F	34201307 ^{**2}	Spindle	34201311 ^{**2}
SM 200C-F	34201307**2	Spindle	34201311 ^{**2}
SM 240C-F	34201308 ^{**2}	Spindle	34201311 ^{**2}

^{**2} Sold by the foot.

Miscellaneous Cables and Connectors

Refer to Table 7-5.

NOTE: The last two digits of the cable P/N (XX) indicate the length of the cable. For example, 34300010 indicates a 10-foot cable.

Table 7-5, Miscellaneous Cables and Connectors Specifications

Cable Designation	Lengths (Ft)	P/N
CNC to LCD	05, 10, 15, 20, 25 65, 70, 75	343000XX
CNC key input, CNC I/O	05, 10, 15, 20, 25 65, 70, 75	343001XX
CNC, MPG, PM300	15, 20, 30, 45, 60	343003XX
CNC, MPG, PM500	05, 10, 15, 20, 25, 30, 35, 45, 60, 75	343004XX
CNC, MPG, PM310	05, 15, 20, 30, 45, 50, 60	343005XX
CNC I/O Module	02, 03, 06, 09, 15, 20, 25	343006XX
CNC I/O	03, 10, 15, 20, 30, 45, 60	343007XX
CNC to floppy PWR/SIG	03 05, 10, 15, 20, 25	343002XX



Maximum Bend Radii of Power Cables with UL Certification

Refer to Table 7-6.

Table 7-6, Maximum Bend Radii of Cables

Cable P/N	Cable Cross Section	Maximum Bend Radius ^{**1}
91001027	4 x 1.5 mm ² + (2 x 1 mm ²)	≥ 2.56" (65 mm)
91001028	4 x 4 mm ² + (2 x 1 mm ²)	≥ 2.95" (75 mm)
34201309	4 x 2.5 mm ²	≥ 2.36" (60 mm)
34201305	4 x 4 mm ²	≥ 2.76" (70 mm)
34201306	4 x 6 mm ²	≥ 2.95" (75 mm)
34201307	4 x 16 mm ²	≥ 5.31" (135 mm)
34201308	4 x 25 mm ²	≥ 5.91" (150 mm)

^{**1} Frequent flexing



Required Power Modules and Compact Inverters

The following topics are described:

- □ Axis Motors
- Spindle Motors
- Maximum Torque of a Drive

Axis Motors

Refer to **Table 7-7**.

Table 7-7, Required Power Modules and Compact Inverters

Motor	Power Module		Compact Inverters
	1-axis	2-axis	
AM 820 Series, AM 1140 Series (n_N = 2000 rpm), AM 1150 Series, AM 1160 Series	PM 107	PM 207	Axis 1 to 4
AM 1400 Series (n _N = 3000 rpm)	PM 115A	PM 215A	Axis 4
AM 1550C, AM 1550CB, AM 1550E, AM 1550EB			
AM 1550G, AM 1550GB	PM 123A	PM 223A	Axis 4 (only SA 411C, RA 411C)



Spindle Motors

Refer to Table 7-8.

Table 7-8, Required Power Modules and Compact Inverters

Motor	Power Mod	lule	Compact Inverters
	1-axis	2-axis	
SM 055A	PM 115A	PM 215A	Spindle
SM 055C, SM 055D, SM 055E, SM 055F SM 075A, SM 075C, SM 075D, SM 075E, SM 075F SM 120A	PM 123A	PM 223A	Spindle
SM 100A, SM 100C, SM 100D, SM 100E, SM 100F SM 120C, SM 120E	PM 123A	PM 223A	Spindle (only SA 301C, SA 411C, RA 301C, RA 411C)
SM 150C, SM 150D, SM 150E, SM 150F	PM 132A	_	Spindle (only RA 301C, RA 411C)
SM 200C, SM 200D, SM 200E, SM 200F	PM 132A	_	_
SM 240C, SM 240D, SM 240E, SM 240F	PM 148A	_	_



Maximum Torque of a Drive

If the power module is not powerful enough, the maximum torque of the motor cannot be reached because the required current is being limited by the power module. The maximum torque M_{max} achievable by the drive can be calculated.

Axis Motors:

$$M_{\text{max}} = \frac{M_{\text{Nmot}}}{I_{\text{Nmot}}} * I_{\text{Ndrv}}$$

Spindle Motors:

$$M_{\text{max}} = \frac{60 * P_{\text{max}}}{2 * \pi * n}$$

$$P_{\rm max} = P_{{\it Nmot}} * \frac{I_{q\,{\rm max}}}{I_{q{\it N}}}$$

$$I_{q\max} = \sqrt{{I_{\max}}^2 - {I_{0\mathit{mot}}}^2}$$

$$I_{qN} = \sqrt{{I_{\mathit{Ndrv}}}^2 - {I_{0\mathit{mot}}}^2}$$

M_{Nmot}: Rated torque of the motor in Nm

I_{Nmot}: Rated current of the motor in A

I_{Ndrv}: Rated current of the power module in A

n: Motor speed in rpm

P_{Nmot}: Power rating of the motor in W

I_{max}: Lesser value between the maximum current of the motor and the

maximum current of the power module in A

I_{0mot}: No-load current of the motor



Safety and Labeling Information

The following topics are described:

- Safety Precautions an Warranty Regulations
- Motor Nameplate Conventions

Safety Precautions and Warranty Regulations

Please observe the following precautions to prevent personal injury and damage to equipment. Damage caused by failure to observe safety precautions cannot be covered under the manufacturer's warranty.

DANGER:

During operation, several of the motor parts could be live or moving. Do not open the CNC cabinet, or make/break connections while the unit is powered up. Only trained personnel can repair or service the motor. Enclose the motor as shown in dimensional drawings throughout this section. Ensure that the motor is properly grounded. Do not connect inverter motors directly to three-phase line power. This could ruin the motor! Inverters must be operated via an electronic power converter.

If your motor is equipped with a feather key at the shaft end, you must secure the key with a collar before you start the motor for the first time. This prevents the key from backing out. Refer to detailed safety and maintenance information in the operating instructions included with each motor.

WARNING:

Motor surface temperatures could exceed 145 °C (293 °F). When connecting the fan, ensure that the direction of rotation is correct. The arrow symbol on the fan housing indicates the correct turning direction.

The optional standstill brake is designed only for a limited number of emergency stops. After mounting the motor, you must verify the brake function. On motors with plug-in connections and built-in brakes, a varistor is required for wiring the brake when commissioning the motor. See "Connecting the Holding Brake" for Motors.



Motor Nameplate Conventions

Axis Motors

For AM Series AC brushless motors, the nameplate is a foil/metallic label. Refer to **Figure 7-1**.

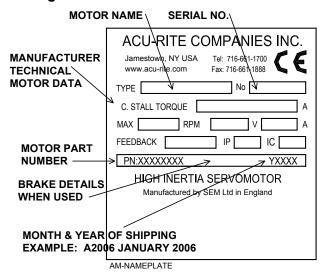


Figure 7-1, Axis Motor Nameplate

Spindle Motors

For SM Series motors, the nameplate is an aluminum label. Refer to **Figure 7-2**.

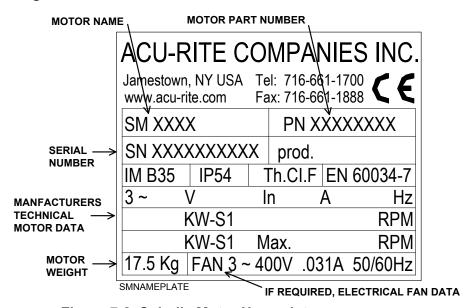


Figure 7-2, Spindle Motor Nameplate



DC-Link Voltages for ANILAM Motors

The following topics are described:

- Axis Motors
- Axis EcoDyn Motors
- Spindle Motors

The ANILAM inverter systems supply different DC-link voltages:

- SA Series non-regeneration compact inverters: 565 V
- Modular amplifiers with PS 130: 565 V
- Modular amplifiers with PS 122, PS 145: 650 V

Axis Motors

The characteristic curves for the ANILAM axis motors were determined with a DC-link voltage of 565 V. Refer to **Figure 7-3**.

If an axis motor is operated at a different DC-link voltage, the voltage limit curve must be displaced in parallel. Calculate the displacement as follows:

$$\Delta n = n_{\text{old}} \cdot \frac{U_{\text{Znew}}}{U_{\text{Zold}}} - n_{\text{old}}$$

For example:

$$\begin{aligned} &U_{Zold} = 565 \ V, \quad U_{Znew} = 650 \ V, \quad n_{old} = 3300 \ rpm, \ \Delta n = ?, \quad n_{new} = ? \\ &\Delta n = 3300 \ rpm \cdot \frac{650 \ V}{560 \ V} - 330 \ rpm = 497 \ rpm \end{aligned}$$

$$n_{\text{new}} = n_{\text{old}} + \Delta n = 3300 \text{ rpm} + 497 \text{ rpm} = 3797 \text{ rpm}$$



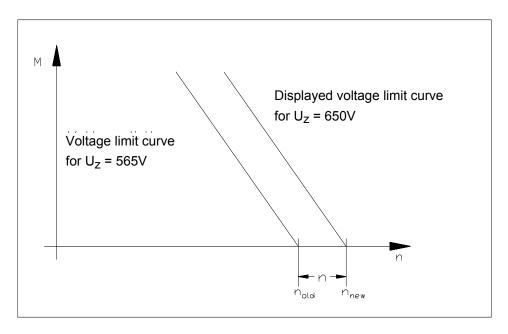


Figure 7-3, Characteristic Curves for Axis Motors



Axis EcoDyn Motors

The characteristic curves for the ANILAM axis EcoDyn motors were determined with a DC-link voltage of 650 V. Refer to **Figure 7-4**.

If the EcoDyn axis motors are operated with a DC-link voltage of 565 V, the falling component of the characteristic curve of the maximum torque must be moved parallel to the left by approximately 500 rpm.

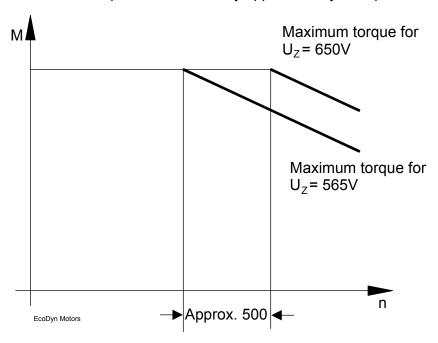


Figure 7-4, Characteristic Curves for Axis EcoDyn Motors



Spindle Motors

The characteristic curves for ANILAM spindle motors were determined with a DC-link voltage of 565 V. If a motor is operated at a different DC-link voltage, the characteristic curve must be adjusted. If the power characteristic lies above the breakdown torque speed, you must multiply it by the factor k.

$$P_{\text{new}} = P_{\text{old}} \cdot k$$

Given:

$$k = \frac{(U_{Znew})^2}{(U_{Zold})^2}$$

The torque characteristic above the breakdown torque speed must be recalculated as follows:

$$M_{\text{new}} = \frac{P_{\text{new}} \cdot 60}{2 \cdot \pi \cdot n}$$

For example, with the SM 120A:

 $P_{old} = 10.5 \text{ kW}$ where n = 7000 rpm with 565 V.

 P_{new} with n = 7000 rpm with 650 V?

 M_{new} with n = 7000 rpm with 650 V?

$$k = \frac{(650 \text{ V})^2}{(565 \text{ V})^2} = 1.32$$

$$P_{\text{new}} = 10.5 \text{ kW} \cdot 1.32 = 13.9 \text{ kW}$$

$$M_{\text{new}} = \frac{13900 \text{ W} \cdot 60}{2 \cdot \pi \cdot 7000 \text{ rpm}} = 19 \text{ Nm}$$



Connecting Speed (Rotary) Encoders to the Motors

All ANILAM motors are equipped with speed (rotary) encoders. The rotary encoder signals and the signals from the temperature sensors are transmitted via a 17-pin (male) flange socket. Refer to **Table 7-9**.

NOTE: Cables for encoder-to-motor connection are available in lengths of 10, 15, 20, 25, 30, 35, 40, and 45 ft.

Table 7-9, Speed (Rotary) Encoder (1 Vpp) Flange Socket – Pinout

Motor		Cable for Speed Encoder P/N 342000XX		
17-Pin Male	Assignment	17-Pin Female Connector	Color(s)	25-Pin Male D-Sub Connector
1	A+	1	Green / Black	3
2	A-	2	Yellow / Black	4
3	R+	3	Red	17
4	D-	4	Pink	22
5	C+	5	Green	19
6	C-	6	Brown	20
7	0 V	7	White / Green	2
8	Temperature +	8	Yellow	13
9	Temperature -	9	Violet	25
10	5 V	10	Brown / Green	1
11	B+	11	Blue / Black	6
12	B-	12	Red / Black	7
13	R-	13	Black	18
14	D+	14	Gray	21
15	0 V Sensor	15	White	16
16	5 V Sensor	16	Blue	14
17	Internal Shield	17	Internal Shield	8
Housing	External Shield	Housing	External Shield	Housing
	•	•	Free	5, 9, 10, 11, 12, 15, 23, 24

NOTE: This interface meets requirements per EN 50 178 for "low voltage electrical separation."



Power Connection of the ANILAM Motors

The following topics are described:

- AM 960, AM 1160, AM 1550 Series Axis Motors, Power Connection
- □ AM 820, AM 1150, 1400 Series Axis Motors, Power Connection
- SM 055A, SM 075A, SM 100A, SM 055C-F, SM 075C-F,
 SM 100C-F, SM 120C, SM 120E, SM150 C-F, and SM 240C-F
 Spindle Motors, Power Connection
- □ SM 120A Spindle Motor, Power Connection

AM 960, AM 1160, AM 1550 Series Axis Motors, Power Connection

NOTE: The shielded line for the holding brake included in the power cable must have intermediate terminals. Keep the shield as near to ground as possible.

Cables for axis motor connection are available in lengths of 10, 15, 20, 25, 30, 35, 40, and 45 ft.

The power connection for these axis motors is made via a 6-pin flange socket. Refer to **Table 7-10**.

Table 7-10, AM 960, AM 1160, AM 1550 Series Axis Motor Connection - Pinout

6-Pin Male Flange Socket	Assignment	6-Pin Female Connector	Cable P/Ns 342001XX	3-Pin Inverter Terminal
1	U	1	Black 1	U
2	V	2	Black 2	V
Ground	PE		Green / Yellow	
4	+24 V (brake)	4	Black 6	Intermediate Terminals
5	0 V (brake)	5	Black 5	Intermediate Terminals
6	W	6	Black 3	W



AM 820, AM 1150, 1400 Series Axis Motors, Power Connection

The power connection for these axis motors is made via a 9-pin male flange socket. Refer to **Table 7-11**.

Table 7-11, AM 820, AM 1150, AM 1400 Series Axis Motor Connection - Pinout

9-Pin Male Flange Socket	Assignment	6-Pin Female Connector	Cable P/Ns 342003XX	3-Pin Inverter Terminal
Α	U	Α	Black 1	U
В	V	В	Black 2	V
С	W	С	Black 3	W
D	PE	Ground	Green/Yellow	Ground
F	+24 V (brake)	F	Black 6	Intermediate Terminals
G	0 V (brake)	G	Black 5	Intermediate Terminals
E, H, L	Do not assign	E, H, L	Do not assign	Do not assign



SM 055A, SM 075A, SM 100A, SM 055C–F, SM 075C–F, SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F, and SM 240C–F Spindle Motors, Power Connection

The power connection for these spindle motors is made via a terminal box. The power cables are sold per foot. Refer to **Table 7-12** and **Table 7-13**. Refer to Figure 7-5, Terminal Box with Connections for SM 055A, SM 075A, SM 100A, SM 055C–F, SM 075C–F, SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F, and SM 240C–F and Table 7-14, SM Terminal Box Pinout.

Table 7-12, SM 055, SM 075, SM 100, SM 120, SM 150, SM 200, and SM 240 Spindle Motor Power Cable P/Ns

Spindle Motor	Cable P/N	
SM 055A	34201305	
SM 075A	34201305	
SM 100A	34201306	
SM 120	34201306	
SM 150	34201307	
SM 200	34201307	
SM 240	34201308	

Table 7-13, SM 055A, SM 075A, SM 100A, SM 055C–F, SM 075C–F, SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F, and SM 240C–F Spindle Motor Power Connection – Pinout

11-Pin Male Flange Socket	Assignment	11-Pin Female Connector	Cable P/N (See Table 7-12)	3-Pin Inverter Terminal
Α	U	Α	Black 1	U
В	V	В	Black 2	V
С	W	С	Black 3	W
D	PE	D	Green / Yellow	Ground
E to L	Do not assign			



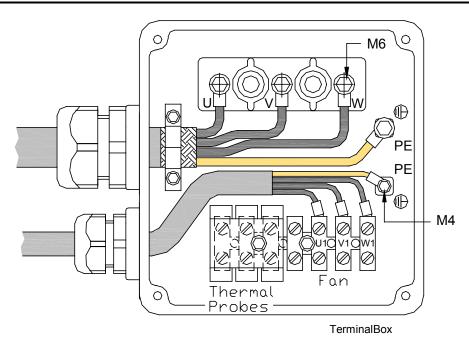


Figure 7-5, Terminal Box with Connections for SM 055A, SM 075A, SM 100A, SM 055C-F, SM 075C-F, SM 100C-F, SM 120C, SM 120E, SM 150C-F, SM 200C-F, and SM 240C-F

Table 7-14, SM Terminal Box Pinout

Terminal Strip for Motors	Power Cable	Inverter Terminal 3-pin
U	Black 1	U
V	Black 2	V
W	Black 3	W
Ground	Green/Yellow	Ground

Warning: Do not use any connections other than U, V, W, U1, V1, and W1.

Their purpose is to lead the temperature sensor lines through the motor.



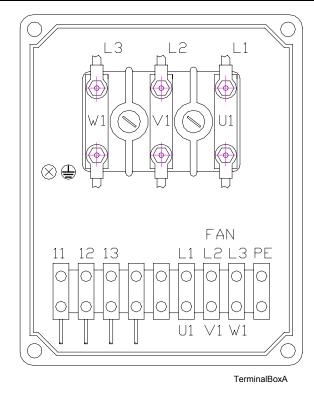


Figure 7-6, Terminal Box with Connections for SM 120A

SM 120A Spindle Motor, Power Connection

The power connection for this spindle motor is made via an 11-pin male flange socket. Refer to **Figure 7-6**. Refer to **Table 7-15** for the Pinout.

NOTE: Cables for spindle motor connection are available in XX lengths of 10, 15, 20, 25, 30, 35, 40, and 45 ft. See **Table 7-15**.

Table 7-15, SM 120A Spindle Motor Power Connection - Pinout

11-Pin Male Flange Socket	Assignment	11-Pin Female Connector	Cable P/N 342010XX	3-Pin Inverter Terminal
Α	U	Α	Black 1	U
В	V	В	Black 2	V
С	W	С	Black 3	W
D	PE	D	Green / Yellow	Ground
E to L	Do not assign			



Connecting the Holding Brake

Each ANILAM axis motor can be equipped with an optional holding brake.

This permanent-magnet single-disk brake operates on direct current and holds the motor at a standstill without backlash. The brake is connected to the power source via the power connection. See "Power Connection of the ANILAM Motors."

NOTE: The brake is a holding brake; not a service brake.

When connecting the brake, consider electrical noise immunity. The brake is engaged when it is not powered up.

The voltage required to release the brake is 24 V (\pm 10 %).

WARNING:

Holding brakes are permanent-magnet brakes. Ensure that the polarity of the DC voltage is correct. Otherwise, the brake will not be released.

The shield of the lines for the holding brake is to be kept as close as possible (< 1.18 in [30 mm]) to ground. The best solution is to fasten the shield with a metal clamp directly onto the sheet metal housing of the electrical cabinet. Refer to Figure 7-8, Shield for Holding Brake Installation.

NOTE: After installing the motor, you must verify the trouble-free functioning of the brake.

Due to the inductance of the holding brake, a voltage peak could exceed 1000 V when the exciting current is switched off.

A protective circuit is not necessary if the holding brakes are controlled via the inverters, since the internal electronic switches limit the voltage.

To avoid the voltage peak that occurs when controlling the holding brakes by relay, use a protective circuit with an R varistor, recommended type Q69-X3022.

The following circuitry is suggested for the protective circuit of the brake. See **Figure 7-7**.

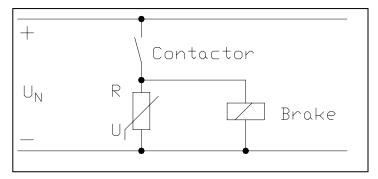


Figure 7-7, Protective Circuit for Holding Brake



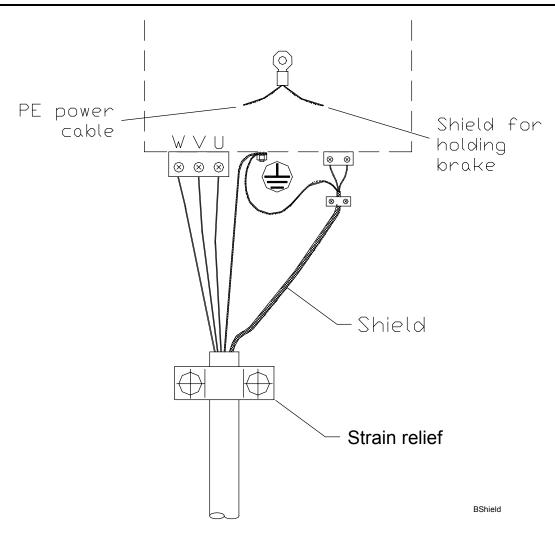


Figure 7-8, Shield for Holding Brake Installation



Connecting the Fan to the Spindle Motor

Axial fans are standard equipment on ANILAM spindle motors. All fan cables are sold per foot.

NOTE: To ensure that the blades will turn in the proper direction, refer to the direction arrow on the fan housing.

The electrical connecting values for the fan are listed in the technical data of <u>Table 7-4</u>, <u>Power and Fan Cables for Spindle Motors</u>.

The fan can be supplied only via a line with a cross section of 0.75 mm².

SM 055A, SM 075A, SM 100A, SM 055C-F, SM 075C-F, SM 100C-F, SM 120C, SM 120E, SM 150C-F, SM 200C-F, and SM 240C-F Spindle Motor Fan

On the SM 055A, SM 075A, SM 100A, SM 055C–F, SM 075C–F, SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F, and SM 240C–F motors, the fan is connected via the terminal box of the power connection. This connector is supplied as a motor accessory. Refer to **Table 7-16** and <u>Figure 7-5</u>, <u>Terminal Box with Connections for SM 055A, SM 075A, SM 100A, SM 055C–F, SM 075C–F, SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F, and SM 240C–F.</u>

Table 7-16, SM 055A, SM 075A, SM 100A, SM 055C-F, SM 075C-F, SM 100C-F, SM 120C, SM 120E, SM 150C-F, SM 200C-F, and SM 240C-F Spindle Motor Fan - Pinout

Terminal Row for Fan	Assignment	Fan Cable P/N 34201311
U1	U	Black 1
V1	V	Black 2
W1	W	Black 3
Ground	PE	Green/Yellow

SM 120A Spindle Motor Fan

On the SM 120A motors, the fan is connected via a STAK3 Hirschmann connector on the B-side of the motor. The connector is supplied with the motor. Refer to **Table 7-17** and <u>Figure 7-6, Terminal Box with Connections for SM 120A</u>.

Table 7-17, SM 120A Spindle Motor Fan - Pinout

Connector (Female)	Assignment	Fan Cable
6-pin		P/N 34201310
1	U	Black 1
2	V	Black 2
3	W	Black 3
Ground	PE	Green/Yellow



Mechanical Data

The following topics are described:

- Mounting Flange and Design
- Mounting the Motor
- □ Shaft End
- □ <u>Vibration Severity Grade</u>
- Center Holes
- □ Feather Keys
- Rotatable Flange Sockets



Mounting Flange and Design

Each ANILAM motor is equipped with mounting flange according to DIN 42948 and IEC 72.

A flange-mounted motor lessens power loss. If the motor is mounted so that it is thermally insulated, i.e., heat cannot be dissipated through the flange, reduce motor torque by ≈ 5 % to 15 % to avoid overheating the motor.

All operating specifications in this section assume a maximum ambient temperature of +40 °C (104 °F).

If you are using a self-cooling motor, ensure adequate heat dissipation. If the space in which the motor is mounted is too narrow, heat dissipation could be impeded.

The ANILAM spindle motors are available in IM B35 design according to EN 60 034-7 (see **Figure 7-9**). The ANILAM axis motors are available in IM B5 design (see <u>Figure 7-10</u>, <u>Design B5 – Securing the Motor</u>) according to EN 60 034-7.

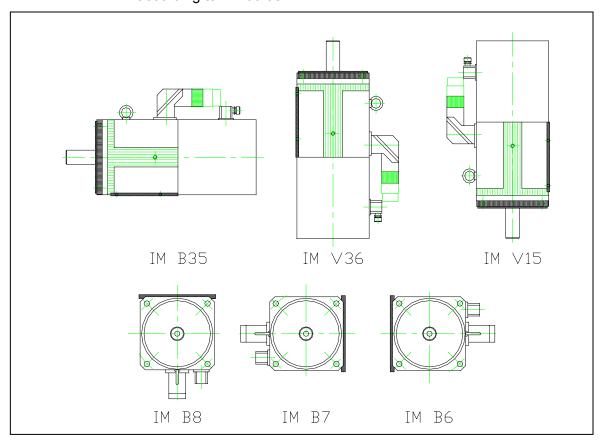


Figure 7-9, Design B35 - Mounting Flange Configurations



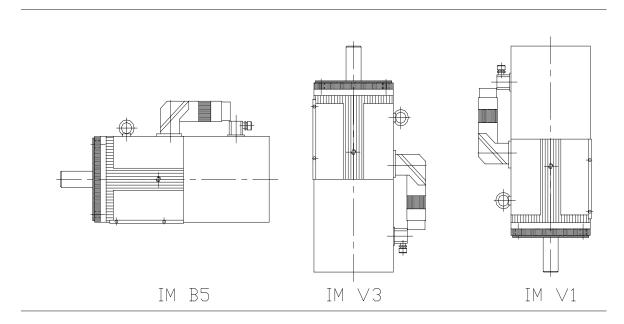


Figure 7-10, Design B5 – Securing the Motor

Mounting the Motor

According to EN 24017 or DIN 912, ANILAM recommends the following screws to secure motors. Refer to **Figure 7-10** and **Table 7-18**.

Table 7-18, Recommended Motor Mounting Screws

Motor(s)	To Secure Flange	To Secure Block
AM 820 Series	M10	_
AM 960 Series	M6	_
AM 1150 Series	M10	_
AM 1160 Series	M8	_
AM 1400 Series	M10	_
AM 1550 Series	M10	_
SM 055A, SM 075A, SM 100A, SM 055C-F, SM 075C-F, SM 100C-F	ISO 4017 – M12 x 30	ISO 4017 – M10 x 30
SM 120A	M16	M10
SM 120C, SM 120E, SM 150C-F, SM 200C-F, SM 240C-F	ISO 4017 – M16 x 40	ISO 4017 – M10 x 35



Shaft End

ANILAM motors have cylindrical shafts, per ISO-R775 and IEC 72 requirements.

Exceptions: AM 820A, AM 820AB, AM 1150A, and AM 1150AB see dimension drawings.

Vibration Severity Grade

The shaft of the motor has a vibration severity grade of S according to EN 60034. The motors of the SM 055C–F, SM 075C–F, SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F, and SM 240C–F comply with grade SR. These motors can be high precision balanced externally.

Center Holes

Some ANILAM motors have one center hole in the drive shaft. For dimensions, refer to **Table 7-19**.

Table 7-19, Motor Central Bore Specifications

Motor(s)	Central Bore Hole
AM 820 Series	ISO 866 BS 5 M5 x 12.5
AM 960 Series	ISO 866 BS 5 M6 x 15
AM 1150 Series	ISO 866 BS 5 M6 x 16
AM 1160 Series	ISO 866 BS 5 M8 x 20
AM 1400 Series	ISO 866 BS 5 M8 x 19
AM 1550 Series	ISO 866 BS 5 M12 x 30
SM 055A, SM 075A, SM 100A	DIN 332 – DR M12 x 28
SM 120A	DIN 332 – DR M16 x 36
SM 055C-F, SM 075C-F, SM 100C-F SM 120C, SM 120E, SM 150C-F, SM 200C-F, SM 240C-F	DIN 332 – DR M12



Feather Keys

Feather keys are standard equipment on all ANILAM spindle (asynchronous) motors. The feather key prevents rotational motion around the shaft while permitting lengthwise motion. Axis motors are not supplied with feather keys. Motors are available with or without feather keys, upon request. Refer to **Table 7-20** and **Figure 7-11**.

Table 7-20, Feather Key Specifications

Motor(s)	Key	Slot Dimensions		
		L	В	T
SM 055A, SM 075A,	DIN 6885 – E 10 × 8 × 70 mm	70 mm	10 mm	5 mm
SM 100A		(2.75 in.)	(0.39 in.)	(0.19 in.)
SM 055C, SM 055D,	DIN 6885 Sheet 1			
SM 055E, SM 055F	AS 10 x 8 x 70			
SM 075C, SM 075D, SM 075E, SM 075F				
SM 100C, SM 100D SM 100E, SM 100F				
SM 120A	DIN 6885 – A 12 × 8 × 80 mm	80 mm	12 mm	5 mm
		(3.15 in.)	(0.47 in.)	(0.19 in.)
SM 120C, SM	DIN 6885 Sheet 1	90 mm	12 mm	5 mm
120ESM 150C, SM 150D	AS 12 x 8 x 90	(3.54 in.)	(0.47 in.)	(0.19 in.)
SM 150E, SM 150F				
SM 200C, SM 200D				
SM 200E, SM 200F				
SM 240C, SM 240D SM 240E, SM 240F				

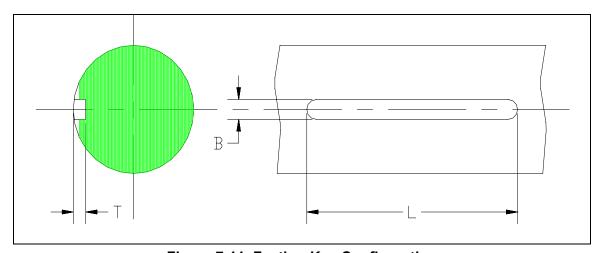


Figure 7-11, Feather Key Configuration

SM055ARotFlg



Rotatable Flange Sockets

The flange sockets in some ANILAM motors are rotatable within certain limits.

Spindle Motors

For SM 055A, SM 075A, and SM 100A refer to **Figure 7-12**.

For SM 055C–F, SM 075C–F, SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F, and SM 240C–F, refer to **Figure 7-13**.

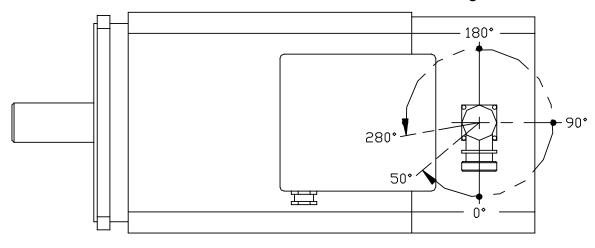


Figure 7-12, SM 055A, SM 075A, and SM 100A Rotatable Flange Socket

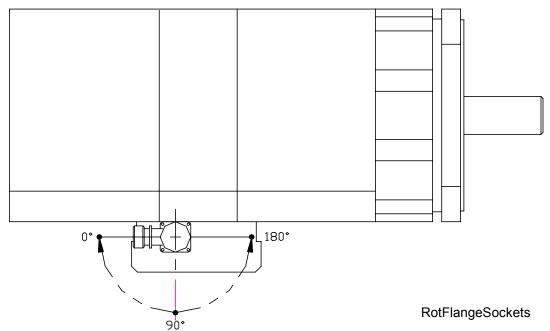


Figure 7-13, SM 055C-F, SM 075C-F, SM 100C-F, SM 120C, SM 120E, SM 150C-F, SM 200C-F, SM 240C-F - Rotatable Flange Socket



Axis Motors

For AM 960 Series, AM 1160 Series (starting in mid-2002) refer to **Figure 7-14**.

For AM 960 Series and AM 1160 Series (until mid-2002), refer to **Figure 7-15**.

For AM 1300-E Series, refer to Figure 7-16, AM 1300-E Series Rotatable Flange Socket.

For AM 1550 Series (starting in mid-2002), refer to <u>Figure 7-17</u>, <u>AM 1550 Series (starting in mid-2002) Rotatable Flange Socket</u>.

For AM 1550 Series (until mid-2002), refer to Figure 7-18, AM 1550 Series (until mid-2002) Rotatable Flange Socket.

For AM 1550E Series, refer to Figure 7-19, AM 1550E Series Rotatable Flange Socket.

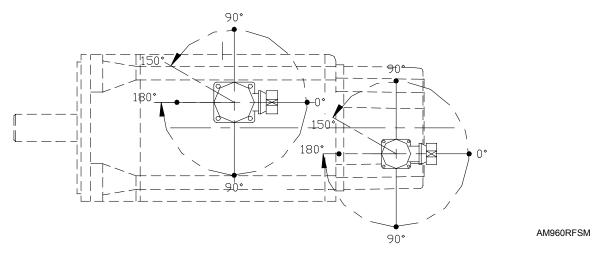


Figure 7-14, AM 960, AM 1160 Series (starting in mid-2002) Rotatable Flange Socket

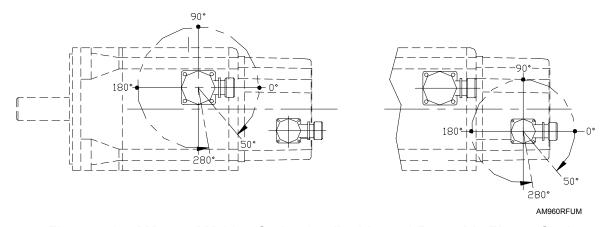


Figure 7-15, AM 960, AM 1160 Series (until mid-2002) Rotatable Flange Socket



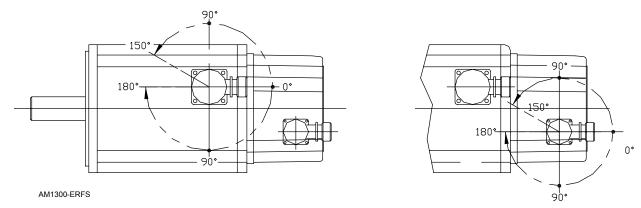


Figure 7-16, AM 1300-E Series Rotatable Flange Socket

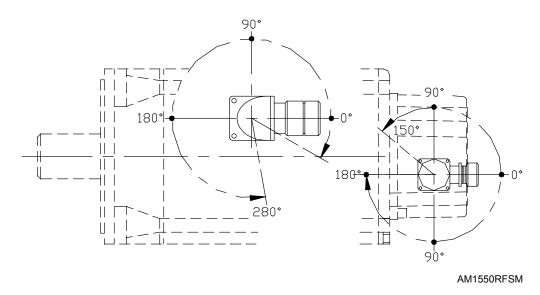


Figure 7-17, AM 1550 Series (starting in mid-2002) Rotatable Flange Socket

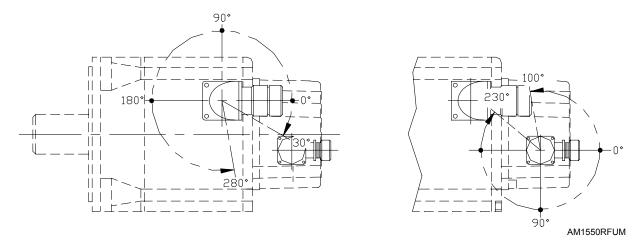


Figure 7-18, AM 1550 Series (until mid-2002) Rotatable Flange Socket



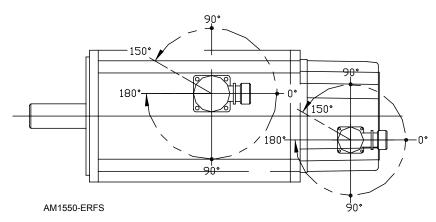


Figure 7-19, AM 1550E Series Rotatable Flange Socket



Axis Motors – AM Series

ANILAM axis motors offer the following features:

- Sine commutation
- Rotary encoder for speed measurement.
- Self-cooling
- IM B5 design (for securing by flange) according to EN 60 034-7 (See Figure 7-10, Design B5 – Securing the Motor).
- Protection class IP 65 according to EN 60 529 (shaft exit IP 64)
- Shaft end:
- Cylindrical as per DIN 748 and IEC 72
- Without feather key (with feather key by request)
- With centering hole as per ISO 866 BS 5 and thread
- AM 960 Series, AM 1160 Series, AM 1550 Series: Flange dimensions according to DIN 42 948 and IEC 72
- Maintenance-free bearings
- Natural cooling
- KTY 84-130 resistor probe to monitor temperature in the stator winding
- Thermal class F insulation
- Optional: Integrated preloaded holding brake

NOTE: In the performance diagrams that follow, characteristic curves are shown as broken lines. In addition, each diagram shows characteristic curves as determined on a test stand for one motor, mounted without thermal insulation. All dimensions are shown in inch and millimeter.

The following topics are described:

- Axis Motors General Technical Information
- Axis Motors Mechanical Life
- □ AM 820 Series Axis Motor Specifications
- □ AM 820 Series Speed-torque Characteristics Graph
- □ AM 960A Series Axis Motor Specifications
- □ AM 960A Series Speed-torque Characteristics Graph
- □ AM 1150A Series Axis Motor Specifications
- □ AM 1150 Series Speed-torque Characteristics Graph
- □ AM 1160A Series Axis Motor Specifications
- □ AM 1160A Series Speed-torque Characteristics Graph
- □ AM 1160C Series Axis Motor Specifications
- □ AM 1160C Series Speed-torque Characteristics Graph



- □ AM 1160E Series Axis Motor Specifications
- □ AM 1160E Series Speed-torque Characteristics Graph
- □ AM 1300A–E Series Axis Motor Specifications
- □ AM 1300A–E Series Speed-torque Characteristics Graph
- □ AM 1300C-E Series Axis Motor Specifications
- □ AM 1300C–E Series Speed-torque Characteristics Graph
- □ AM 1400A Series Axis Motor Specifications (nN=3000rpm)
- AM 1400A Series Speed-torque Characteristics Graph (nN=3000rpm)
- AM 1400C Series Axis Motor Specifications (nN=2000rpm)
- AM 1400C Series Speed-torque Characteristics Graph (nN=2000rpm)
- AM 1550C Series Axis Motor Specifications
- □ AM 1550C Series Speed-torque Characteristics Graph
- AM 1550E Series Axis Motor Specifications
- □ AM 1550E Series Speed-torque Characteristics Graph
- AM 1550G Series Axis Motor Specifications
- □ AM 1550G Series Speed-torque Characteristics Graph
- □ AM 1550A–E Series Axis Motor Specifications
- □ AM 1550A–E Series Speed-torque Characteristics Graph
- □ AM 1550C–E Series Axis Motor Specifications
- □ AM 1550C–E Series Speed-torque Characteristics Graph
- □ AM 1550D–E Series Axis Motor Specifications
- □ AM 1550D–E Series Speed-torque Characteristics Graph
- AM 1550G–E Series Axis Motor Specifications
- AM 1550G–E Series Speed-torque Characteristics Graph
- Axis Motors Dimension Drawings
- □ AM 820 Series Dimension Drawing
- □ AM 960 Series Dimension Drawing
- AM 960 Series Connector Illustrations
- AM 1150 Series Dimension Drawing
- □ AM 1160 Series Dimension Drawing
- AM 1160 Series Connector Illustrations
- □ AM 1300-E Series Dimension Drawing
- AM 1300-E Series Connector Illustrations
- □ AM 1400 Series Dimension Drawing
- □ AM 1400 Series Connector Illustrations
- AM 1550 Series Dimension Drawing
- □ AM 1550 Series Connector Illustrations
- AM 1550E Series Dimension Drawing
- AM 1550E Series Connector Illustrations



Axis Motors General Technical Information

The specifications and the characteristic curves apply to motors mounted without thermal insulation. The temperature of the winding may differ from the maximum permissible ambient temperature of 40°C by a maximum of 100K. If the motor is mounted so that it is thermally insulated, it is necessary to reduce the motor torque in order to avoid thermal overloading o the motor.

Axis Motors Mechanical Life

The service life of the bearings depends on the shaft load and the mean rotational speed (see "Permissible Forces on the Motor Shaft").



AM 820 Series - Axis Motor Specifications

Refer to **Table 7-21**, <u>Figure 7-20</u>, <u>AM 820 Series - Speed-Torque Characteristics Graph</u>, and <u>Figure 7-37</u>, <u>AM 820A and AM 820AB - Dimensional Drawing</u>.

Table 7-21, AM 820 Series - Specifications

	AM 820A	AM 820AB
	(Without Brake)	(With Brake)
P/N	34100400	34100401
Rated Voltage U _N	244 V	
Rated Power Output P _N	0.8 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	2.5 Nm	
Rated Current (100 K) **1 I _N	2.8 A	
Stall Torque (100 K) **1 Mo	3.0 Nm	
Stall Current (100 K) **1 Io	3.3 A	
Maximum Current (for ≤ 200 ms) Imax	13.5 A	
$\textbf{Maximum Torque (for} \leq 200 \text{ ms)} \ \ \textbf{M}_{\text{max}}$	11.3 Nm	
Pole Pairs PZ	3	
Weight m	9.70 lb 4.40 kg	10.25 lb 4.65 kg
Rotor Inertia J	1.70 kgcm ²	1.86 kgcm ²
Rated Voltage for Brake U _{Br}	_	24 VDC
Rated Current for Brake I _{Br}	_	0.4 A
Holding Torque for Brake M _{Br}	_	2.2 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 820 Series - Speed-Torque Characteristics Graph

Refer to Figure 7-20.

Characteristic curve according to specificationsMeasured characteristic curve of one motor

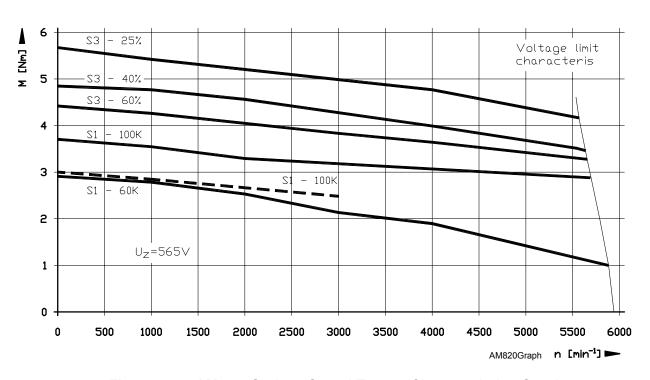


Figure 7-20, AM 820 Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 960A Series - Axis Motor Specifications

Refer to **Table 7-22**, <u>Figure 7-21</u>, <u>AM 960A Series - Speed-Torque Characteristics Graph</u>, and <u>Figure 7-38</u>, <u>AM 960A and AM 960AB - Dimensional Drawing</u>.

Table 7-22, AM 960A Series - Specifications

	AM 960A	AM 960AB
	(Without Brake)	(With Brake)
P/N	34100200	34100201
Rated Voltage U _N	288 V	
Rated Power Output P _N	1.4 kW	
Rated Speed n _N	4500 rpm	
Rated Torque (100 K) **1 M _N	3.0 Nm (4.1 Nm with	3000 rpm)
Rated Current (100 K) **1 I _N	3.3 A	
Stall Torque (100 K) **1 Mo	5.2 Nm	
Stall Current (100 K) **1 Io	5.2 A	
Maximum Current (for ≤ 200 ms) I _{max}	25.4 A	
Maximum Torque (for $\leq 200 \text{ ms}$) M_{max}	22.0 Nm	
Maximum Speed	6000 rpm	
Pole Pairs PZ	3	
Winding Resistance (in one phase)	1.20 Ω	
Winding Inductance (in one phase)	3.20 mH	
Weight m	15.87 lb 7.20 kg	17.86 lb 8.10 kg
Rotor Inertia J	6.30 kgcm ²	6.60 kgcm ²
	T	
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		0.5 A
Holding Torque for Brake M _{Br}		5.0 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.




AM 960A Series - Speed-Torque Characteristics Graph

Refer to Figure 7-21.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

*)
$$M_{max}$$
 = 22 Nm with I_{max} = 25.4 A_{eff} .
**) M_{max} = 14 Nm with I_{max} = 15 A_{eff} .

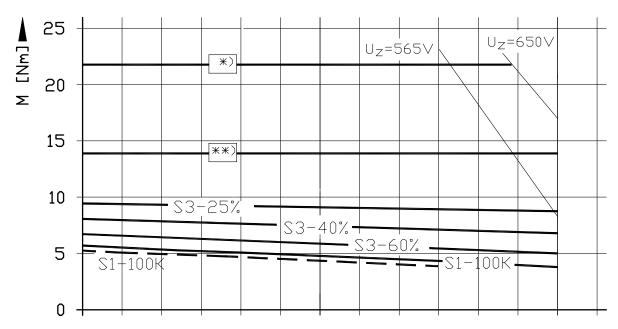

0 500 1000 1500 2000 2500 3000 3500 4000 4500 5000 5500 6000 6500

AM960ATorque

n [rpm] 🖚

Figure 7-21, AM 960A Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1150A Series - Axis Motor Specifications

Refer to **Table 7-23**, <u>Figure 7-22</u>, <u>AM 1150 Series - Speed-Torque</u> <u>Characteristics Graph</u>, and <u>Figure 7-40</u>, <u>AM 1150 Series - Dimensional Drawing</u>.

Table 7-23, AM 1150A Series - Specifications

	AM 1150A	AM 1150AB
	(Without Brake)	(With Brake)
P/N	34100410	34100411
Rated Voltage U _N	323 V	
Rated Power Output P _N	1.7 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	5.5 Nm	
Rated Current (100 K) **1 I _N	4.4 A	
Stall Torque (100 K) **1 Mo	9.0 Nm	
Stall Current (100 K) **1 Io	7.2 A	
Maximum Current (for $\leq 200 \text{ ms}$) I_{max}	29.0 A	
Maximum Torque (for $\leq 200 \text{ ms}$) M_{max}	32.0 Nm	
Pole Pairs PZ	4	
Weight m	19.40 lb 8.80 kg	22.22 lb 9.17 kg
Rotor Inertia J	8.70 kgcm ²	9.08 kgcm ²
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		0.6 A
Holding Torque for Brake M _{Br}		6.5 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1150 Series - Speed-Torque Characteristics Graph

Refer to Figure 7-22.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

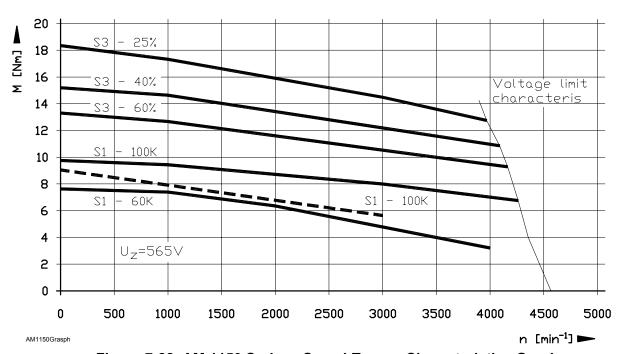


Figure 7-22, AM 1150 Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1160A Series - Axis Motor Specifications

Refer to **Table 7-24**, <u>Figure 7-23</u>, <u>AM 1160A Series - Speed-Torque Characteristics Graph</u>, and <u>Figure 7-41</u>, <u>AM 1160 Series - Dimensional Drawing</u>.

Table 7-24, AM 1160A Series - Specifications

	AM 1160A	AM 1160AB
	(Without Brake)	(With Brake)
P/N	34100210	34100211
Rated Voltage U _N	306 V	
Rated Power Output P _N	1.45 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	4.6 Nm	
Rated Current (100 K) **1 I _N	3.3 A	
Stall Torque (100 K) **1 Mo	5.2 Nm	
Stall Current (100 K) **1 Io	3.4 A	
Maximum Current (for \leq 200 ms) I_{max}	12.7 A	
Maximum Torque (for ≤ 200 ms) M _{max}	16.0 Nm	
Maximum speed	5400 rpm	
Pole Pairs PZ	3	
Winding Resistance (in one phase)	3.80 Ω	
Winding Inductance (in one phase)	13.50 mH	
Weight m	15.21 lb 6.90 kg	17.12 lb 7.80 kg
Rotor Inertia J	7.50 kgcm ²	7.90 kgcm ²
	T	T
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		0.6 A
Holding Torque for Brake M _{Br}		13.5 Nm


⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1160A Series - Speed-Torque Characteristics Graph Refer to Figure 7-23.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

*) $M_{max} = 16Nm$ with $I_{max} = 12.7A_{eff}$

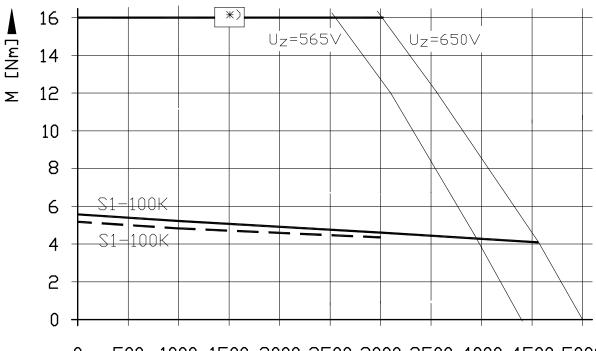

0 500 1000 1500 2000 2500 3000 3500 4000 4500 5000

Figure 7-23, AM 1160A Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.

The diagram shows the characteristic curves as determined on a test stand for one motor mounted without thermal insulation.

AM1160ATorque

n [rpm] ➤



AM 1160C Series - Axis Motor Specifications

Refer to **Table 7-25**, <u>Figure 7-24</u>, <u>AM 1160C Series - Speed-Torque Characteristics Graph</u>, and <u>Figure 7-41</u>, <u>AM 1160 Series - Dimensional Drawing</u>.

Table 7-25, AM 1160C Series - Specifications

	AM 1160C	AM 1160CB
	(Without Brake)	(With Brake)
P/N	34100220	34100221
Rated Power U _N	296 V	
Rated Power Output P _N	1.85 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	5.9 Nm	
Rated Current (100 K) **1 I _N	4.1 A	
Stall Torque (100 K) **1 Mo	7.2 Nm	
Stall Current (100 K) **1 Io	4.8 A	
Maximum Current (for ≤ 200 ms) I _{max}	19.0 A	
Maximum Torque (for ≤ 200 ms) M _{max}	25.0 Nm	
Maximum speed	5400 rpm	
Pole Pairs PZ	3	
Winding Resistance (in one phase)	2.05 Ω	
Winding Inductance (in one phase)	8.50 mH	
Weight m	18.96 lb 8.60 kg	<u>20.94 lb</u> 9.50 kg
Rotor Inertia J	9.90 kgcm ²	10.30kgcm ²
		_
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		0.6 A
Holding Torque for Brake M _{Br}		13.5 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1160C Series - Speed-Torque Characteristics Graph

Refer to Figure 7-24.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

*)
$$M_{max}$$
 = 25 Nm with I_{max} = 19 A_{eff} .
**) M_{max} = 21 Nm with I_{max} = 15 A_{eff} .

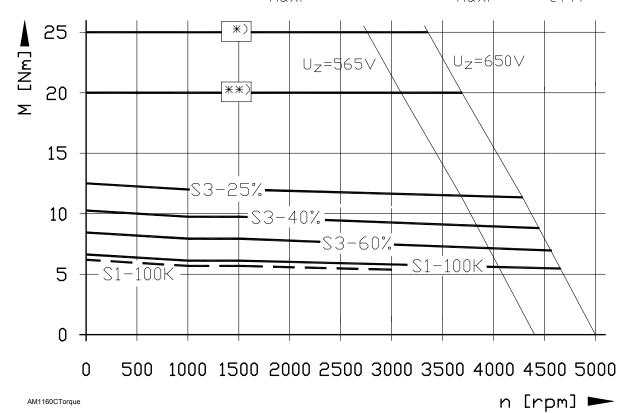


Figure 7-24, AM 1160C Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1160E Series - Axis Motor Specifications

Refer to **Table 7-26**, <u>Figure 7-25</u>, <u>AM 1160E Series - Speed-Torque</u> <u>Characteristics Graph</u>, and <u>Figure 7-41</u>, <u>AM 1160 Series - Dimensional Drawing</u>.

Table 7-26, AM 1160E Series - Specifications

	AM 1160E	AM 1160EB
	(Without Brake)	(With Brake)
P/N	34100230	34100231
Rated Voltage U _N	287 V	
Rated Power Output P _N	2.42 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	7.7 Nm	
Rated Current (100 K) **1 I _N	5.35 A	
Stall Torque (100 K) **1 Mo	10.0 Nm	
Stall Current (100 K) **1 I ₀	6.8 A	
Maximum Current (for ≤ 200 ms) I _{max}	32.6 A	
Maximum Torque (for ≤ 200 ms) M _{max}	41.0 Nm	
Maximum speed	5400 rpm	
Pole Pairs PZ	3	
Winding Resistance (in one phase)	0.85 Ω	
Winding Inductance (in one phase)	4.75 mH	
Weight m	26.45 lb 12.0 kg	28.44 lb 12.90 kg
Rotor Inertia J	15.00 kgcm ²	15.40kgcm ²
	T	
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		0.6 A
Holding Torque for Brake M _{Br}		13.5 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.




AM 1160E Series - Speed-Torque Characteristics Graph

Refer to Figure 7-25.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

*)
$$M_{max}$$
 = 41 Nm with I_{max} = 32.6 A_{eff} .
**) M_{max} = 21 Nm with I_{max} = 15 A_{eff} .

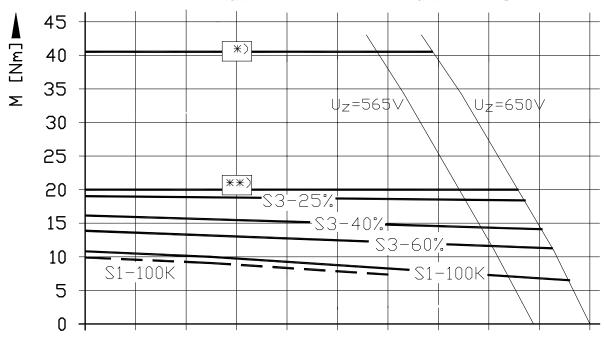

0 500 1000 1500 2000 2500 3000 3500 4000 4500 5000

AM1160ETorque n [rpm] ► Figure 7-25, AM 1160E Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1300A-E Series - Axis Motor Specifications

Refer to **Table 7-27**, <u>Figure 7-26</u>, <u>AM 1300A–E Series - Speed-Torque Characteristics Graph</u>, <u>Figure 7-42</u>, <u>AM 1300-E Series - Dimensional Drawing</u>, and <u>Table 7-40</u>, <u>AM 1300-E Series - Motor Dimensions</u>.

Table 7-27, AM 1300A-E Series - Specifications

	AM 1300A-E	AM 1300AB-E
	(Without Brake)	(With Brake)
P/N	34100240	34100241
Rated Voltage U _N	408 V	
Rated Power Output P _N	1.6 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	5.2 Nm	
Rated Current (100 K) **1 I _N	2.7 A	
Stall Torque (100 K) **1 Mo	6.0 Nm	
Stall Current (100 K) **1 Io	3.0 A	
Maximum Current (for ≤ 200 ms) I _{max}	8.6 A	
Maximum Torque (for ≤ 200 ms) M _{max}	16 Nm	
Maximum Speed	4200 rpm	
Pole Pairs PZ	4	
Winding Resistance (in one phase)	$3.85~\Omega$	
Winding Inductance (in one phase)	13.5 mH	
Weight m	17.42 lb 7.9 kg	19.40 lb 8.8 kg
Rotor Inertia J	16.0 kgcm ²	16.4 kgcm ²
	T	I
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		0.6 A
Holding Torque for Brake M _{Br}		13.5 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1300A-E Series - Speed-Torque Characteristics Graph

Refer to Figure 7-26.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

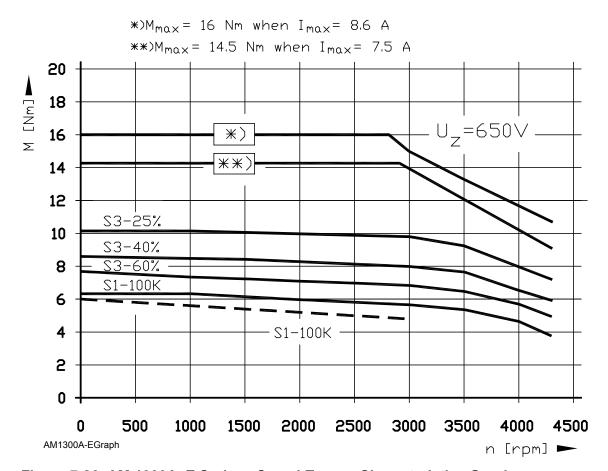


Figure 7-26, AM 1300A-E Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1300C-E Series - Axis Motor Specifications

Refer to **Table 7-28**, <u>Figure 7-27</u>, <u>AM 1300C–E Series - Speed-Torque Characteristics Graph</u>, <u>Figure 7-42</u>, <u>AM 1300-E Series - Dimensional Drawing</u>, and <u>Table 7-40</u>, <u>AM 1300-E Series - Motor Dimensions</u>.

Table 7-28, AM 1300C-E Series - Specifications

	AM 1300C-E	AM 1300CB-E
	(Without Brake)	(With Brake)
P/N	34100245	34100246
Rated Voltage U _N	401 V	
Rated Power Output P _N	2.3 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	7.4 Nm	
Rated Current (100 K) **1 I _N	3.8 A	
Stall Torque (100 K) **1 Mo	9.0 Nm	
Stall Current (100 K) **1 Io	4.5 A	
Maximum Current (for ≤ 200 ms) I _{max}	12.7 A	
Maximum Torque (for ≤ 200 ms) M _{max}	23 Nm	
Maximum Speed	4200 rpm	
Pole Pairs PZ	4	
Winding Resistance (in one phase)	2.0 Ω	
Winding Inductance (in one phase)	8.5 mH	
Weight m	21.38 lb 9.7 kg	23.37 lb 10.6 kg
Rotor Inertia J	21.0 kgcm ²	21.4 kgcm ²
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		0.6 A
Holding Torque for Brake M _{Br}		13.5 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1300C-E Series - Speed-Torque Characteristics Graph

Refer to Figure 7-27.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

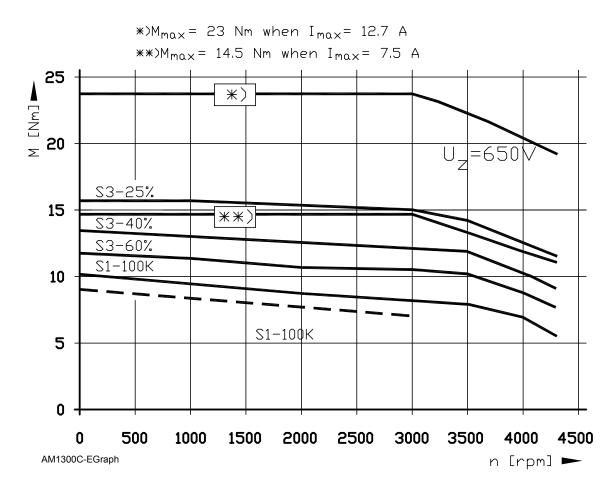


Figure 7-27, AM 1300C-E Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1400A Series - Axis Motor Specifications (n_N=3000 rpm)

Refer to **Table 7-29**, Figure 7-28, AM 1400A Series - Speed-Torque Characteristics Graph (nN=3000 rpm), and Figure 7-43, AM 1400 Series - Dimensional Drawing.

Table 7-29, AM 1400A Series - Specifications (n_N=3000 rpm)

	AM 1400A (Without Brake)	AM 1400AB (With Brake)
P/N	34100430	34100431
Rated Voltage U _N	330 V	
Rated Power Output P _N	2.7 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	8.5 Nm	
Rated Current (100 K) **1 I _N	6.6 A	
Stall Torque (100 K) **1 Mo	13.0 Nm	
Stall Current (100 K) **1 Io	10.1 A	
Maximum Current (for $\leq 200 \text{ ms}$) I_{max}	42.0 A	
Maximum Torque (for ≤ 200 ms) M _{max}	43.5 Nm	
Pole Pairs PZ	4	
Weight m	30.86 lb 14.0 kg	32.19 lb 14.6 kg
Rotor Inertia J	43.00 kgcm ²	43.60 kgcm ²
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		0.7 A
Holding Torque for Brake M _{Br}		11.0 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1400A Series - Speed-Torque Characteristics Graph (n_N=3000 rpm) Refer to Figure 7-28.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

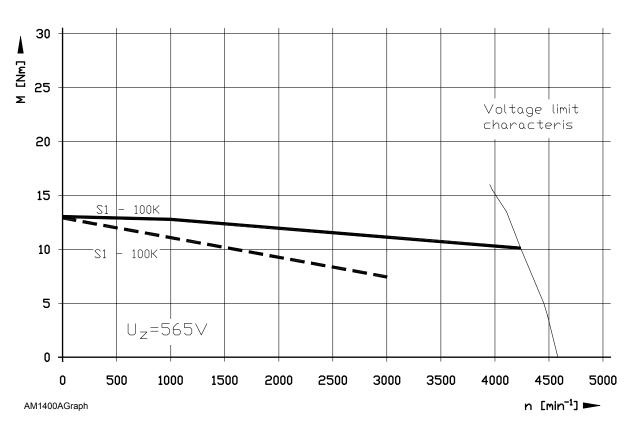


Figure 7-28, AM 1400A Series - Speed-Torque Characteristics Graph (n_N=3000 rpm)

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1400C Series - Axis Motor Specifications (n_N=2000 rpm)

Refer to **Table 7-30**, <u>Figure 7-29</u>, <u>AM 1400C - Speed-Torque</u>
<u>Characteristics Graph (nN=2000 rpm)</u>, and <u>Figure 7-43</u>, <u>AM 1400 Series - Dimensional Drawing</u>.

Table 7-30, AM 1400C Series - Specifications (n_N=2000 rpm)

	AM 1400C (Without Brake)	AM 1400CB (With Brake)
P/N	34100420	34100421
Rated Voltage U _N	305 V	
Rated Power Output P _N	2.3 kW	
Rated Speed n _N	2000 rpm	
Rated Torque (100 K) **1 M _N	11.0 Nm	
Rated Current (100 K) **1 I _N	6.0 A	
Stall Torque (100 K) **1 Mo	13.0 Nm	
Stall Current (100 K) **1 Io	7.2 A	
Maximum Current (for \leq 200 ms) I_{max}	30.0 A	
Maximum Torque (for ≤ 200 ms) M _{max}	43.5 Nm	
Pole Pairs PZ	4	
Weight m	30.86 lb 14.00 kg	32.19 lb 14.60 kg
Rotor Inertia J	43.00 kgcm ²	43.60 kgcm ²
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		0.7 A
Holding Torque for Brake M _{Br}		11.0 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1400C Series - Speed-Torque Characteristics Graph (n_N=2000 rpm) Refer to Figure 7-29.

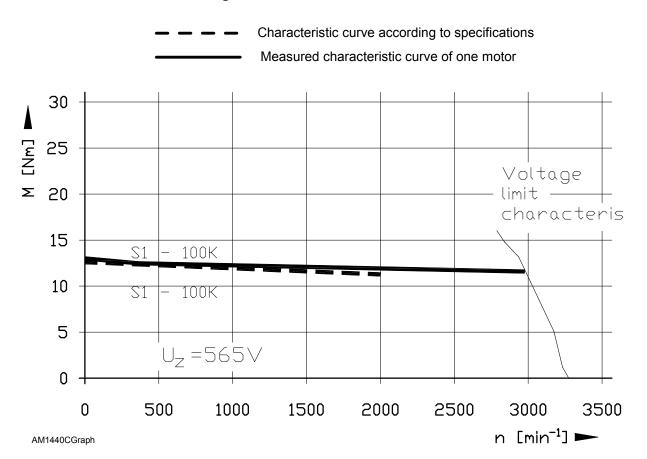


Figure 7-29, AM 1400C Series - Speed-Torque Characteristics Graph (n_N=2000 rpm)

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1550C Series - Axis Motor Specifications

Refer to **Table 7-31**, <u>Figure 7-30</u>, <u>AM 1550C Series - Speed-Torque</u> <u>Characteristics Graph</u>, and <u>Figure 7-44</u>, <u>AM 1550 Series - Dimensional Drawing</u>.

Table 7-31, AM 1550C Series - Specifications

	AM 1550C	AM 1550CB
	(Without Brake)	(With Brake)
P/N	34100250	34100251
Rated Voltage U _n	295 V	
Rated Power Output P _n	2.9 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _n	9.2 Nm	
Rated Current (100 K) **1 I _N	6.9 A	
Stall Torque (100 K) **1 MI ₀	13 Nm	
Stall Current (100 K) **1 I ₀	9.1 A	
Maximum Current (for ≤ 200 ms) I _{max}	29.7 A	
Maximum Torque (for ≤ 200 ms) M _{max}	39 Nm	
Maximum Speed	5000 rpm	
Pole Pairs PZ	4	
Winding Resistance (in one phase)	0.67 Ω	
Winding Inductance (in one phase)	5.40 mH	
Weight m	33.07 lb 15.0 kg	38.36 lb 17.40 kg
Rotor Inertia J	33.0 kgcm ²	35.0 kgcm ²
	T	T
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		1.1 A
Holding Torque for Brake M _{Br}		40 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1550C Series - Speed-Torque Characteristics Graph

Refer to **Figure 7-30** ($n_N = 3000 \text{ rpm}$).

Characteristic curve according to specifications
 Measured characteristic curve of one motor

*) M_{max} = 39 Nm with I_{max} = 29.7 A_{eff} . **) M_{max} = 21 Nm with I_{max} = 15 A_{eff} .

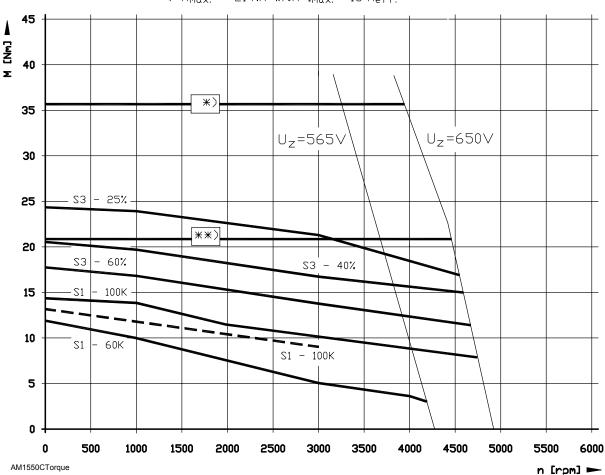


Figure 7-30, AM 1550C Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1550E Series - Axis Motor Specifications

Refer to **Table 7-32**, <u>Figure 7-31</u>, <u>AM 1550E Series - Speed-Torque Characteristics Graph</u>, and <u>Figure 7-44</u>, <u>AM 1550 Series - Dimensional Drawing</u>.

Table 7-32, AM 1550E Series - Specifications

	AM 1550E	AM 1550EB
	(Without Brake)	(With Brake)
P/N	34100260	34100261
Rated Voltage U _N	291 V	
Rated Power Output P _N	4.6 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	14.8 Nm	
Rated Current (100 K) **1 I _N	10.6 A	
Stall Torque (100 K) **1 Mo	21.6 Nm	
Stall Current (100 K) **1 Io	14.6 A	
Maximum Current (for ≤ 200 ms) I _{max}	49.5 A	
Maximum Torque (for ≤ 200 ms) M _{max}	64 Nm	
Maximum Speed	5000 rpm	
Pole Pairs PZ	4	
Winding Resistance (in one phase)	0.32 Ω	
Winding Inductance (in one phase)	3.10 mH	
Weight m	44.09 lb 20.0 kg	49.38 lb 22.4 kg
Rotor Inertia J	54.0 kgcm ²	56.0 kgcm ²
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		1.1 A
Holding Torque for Brake M _{Br}		40 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1550E Series - Speed-Torque Characteristics Graph

Refer to Figure 7-31.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

*) M_{max} = 64 Nm with I_{max} = 49.5 A_{eff} . **) M_{max} = 42 Nm with I_{max} = 30 A_{eff} .

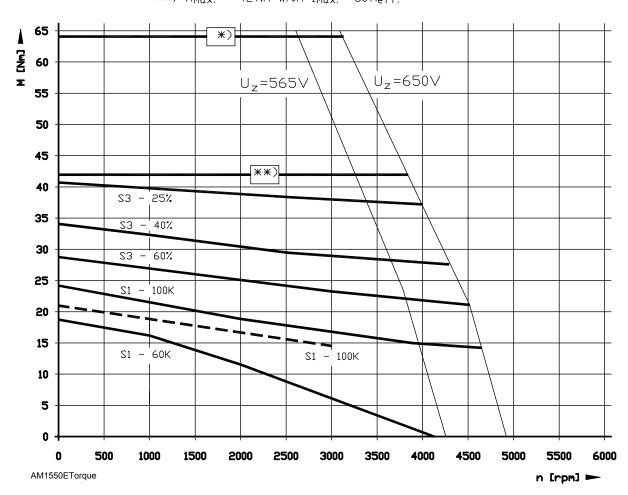


Figure 7-31, AM 1550E Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1550G Series - Axis Motor Specifications

Refer to **Table 7-33**, <u>Figure 7-32</u>, <u>AM 1550G Series - Speed-Torque Characteristics Graph</u>, and <u>Figure 7-44</u>, <u>AM 1550 Series - Dimensional Drawing</u>.

Table 7-33, AM 1550G Series - Specifications

	AM 1550G	AM 1550GB	
	(Without brake)	(With brake)	
P/N	34100270	34100271	
Rated Voltage U _N	287 V		
Rated Power Output P _N	5.2 kW		
Rated Speed n _N	3000 rpm		
Rated Torque (100 K) **1 M _N	16.7 Nm		
Rated Current (100 K) **1 I _N	12.0 A		
Stall Torque (100 K) **1 Mo	26.1 Nm		
Stall Current (100 K) **1 Io	18.0 A		
Maximum Current (for \leq 200 ms) I_{max}	68.6 A		
$\textbf{Maximum Torque (for} \leq 200 \text{ ms)} \ \ \textbf{M}_{\text{max}}$	90 Nm		
Maximum Speed	5000 rpm		
Pole Pairs PZ	4		
Winding Resistance (in one phase)	0.23 Ω		
Winding Inductance (in one phase)	2.25 mH		
Weight m	55.11 lb 25.0 kg	60.04 lb 27.4 kg	
Rotor Inertia J	75.0 kgcm ²	77.0 kgcm ²	
Rated Voltage for Brake U _{Br}		24 VDC	
Rated Current for Brake I _{Br}		1.1 A	
Holding Torque for Brake M _{Br}		40 Nm	

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1550G Series - Speed-Torque Characteristics Graph

Refer to Figure 7-32.

Characteristic curve according to specificationsMeasured characteristic curve of one motor

*)
$$M_{\text{max}} = 90 \,\text{Nm}$$
 with $I_{\text{max}} = 68.6 \,\text{A}_{\text{eff}}$.
**) $M_{\text{max}} = 64 \,\text{Nm}$ with $I_{\text{max}} = 46 \,\text{A}_{\text{eff}}$.

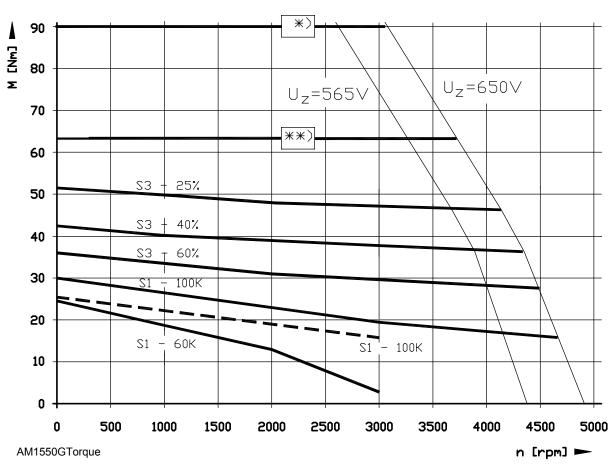


Figure 7-32, AM 1550G Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1550A-E Series - Axis Motor Specifications

Refer to **Table 7-34**, Figure 7-33, AM 1550A—E Series - Speed-Torque Characteristics Graph, Figure 7-46, AM 1550E Series - Dimensional Drawing, and Table 7-42, AM 1550E Series - Motor Dimensions.

Table 7-34, AM 1550A-E Series - Specifications

	AM 1550A-E	AM 1550AB-E	
	(Without brake)	(With brake)	
P/N	34100280	34100281	
Rated Voltage U _N	412 V		
Rated Power Output P _N	3.5 kW		
Rated Speed n _N	3000 rpm		
Rated Torque (100 K) **1 M _N	11.0 Nm		
Rated Current (100 K) **1 I _N	5.6 A		
Stall Torque (100 K) **1 Mo	13.0 Nm		
Stall Current (100 K) **1 Io	6.5 A		
Maximum Current (for \leq 200 ms) I_{max}	21.2 A		
Maximum Torque (for $\leq 200 \text{ ms}$) M_{max}	39 Nm		
Maximum Speed	4200 rpm		
Pole Pairs PZ	4		
Winding Resistance (in one phase)	1.3 Ω		
Winding Inductance (in one phase)	9.8 mH		
Weight m	33.07 lb 15.0 kg	38.36 lb 17.4 kg	
Rotor Inertia J	33.0 kgcm ²	35.0 kgcm ²	
Rated Voltage for Brake U _{Br}		24 VDC	
Rated Current for Brake I _{Br}		1.1 A	
Holding Torque for Brake M _{Br}		40 Nm	

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1550A-E Series - Speed-Torque Characteristics Graph

Refer to Figure 7-33.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

**)
$$M_{max} = 39$$
 Nm when $I_{max} = 21.2$ A **) $M_{max} = 29$ Nm when $I_{max} = 15$ A

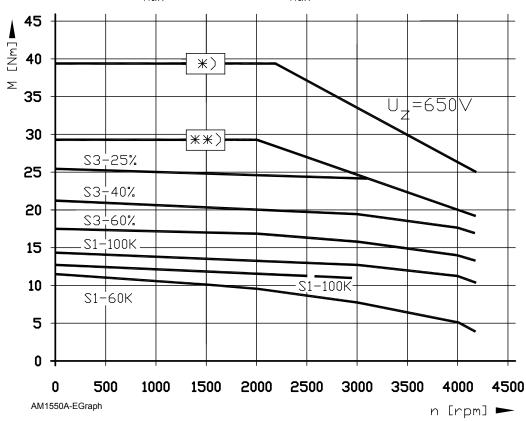


Figure 7-33, AM 1550A-E Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.



AM 1550C-E Series - Axis Motor Specifications

Refer to **Table 7-35**, <u>Figure 7-34</u>, <u>AM 1550C–E Series - Speed-Torque Characteristics Graph</u>, <u>Figure 7-46</u>, <u>AM 1550E Series - Dimensional Drawing</u>, and <u>Table 7-42</u>, <u>AM 1550E Series - Motor Dimensions</u>.

Table 7-35, AM 1550C-E Series - Specifications

	AM 1550C-E	AM 1550CB-E	
	(Without brake)	(With brake)	
P/N	34100285	34100286	
Rated Voltage U _N	416 V		
Rated Power Output P _N	5.0 kW		
Rated Speed n _N	3000 rpm		
Rated Torque (100 K) **1 M _N	16.0 Nm		
Rated Current (100 K) **1 I _N	8.2 A		
Stall Torque (100 K) **1 Mo	17.7 Nm		
Stall Current (100 K) **1 Io	8.5 A		
Maximum Current (for \leq 200 ms) I_{max}	27.6 A		
Maximum Torque (for ≤ 200 ms) M _{max}	52 Nm		
Maximum Speed	4200 rpm		
Pole Pairs PZ	4		
Winding Resistance (in one phase)	0.86 Ω		
Winding Inductance (in one phase)	7.4 mH		
Weight m	38.58 lb 17.5 kg	43.87 lb 19.9 kg	
Rotor Inertia J	43.0 kgcm ²	45.0 kgcm ²	
Rated Voltage for Brake U _{Br}		24 VDC	
Rated Current for Brake I _{Br}		1.1 A	
Holding Torque for Brake M _{Br}		40 Nm	

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1550C-E Series - Speed-Torque Characteristics Graph

Refer to Figure 7-34.

— — — Characteristic curve according to specifications
 — Measured characteristic curve of one motor

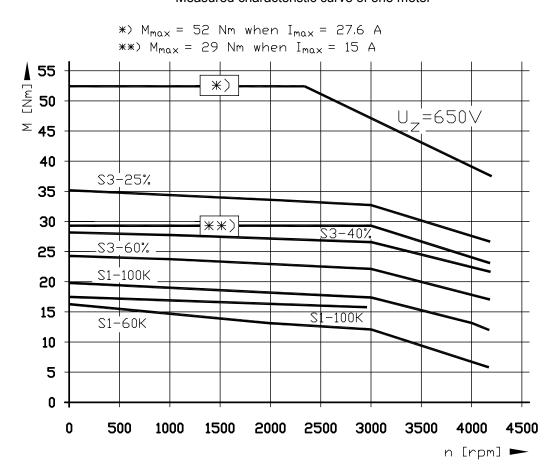


Figure 7-34, AM 1550C-E Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.

The diagram shows the characteristic curves as determined on a test stand for one motor mounted without thermal insulation.



AM 1550D-E Series - Axis Motor Specifications

Refer to **Table 7-36**, <u>Figure 7-35</u>, <u>AM 1550D–E Series - Speed-Torque Characteristics Graph</u>, <u>Figure 7-46</u>, <u>AM 1550E Series - Dimensional Drawing</u>, and <u>Table 7-42</u>, <u>AM 1550E Series - Motor Dimensions</u>.

Table 7-36, AM 1550D-E Series - Specifications

	AM 1550D-E	AM 1550DB-E
	(Without brake)	(With brake)
P/N	34100290	34100291
Rated Voltage U _N	408 V	
Rated Power Output P _N	5.7 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	18.1 Nm	
Rated Current (100 K) **1 I _N	9.1 A	
Stall Torque (100 K) **1 Mo	21.6 Nm	
Stall Current (100 K) **1 Io	10.6 A	
Maximum-Current (for ≤ 200 ms) I _{max}	35.0 A	
$\textbf{Maximum Torque (for} \leq 200 \text{ ms)} \ \ \textbf{M}_{\text{max}}$	64 Nm	
Maximum Speed	4200 rpm	
Pole Pairs PZ	4	
Winding Resistance (in one phase)	0.61 Ω	
Winding Inductance (in one phase)	5.8 mH	
Weight m	44.09 lb 20.0 kg 49.38 lb 22.4 kg	
Rotor Inertia J	54.0 kgcm ² 56.0 kgcm ²	
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}	1.1 A	
Holding Torque for Brake M _{Br}		40 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1550D-E Series - Speed-Torque Characteristics Graph

Refer to Figure 7-35.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

*) M_{max} = 64 Nm when I_{max} = 35 A **) M_{max} = 59 Nm when I_{max} = 30 A

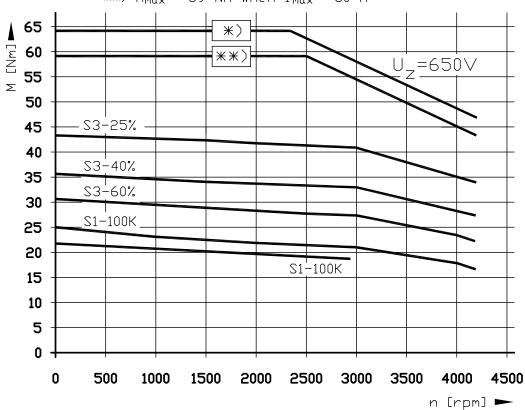


Figure 7-35, AM 1550D-E Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.

The diagram shows the characteristic curves as determined on a test stand for one motor mounted without thermal insulation.



AM 1550G-E Series - Axis Motor Specifications

Refer to **Table 7-37**, Figure 7-36, AM 1550G–E Series - Speed-Torque Characteristics Graph, Figure 7-46, AM 1550E Series - Dimensional Drawing, and Table 7-42, AM 1550E Series - Motor Dimensions.

Table 7-37, AM 1550G-E Series - Specifications

	AM 1550G-E	AM 1550GB-E
	(Without brake)	(With brake)
P/N	34100295	34100296
Rated Voltage U _N	396 V	
Rated Power Output P _N	6.0 kW	
Rated Speed n _N	3000 rpm	
Rated Torque (100 K) **1 M _N	19.2 Nm	
Rated Current (100 K) **1 I _N	9.8 A	
Stall Torque (100 K) **1 Mo	26.1 Nm	
Stall Current (100 K) **1 Io	12.8 A	
Maximum Current (for ≤ 200 ms) I _{max}	49.5 A	
Maximum Torque (for ≤ 200 ms) M _{max}	90 Nm	
Maximum Speed	4200 rpm	
Pole Pairs PZ	4	
Winding Resistance (in one phase)	0.38 Ω	
Winding Inductance (in one phase)	3.7 mH	
Weight m	55.11 lb 25.0 kg	60.41 lb 27.4 kg
Rotor Inertia J	75.0 kgcm ²	77.0 kgcm ²
Rated Voltage for Brake U _{Br}		24 VDC
Rated Current for Brake I _{Br}		1.1 A
Holding Torque for Brake M _{Br}		40 Nm

⁽¹⁰⁰K)**1 100 K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.



AM 1550G-E Series - Speed-Torque Characteristics Graph

Refer to Figure 7-36.

Characteristic curve according to specifications
 Measured characteristic curve of one motor

*)
$$M_{\text{max}} = 90 \text{ Nm} \text{ when } I_{\text{max}} = 49.5 \text{ A}$$

**) $M_{\text{max}} = 59 \text{ Nm} \text{ when } I_{\text{max}} = 30 \text{ A}$

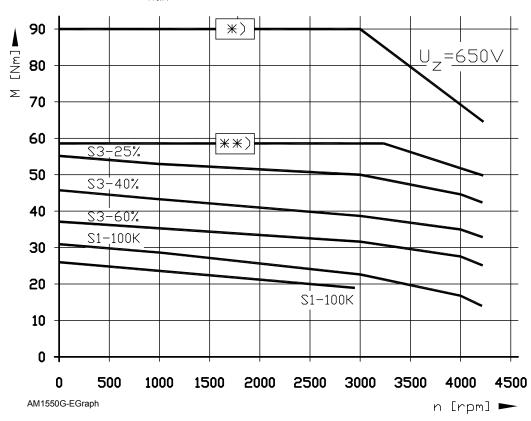


Figure 7-36, AM 1550G-E Series - Speed-Torque Characteristics Graph

NOTE: In the performance diagram, the characteristic curves are shown as broken lines.

The diagram shows the characteristic curves as determined on a test stand for one motor mounted without thermal insulation.



Axis Motors Dimension Drawings

The dimensional drawings for the following Axis Motors are illustrated:

- AM 820 Series AM 820A and AM 820AB
- AM 960 Series AM 960A and AM 960AB
- ☐ AM 960 Series Connector illustrations
- AM 1150 Series AM 1150A and AM 1150AB
- AM 1160 Series AM 1160A and AM 1160AB, AM 1160C, and AM 1160CB, AM 1160E, and AM 1160EB
- AM 1160 Series Connector illustrations
- □ AM 1300-E Series AM 1300A–E and AM 1300AB–E, AM 1300C–E, and AM 1300CB–E
- □ AM 1300-E Series Connector Illustrations
- AM 1400 Series AM 1400A and AM 1400AB, AM 1400C, and AM 1400CB
- AM 1400 Series Connector illustrations
- <u>AM 1550 Series AM 1550C and AM 1550CB, AM 1550E, and AM 1550EB, AM 1550G, and AM 1550GB</u>
- AM 1550 Series Connector illustrations
- AM 1550E Series AM 1550A-E and AM 1550AB-E, AM 1550C-E, and AM 1550CB-E, AM 1550D-E, and AM 1550DB-E,
 AM 1550G-E, and AM 1550GB-E

AM 820 Series - Dimensional Drawing

Refer to Figure 7-37.

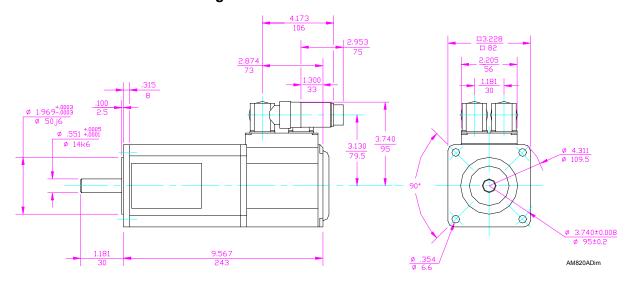


Figure 7-37, AM 820A and AM 820AB - Dimensional Drawing



AM 960 Series - Dimensional Drawing

Refer to Figure 7-38, Table 7-38, and Figure 7-39.

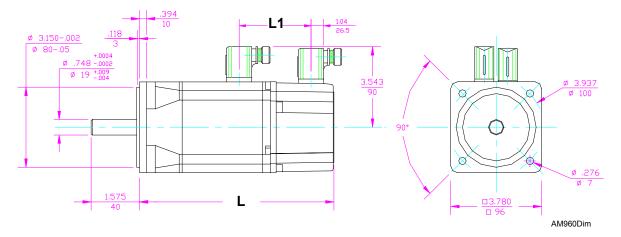



Figure 7-38, AM 960A and AM 960AB - Dimensional Drawing

Table 7-38, AM 960 Series - Motor Dimensions

Motor	L	L1
AM 960A (without brake)	<u>10.55 in</u> 268 mm	<u>2.76 in</u> 70 mm
AM 960AB (with brake)	<u>12.13 in</u> 308 mm	<u>4.25 in</u> 108 mm

AM 960 Series - Connector Illustrations

Refer to **Figure 7-39**. Refer to <u>Table 7-6</u>, <u>Maximum Bend Radii of Cables</u>.

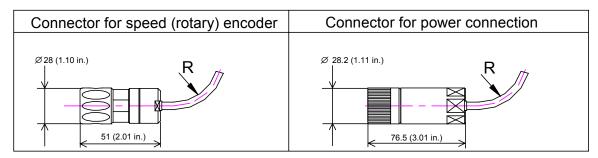

AMConnector

Figure 7-39, AM 960 Series, AM 1160 Series, AM 1400 Series - Connector Illustrations



AM 1150 Series - Dimensional Drawing

Refer to Figure 7-40.

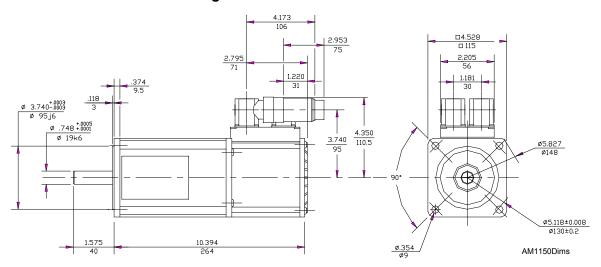


Figure 7-40, AM 1150 Series - Dimensional Drawing



AM 1160 Series - Dimensional Drawing

Refer to Figure 7-41 and Table 7-39.

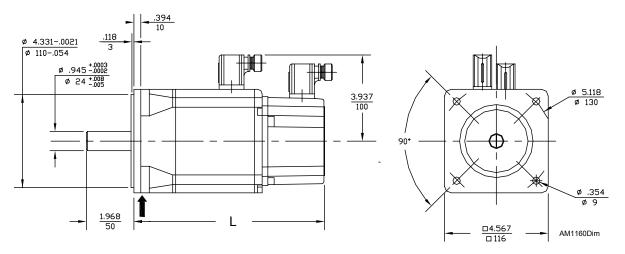


Figure 7-41, AM 1160 Series - Dimensional Drawing

Table 7-39, AM 1160 Series - Motor Dimensions

Motor	L
AM 1160A (without brake)	8.70 in 221 mm
AM 1160AB (with brake)	<u>10.11 in</u> 257 mm
AM 1160C (without brake)	<u>9.72 in</u> 246 mm
AM 1160CB (with brake)	<u>11.10 in</u> 282 mm
AM 1160E (without brake)	<u>11.65 in</u> 296 mm
AM 1160EB (with brake)	3.07 in 332 mm

AM 1160 Series - Connector Illustrations

Refer to Figure 7-39, AM 960 Series, AM 1160 Series, AM 1400 Series - Connector Illustrations.



AM 1300-E Series - Dimensional Drawing

Refer to Figure 7-42 and Table 7-40.

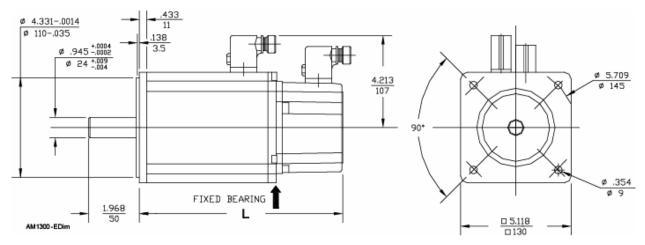


Figure 7-42, AM 1300-E Series - Dimensional Drawing

Table 7-40, AM 1300-E Series - Motor Dimensions

Motor	L
AM 1300A-E (without brake)	<u>8.29 in</u> 210.5 mm
AM 1300AB-E (with brake)	<u>9.94 in</u> 252.5 mm
AM 1300C–E (without brake)	<u>9.11 in</u> 231.5 mm
AM 1300CB-E (with brake)	<u>10.77 in</u> 273.5 mm

AM 1300-E Series - Connector Illustrations

Refer to Figure 7-39, AM 960 Series, AM 1160 Series, AM 1400 Series - Connector Illustrations.



AM 1400 Series - Dimensional Drawing

Refer to Figure 7-43.

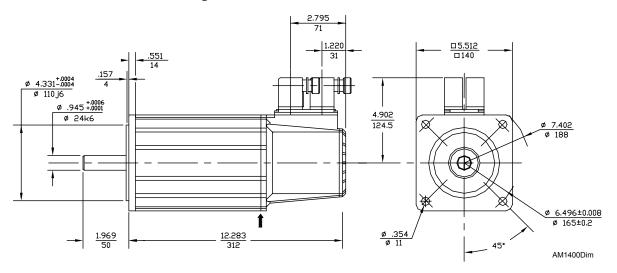


Figure 7-43, AM 1400 Series - Dimensional Drawing

AM 1400 Series - Connector Illustrations

Refer to Figure 7-39, AM 960 Series, AM 1160 Series, AM 1400 Series - Connector Illustrations.



AM 1550 Series - Dimensional Drawing

Refer to Figure 7-44 and Table 7-41.

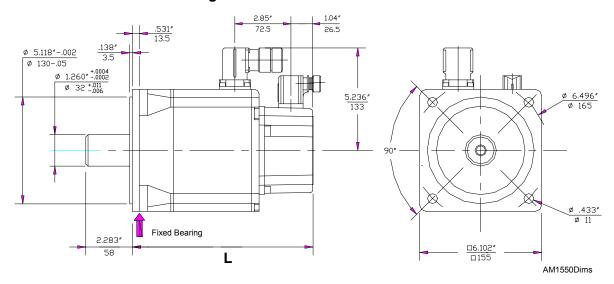


Figure 7-44, AM 1550 Series - Dimensional Drawing

Table 7-41, AM 1550 Series - Motor Dimensions

Motor	L
AM 1550C (without brake)	<u>10.20 in</u>
	259 mm
AM 1550CB (with brake)	<u>11.93 in</u>
	303 mm
AM 1550E (without brake)	<u>11.93 in</u>
	303 mm
AM 1550EB (with brake)	<u>13.66 in</u>
	347 mm
AM 1550G (without brake)	<u>13.66 in</u>
	347 mm
AM 1550GB (with brake)	<u>15.19 in</u>
	386 mm

AM 1550 Series - Connector Illustrations

Refer to **Figure 7-45**. Refer to <u>Table 7-6</u>, <u>Maximum Bend Radii of Cables</u>.

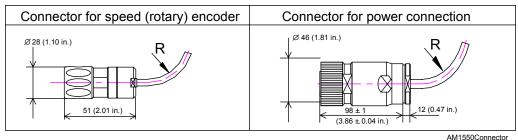


Figure 7-45, AM 1550 Series - Connector Illustrations



AM 1550E Series - Dimensional Drawing

Refer to Figure 7-46 and Table 7-42.

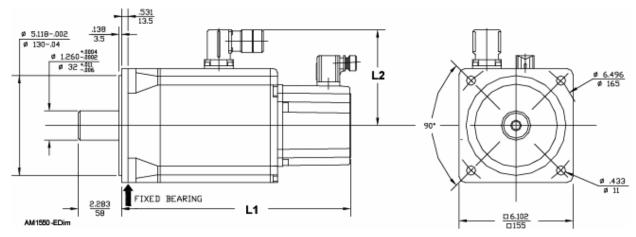


Figure 7-46, AM 1550E Series - Dimensional Drawing

Table 7-42, AM 1550E Series - Motor Dimensions

Matau	1.4	1.0
Motor	L1	L2
AM 1550A–E (without brake)	<u>10.20 in</u>	<u>4.69 in</u>
	259 mm	119 mm
AM 1550AB-E (with brake)	<u>11.93 in</u>	
	303 mm	
AM 1550C-E (without brake)	<u>11.06 in</u>	<u>4.69 in</u>
	281 mm	119 mm
AM 1550CB-E (with brake)	12.80 in	
	325 mm	
AM 1550D-E (without brake)	<u>11.93 in</u>	4.69 in
	303 mm	119 mm
AM 1550DB-E (with brake)	<u>13.66 in</u>	
	347 mm	
AM 1550G-E (without brake)	<u>13.66 in</u>	<u>5.24 in</u>
,	347 mm	133 mm
AM 1550GB-E (with brake)	<u>15.20 in</u>	
	386 mm	

AM 1550E Series - Connector Illustrations

Refer to <u>Figure 7-45, AM 1550 Series - Connector Illustrations</u>. Refer to Table 7-6, Maximum Bend Radii of Cables.



Spindle Motors - SM Series

In general, the spindle (asynchronous) motor designation is of the form SM pppf where: SM = Spindle Motor – ppp = rated power in kW, and f = family. The C and D family of motors are the latest motors available. The C version features a standard bearing that allows operation up to 9,000 rpm. The D version features a spindle bearing which allows higher radial forces and operation up to 12,000 rpm. The C and D motors also feature a stronger fan for better cooling and better balancing. The E and F family are the same as the C and D but without a key.

Spindle motors offer the following features:

- Rotary encoder for speed measurement
- Precision balancing spindle (asynchronous) motor can be balanced at any time
- Separate cooling via integrated fan
- IM B5 design, per EN 60 034-7 requirements (for securing by flange/base)
- Protection class IP 54, per EN 60 529 requirements
- Cylindrical shaft end per DIN 748 with feather key and threaded central bore hole per ISO 866 BS5 requirements
- Flange dimensions per DIN 42 948 and IEC 72 requirements
- Maintenance-free bearings
- Separate cooling through integral fan
- Resistor probe to monitor temperature in the stator winding
- Thermal Class F
- Vibration severity grade S for A and B family; SR for C, D, E, F, G, and H family
- Feather-key balanced

The following topics are described:

- Spindle Motors General Technical Information
- Spindle Motors Mechanical Life
- Shaft Bearings
- Shaft End
- □ SM 055A, SM 075A, and SM 100A Specifications
- SM 055A Power and Torque Characteristics
- □ SM 075A Power and Torque Characteristics
- □ SM 100A Power and Torque Characteristics
- □ SM 120A Specifications
- □ SM 120A Power and Torque Characteristics



- □ SM 055C–F, SM 075C–F, SM 100C–F Specifications Summary
- □ SM 055C–F Specifications
- SM 055C–F Power and Torque Characteristics
- □ SM 075C–F Specifications
- SM 075C–F Power and Torque Characteristics
- □ SM 100C–F Specifications
- SM 100C–F Power and Torque Characteristics
- SM 120C–F, SM 120E, SM 150C–F, SM 240C–F Specifications Summary
- □ SM 120C, SM 120E Specifications
- □ SM 120C, SM 120E Power and Torque Characteristics
- □ SM 150C–F Specifications
- □ SM 150C–F Power and Torque Characteristics
- □ SM 200C–F Specifications
- □ SM 200C–F Power and Torque Characteristics
- □ SM 240C–F Specifications
- □ SM 240C–F Power and Torque Characteristics
- Spindle Motors Dimension Drawings
- SM 055A, SM 075A, SM 100A Dimensional Drawing
- SM 055A, SM 075A, SM 100A, SM 120a, SM 055C–F, SM 075C–F,
 SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F,
 SM 240C–F Connector for Speed (Rotary) Encoder
- □ SM 120A Dimensional Drawing
- □ SM 120A Connector to Power Connection
- □ SM 055C- F, SM 075C-F, SM 100C-F Dimensional Drawing
- □ SM 120C, SM 120E, SM 240C–F Dimensional Drawing
- □ SM 150C–F Dimensional Drawing
- □ SM 200C–F Dimensional Drawing

Spindle Motors General Technical Information

The specifications and the characteristic curves apply to motors mounted without thermal insulation. The temperature of the winding may differ from the maximum permissible ambient temperature of 40°C by a maximum of 1005. If the motor is mounted so that it is thermally insulated, it is necessary to reduce the motor torque in order to avoid thermal overloading o the motor.

Spindle Motors Mechanical Life

The service life of the bearings depends on the shaft load and the mean rotational speed (see "Permissible Forces on the Motor Shaft").



Shaft Bearing

The spindle (asynchronous) motor is equipped with maintenance-free bearings. The shaft bearing is optionally available as either standard bearing or as spindle bearing. The version with spindle bearing can withstand greater lateral forces and allows higher spindle speeds:

- Standard bearing: maximum 8000/9000 rpm
- Spindle bearing: maximum 10000/12000 rpm

Motors with spindle bearing have slightly larger overall length.

Shaft End

The spindle (asynchronous) motors have a cylindrical shaft end as per DIN 748 with a centering hold as per DIN 332-DR.

Spindle (asynchronous) motors with standard bearing are supplied with keyway and feather key as per DIN 6885 Sheet 1 and are balanced. They are also available with smooth shaft upon request.

Feather key (see Table 7-20, Feather Key Specifications):

SM 075C-F: AS 10 x 8 x 70 SM 200C-F: AS 12 x 8 x 90

The standard version of the spindle (asynchronous) motors with spindle bearing has a smooth shaft (without keyway and feather key). Upon request, it is available with keyway and feather key as per DIN 6885 Sheet 1.



SM 055A, SM 075A, and SM 100A - Specifications Refer to **Table 7-43**.

Table 7-43, SM 055A, SM 075A, and SM 100A - Specifications

	SM 055A	SM 075A	SM 100A
P/N	34100600	34100605	34100610
Fan	+**1	+	+
Brake	_**2	_	_
Rated Voltage U _N	330 V		
Rated Power Output P _N	5.5 kW	7.5 kW	10.0 kW
Rated Speed n _N	1500 rpm		
Rated Torque M _N	35.0 Nm	48.0 Nm	63.5 Nm
Rated Current I _N	15.5 A	21 A	26 A
Operation Ratio n	0.83		0.82
Maximum Speed n _{max}	9000 rpm		
Pole Pairs PZ	2		
Weight m	116.84 lb 53.00 kg	141.09 lb 64.00 kg	160.93 lb 73.00 kg
Rotor Inertia J	184.00 kgcm ²	242.00 kgcm ²	291.00 kgcm ²

Fan

Rated Voltage U _L	3 x 400 V	
Rated Current I _L	0.14 A	0.17 A
Frequency f _L	50 Hz / 60 Hz	

^{+**1 +} Available

^{-**2 -} Not Available



SM 055A - Power and Torque Characteristics

Refer to Table 7-44, Figure 7-47, and Figure 7-48.

Table 7-44, SM 055A - Power and Torque Characteristics Table

Duty Cycle	Speed n	Power P	Torque M	Current I
S1	1500 rpm	5.5 kW	35 Nm	15.5 A
	7000 rpm	5.5 kW	7.5 Nm	_
	9000 rpm	4.7 kW	5.0 Nm	_
S6-60%	1500 rpm	7.2 kW	45.8 Nm	18.5 A
	6000 rpm	7.2 kW	11.5 Nm	_
	9000 rpm	4.7 kW	5.0 Nm	_
S6-40%	1500 rpm	8.8 kW	56 Nm	22.0 A
	4300 rpm	8.8 kW	19.5 Nm	_
	9000 rpm	4.7 kW	5.0 Nm	_

SM 055A - Power Characteristics Graph

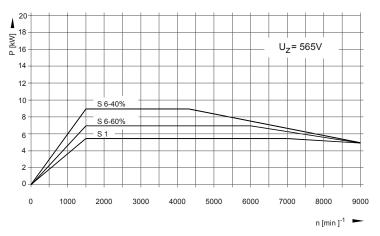


Figure 7-47, SM 055A - Power Characteristics Graph

SM 055A - Torque Characteristics Graph

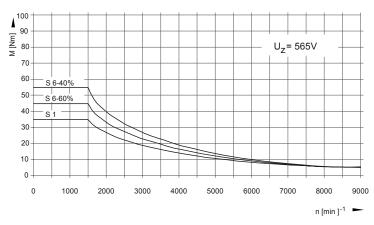


Figure 7-48, SM 055A Torque Characteristics



SM 075A - Power and Torque Characteristics

Refer to Table 7-45, Figure 7-49, and Figure 7-50.

Table 7-45, SM 075A - Power and Torque Characteristics Table

Duty Cycle	Speed n	Power P	Torque M	Current I
S1	1500 rpm	7.5 kW	48 Nm	21.0 A
	7000 rpm	7.5 kW	10.2 Nm	_
	9000 rpm	6.5 kW	6.9 Nm	_
S6-60%	1500 rpm	9.8 kW	62.4 Nm	24.5 A
	5800 rpm	9.8 kW	16.5 Nm	_
	9000 rpm	6.5 kW	6.9 Nm	_
S6-40%	1500 rpm	12 kW	76.4 Nm	30.0 A
	4300 rpm	12 kW	28.6 Nm	_
	9000 rpm	6.5 kW	6.9 Nm	_

SM 075A - Power Characteristics Graph

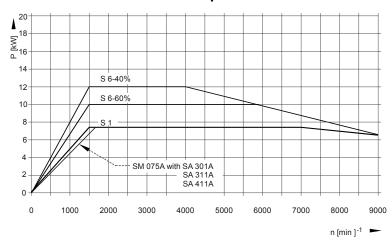


Figure 7-49, SM 075A Power Characteristics Graph

SM 075A - Torque Characteristics Graph

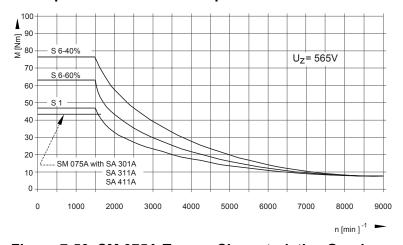


Figure 7-50, SM 075A Torque Characteristics Graph



SM 100A - Power and Torque Characteristics

Refer to Table 7-46, Figure 7-51, and Figure 7-52.

Table 7-46, SM 100A - Power and Torque Characteristics Table

Duty Cycle	Speed n	Power P	Torque M	Current I
S1	1500 rpm	10 kW	63.5 Nm	26 A
	7400 rpm	10 kW	13.6 Nm	_
	9000 rpm	7.8 kW	8.3 Nm	_
S6-60%	1500 rpm	13 kW	82.8 Nm	32 A
	5200 rpm	13 kW	22.6 Nm	_
	9000 rpm	7.8 kW	8.3 Nm	_
S6-40%	1500 rpm	82.8 kW	101.9 Nm	38 A
	3000 rpm	22.6 kW	50.9 Nm	_
	9000 rpm	8.3 kW	8.3 Nm	_

SM 100A - Power Characteristics Graph

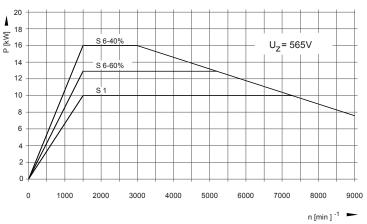


Figure 7-51, SM 100A Power Characteristics Graph

SM 100A - Torque Characteristics Graph

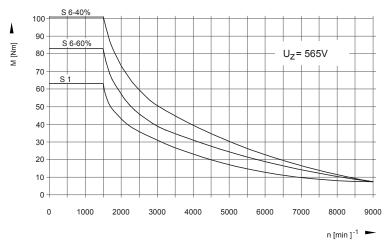


Figure 7-52, SM 100A Torque Characteristics Graph



SM 120A - Specifications

Refer to Table 7-47 and "SM 120A - Power and Torque Characteristics."

Table 7-47, SM 120A - Specifications

	SM 120A
P/N	34100615
Fan	+**1
Brake	_**2
Rated Voltage U _N	328 V
Rated Power Output P _N	12 kW
Rated Speed n _N	1500 rpm
Rated Torque M _N	76 Nm
Rated Current I _N	27.8 A
Operation Ratio η	0.85 A
Maximum Speed n _{max}	7500 rpm
Pole Pairs PZ	2
Weight m	198.41 lb 90.00 kg
Rotor Inertia J	540.00 kgcm ²

Fan

Rated Voltage U _L	3 x 400 V	
Rated Current I _L	0.2 A	
Frequency f _L	50 Hz / 60 Hz	

^{+**1 +} Available -**2 - Not Available



SM 120A - Power and Torque Characteristics

Refer to Table 7-48, Figure 7-53, and Figure 7-54.

Table 7-48, SM 120A - Power and Torque Characteristics Table

Duty Cycle	Speed n	Power P	Torque M	Current I
S1	1500 rpm	12 kW	76 Nm	27.8 A
	6000 rpm	12 kW	21 Nm	_
	7500 rpm	12 kW	18 Nm	_
S6-60%	1500 rpm	15 kW	98 Nm	34.0 A
	5200 rpm	15 kW	28 Nm	_
	7500 rpm	13 kW	24 Nm	_
S6-40%	1500 rpm	18 kW	117 Nm	40.0 A
	3300 rpm	18 kW	34 Nm	_
	7500 rpm	13 kW	36 Nm	_

SM 120A - Power Characteristics Graph

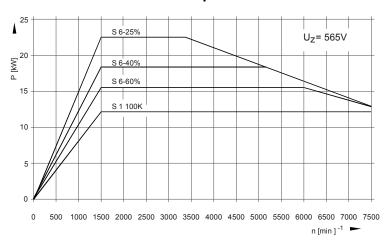


Figure 7-53, SM 120A - Power Characteristics Graph

SM 120A - Torque Characteristics Graph

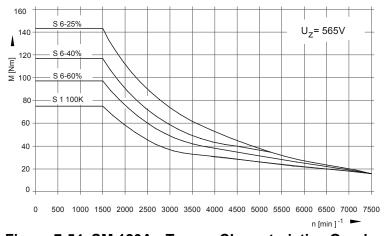


Figure 7-54, SM 120A - Torque Characteristics Graph



SM 055C–F, SM 075C–F, SM 100C–F Specifications Summary Refer to Table 7-49.

Table 7-49, SM 055C-F, SM 075C-F, SM 100C-F - Specifications Summary

	SM 055C,D,E,F	SM 075C,D,E,F	SM 100C,D,E,F
Reference for details	Table 7-49	Table 7-52	Table 7-54
Fan	+**1	+	+
Holding Brake	_**2	_	_
Rated Voltage U _N	250 V	305 V	330 V
Rated power output P _N	5.5 kW	7.5 kW	10.0 kW
Rated speed n _N (105 K)**3	1500 rpm		
Rated torque M _N (105 K)**3	35.0 Nm	47.8 Nm	63.7 Nm
Rated current I _N	18.0 A	20.1 A	25 A
Efficiency n	0.85		
Maximum Continuous Speed n _{max cont} with standard bearing with spindle bearing	7,500 rpm 10,000 rpm		
Maximum Speed**4 n _{max} with standard bearing with spindle bearing	9,000 rpm 12,000 rpm		
Maximum Current I _{max}	33 A	36 A	44 A
Pole Pairs PZ	2		
Weight m	112.4 lb 51 kg	149.9 lb 68 kg	182.9 lb 83 kg
Rotor Inertia J	245 kgcm ²	353 kgcm ²	405 kgcm ²

Fan

Rated Voltage for Fan U _L	3 x 400 V
Rated Current for Fan I _L	0.31 A
Frequency f _L	50 Hz/60 Hz

^{+**1 +} Available

^{-**2 –} Not Available

^{**3 105} K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.

^{**4} For cycle duration of 10 minutes: 3 min. (n_{max}) ; 6 min. 2/3 x (n_{max}) ; standstill of 1 min.



SM 055C-F - Specifications

Refer to **Table 7-50** and "SM 055C–F - Power and Torque Characteristics."

Table 7-50, SM 055C-F - Specifications

	With Key	SM 055C	SM 055D	
	Without Key	SM 055E	SM 055F	
P/N	With Key	With standard bearing 34100625	With spindle bearing 34100626	
P/N	Without Key	With standard bearing 34100627	With spindle bearing 34100628	
Rated Voltag	je U _N	250 V		
Rated Power	Output P _N	5.5 kW		
Rated Speed	I n _N (105 K) **1	1500 rpm		
Rated Torqu	e M _N (105 K) **1	35.0 Nm		
Rated Curre	nt I _N	18.0 A		
Efficiency n		0.85		
Maximum Co	ontinuous Speed n _{max cont}	7500 rpm	9000 rpm	
Maximum Sp	peed**2 n _{max}	9000 rpm	12000 rpm	
Maximum Cu	urrent I _{max}	33 A		
Pole Pairs P	Z	2		
Weight m		112.4 lb 51 kg		
Rotor Inertia	J	245 kgcm ²		

^{**1 105} K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.

Fan

Connectors

Ган	
Rated Voltage for Fan U _L	3 x 400 V
Rated Current for Fan I _L	0.31 A
Frequency f _L	50 Hz/60 Hz
Accessories	
Power Cable, without Connector	Up to 24.7 A, P/N 34201301
Cable for Fan. without Connector	P/N 34201310
Encoder Cable. Complete with	P/N 342000xx

^{**2} For cycle duration of 10 minutes: 3 min. (n_{max}) ; 6 min. 2/3 x (n_{max}) ; standstill of 1 min



SM 055C-F - Power and Torque Characteristics

Refer to Table 7-51, Figure 7-55, and Figure 7-56.

Table 7-51, SM 055C-F - Power and Torque Characteristics

Duty Cycle	Speed n	Power P	Torque M	Current I (for 1500 rpm)
S1	1500 rpm	5.5 kW	35.1 Nm	18.0 A
	6000 rpm	5.5 kW	8.8 Nm	_
	12000 rpm	5.5 kW	4.4 Nm	_
S6-60%	1500 rpm	7.0 kW	44.7 Nm	22.0 A
	6000 rpm	7.0 kW	11.2 Nm	_
	12000 rpm	7.0 kW	5.6 Nm	_
S6-40%	1500 rpm	7.9 kW	50.4 Nm	24.0 A
	6000 rpm	7.9 kW	12.6 Nm	_
	12000 rpm	7.9 kW	6.3 Nm	_
S6-25%	1500 rpm	9.5 kW	60.7 Nm	28.0 A
	6000 rpm	9.5 kW	15.2 Nm	_
	12000 rpm	9.5 kW	7.6 Nm	_

SM 055C-F - Power Characteristics Graph

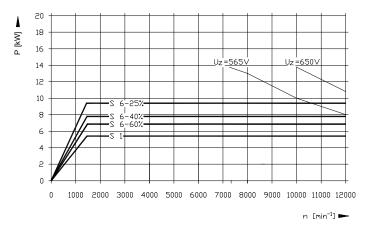


Figure 7-55, SM 055C–F - Power Characteristics Graph SM 055C–F - Torque Characteristics Graph

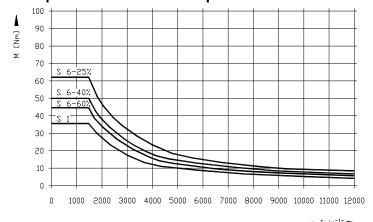


Figure 7-56, SM 055C-F - Torque Characteristics



SM 075C-F - Specifications

Refer to **Table 7-52** and "<u>SM 075C–F - Power and Torque</u> Characteristics."

Table 7-52, SM 075C-F - Specifications

	With Key	SM 075C	SM 075D	
	Without Key	SM 075E	SM 075F	
P/N	With Key	With standard bearing 34100630	With spindle bearing 34100631	
P/N	Without Key	With standard bearing 34100632	With spindle bearing 34100633	
Rated Volta	age U _N	305 V		
Rated Pow	er Output P _N	7.5 kW		
	ed n _N (105 K) **1	1500 rpm		
Rated Torq	μυe Μ _N (105 K) **1	47.8 Nm		
Rated Curr	ent I _N	20.1 A		
Efficiency	n	0.85		
Maximum (Continuous Speed n _{max cont}	7500 rpm	10000 rpm	
Maximum \$	Speed**2 n _{max}	9000 rpm	1200 rpm	
Maximum (Current I _{max} at 9,000 rpm at 12,000 rpm	36 A 36 A		
Pole Pairs	PZ	2		
Weight m		149.9 lb 68 kg		
Rotor Inert	ia J	353 kgcm ²		

^{**1 105} K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.

Fan

Connectors

Rated Voltage for Fan U _L	3 x 400 V
Rated Current for Fan I _L	0.31 A
Frequency f _L	50 Hz/60 Hz
Accessories	
Power Cable, without Connector	Up to 24.7 A, P/N 34201301
Cable for Fan, without Connector	P/N 34201310
Encoder Cable, Complete with	P/N 342000xx

^{**2} For cycle duration of 10 minutes: 3 min.(n_{max}); 6 min. 2/3 x (n_{max}); standstill of 1 min.



SM 075C-F - Power and Torque Characteristics

Refer to Table 7-53, Figure 7-57, and Figure 7-58.

Table 7-53, SM 075C-F - Power and Torque Characteristics

Duty Cycle	Speed n	Power P	Torque M	Current I (for 1500 rpm)
S1	1500 rpm	7.5 kW	47.9 Nm	20.1 A
	6000 rpm	7.5 kW	12.0 Nm	_
	12000 rpm	7.5 kW	6.0 Nm	_
S6-60%	1500 rpm	9.8 kW	62.6 Nm	24.0 A
	10700 rpm	9.8 kW	23.4 Nm	_
	12000 rpm	8.5 kW	6.8 Nm	_
S6-40%	1500 rpm	11.5 kW	73.4 Nm	27.0 A
	9000 rpm	11.5 kW	27.5 Nm	_
	12000 rpm	8.5 kW	6.8 Nm	_
S6-25%	1500 rpm	13.0 kW	83.0 Nm	31.0 A
	7500 rpm	13.0 kW	16.6 Nm	_
	12000 rpm	8.5 kW	6.8 Nm	_

SM 075C-F - Power Characteristics Graph

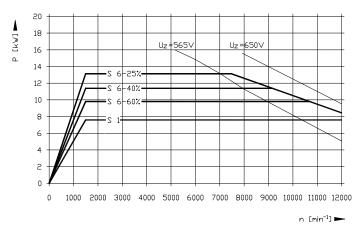


Figure 7-57, SM 075C-F - Power Characteristics Graph

SM 075C-F - Torque Characteristics Graph

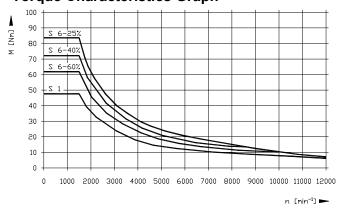


Figure 7-58, SM 075C-F - Torque Characteristics Graph



SM 100C-F - Specifications

Refer to **Table 7-54** and "<u>SM 100C–F - Power and Torque</u> Characteristics."

Table 7-54, SM 100C-F - Specifications

With Key	SM 100C	SM 100D	
Without Key	SM 100E	SM 100F	
P/N With Key	With standard bearing 34100635	With spindle bearing 34100636	
P/N Without Key	With standard bearing 34100637	With spindle bearing 34100638	
Rated Voltage U _N	330 V		
Rated Power Output P _N	10.0 kW		
Rated Speed n _N	1500 rpm		
Rated Torque M _N (105 K) **1	63.7 Nm		
Rated Current I _N (105 K)**1	25 A		
Efficiency n	0.85		
Maximum Continuous Speed n _{max cont}	7500 rpm	10000 rpm	
Maximum Speed**2 n _{max}	9000 rpm	12000 rpm	
Maximum Current I _{max}	44 A		
Pole Pairs PZ	2		
Weight m	182.9 lb 83 kg		
Rotor Inertia J	405 kgcm ²		

^{**1 105} K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.

Fan

- uii	
Rated Voltage for Fan U _L	3 x 400 V
Rated Current for Fan I _L	0.31 A
Frequency f _L	50 Hz/60 Hz
Accessories	
Power Cable, without Connector	Up to 29.8 A, P/N 34201302
Cable for Fan, without Connector	P/N 34201310

P/N 342000xx

Encoder Cable, Complete with

Connectors

^{**2} For cycle duration of 10 minutes: 3 min.(n_{max}); 6 min. 2/3 x (n_{max}); standstill of 1 min.



SM 100C-F - Power and Torque Characteristics

Refer to Table 7-55, Figure 7-59, and Figure 7-60.

Table 7-55, SM 100C-F - Power and Torque Characteristics

Duty Cycle	Speed n	Power P	Torque M	Current I (for 1500 rpm)
S1	1500 rpm	10.0 kW	63.9 Nm	25.0 A
	11000 rpm	10.0 kW	23.9 Nm	_
	12000 rpm	8.0 kW	6.4 Nm	_
S6-60%	1500 rpm	12.5 kW	79.8 Nm	29.0 A
	9800 rpm	12.5 kW	12.2 Nm	_
	12000 rpm	8.0 kW	6.4 Nm	_
S6-40%	1500 rpm	14.0 kW	89.4 Nm	32.0 A
	9000 rpm	14.0 kW	19.1 Nm	_
	12000 rpm	8.0 kW	6.4 Nm	_
S6-25%	1500 rpm	17.0 kW	108.6 Nm	37.0 A
	7500 rpm	17.0 kW	21.7 Nm	_
	12000 rpm	8.0 kW	6.4 Nm	_

SM 100C-F - Power Characteristics Graph

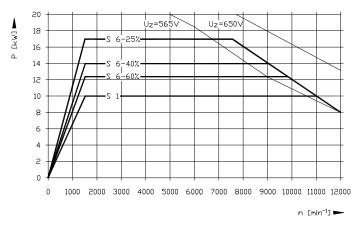


Figure 7-59, SM 100C-F - Power Characteristics Graph

SM 100C-F - Torque Characteristics Graph

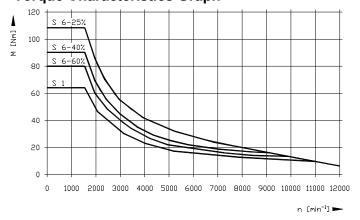


Figure 7-60, SM 100C-F - Torque Characteristics Graph



SM 120C, SM 120E, SM 150C-F, SM 200C-F, SM 240C-F Specifications Summary

Refer to Table 7-56.

Table 7-56, SM 120C, SM 120E, SM 150C-F, SM 200C-F, SM 240C-F - Specifications Summary

	SM 120C, E	SM 150C-F	SM 200C-F	SM 240C-F
Reference for details	Table 7-56	Table 7-59	Table 7-61	Table 7-63
Fan	+**1	+	+	+
Holding Brake	- **2	_	_	_
Rated Voltage U _N	335 V	348 V	331 V	318 V
Rated power output P _N	12 kW	15 kW	20 kW	24 kW
Rated speed n _N	750 rpm		1500 rpm	
Rated torque M _N (105 K)**3	152.8 Nm	95.5 Nm	127.3 Nm	152.8 Nm
Rated current I _N (105 K)**3	29.0 A	35.0 A	46.0 A	58.0
Efficiency n	0.85			
Maximum Continuous Speed n _{max cont} with standard bearing with spindle bearing	7000 rpm —	7000 rpm 8500 rpm		
Maximum Speed**4 n _{max} with standard bearing with spindle bearing	8000 rpm —	8000 rpm 10000 rpm		
Maximum Current I _{max}	62 A	70 A	96 A	116 A
Pole Pairs PZ	2			
Weight m	348.3 lb 158 kg	246.8 lb 112 kg	297.6 lb 135 kg	348.3 lb 158 kg
Rotor Inertia J	1100 kgcm ²	700 kgcm ²	920 kgcm ²	1100 kgcm ²
Protection	IP 54			

Fan

Rated Voltage for Fan U _L	3 x 400 V
Rated Current for Fan I _L	0.25 A
Frequency f _L	50 Hz/60 Hz

^{+**1 +} Available

^{-**&}lt;sup>2</sup> – Not Available

^{**3 105} K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.

^{**4} For cycle duration of 10 minutes: 3 min. (n_{max}) ; 6 min. 2/3 x (n_{max}) ; standstill of 1 min.



SM 120C, SM 120E - Specifications

Refer to **Table 7-57** and "SM 120C, SM 120E - Power and Torque Characteristics."

Table 7-57, SM 120C, E - Specifications

	With Key	SM 120C
	Without Key	SM 120E
P/N	With Key	With standard bearing 34100640
P/N	Without Key	With standard bearing 34100642
Rated Volt	age U _N	335 V
Rated Pow	er Output P _N	12 kW
Rated Spe	ed n _N	750 rpm
Rated Toro	que M _N (105 K)**1	152.8 Nm
Rated Cur	rent I _N (105 K)**1	29.0 A
Efficiency	n	0.85
Maximum	Continuous Speed n _{max cont}	7000 rpm
Maximum	Speed**2 n _{max}	8000 rpm
Maximum C	Current I _{max}	62 A
Pole Pairs	PZ	2
Weight m		348.3 lb 158 kg
Rotor Iner	tia J	1100 kgcm ²
Protection		IP 54

^{**1 105} K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.

Fan

Rated Voltage for Fan U _L	3 x 400 V
Rated Current for Fan I _L	0.25 A
Frequency f _L	50 Hz/60 Hz
Accessories	
Power Cable, without Connector	P/N 34201306
Cable for Fan, without Connector	P/N 34201310
Encoder Cable, Complete with	P/N 342000xx

Connectors

^{**2} For cycle duration of 10 minutes: 3 min. (n_{max}) ; 6 min. 2/3 x (n_{max}) ; standstill of 1 min.



SM 120C, SM 120E - Power and Torque Characteristics

Refer to Table 7-58, Figure 7-61, and Figure 7-62.

Table 7-58, SM 120C, SM 120E - Power and Torque Characteristics

Duty Cycle	Speed n	Power P	Torque M	Current I (for 750 rpm)
S1	750 rpm	12.0 kW	152.8 Nm	29.0 A
	5000 rpm	12.0 kW	22.9 Nm	_
	10000 rpm	4.0 kW	3.8 Nm	_
S6-60%	750 rpm	17.5 kW	222.8 Nm	38.1 A
	3000 rpm	17.5 kW	55.7 Nm	_
	6000 rpm	11.3 kW	18.0 Nm	_
S6-40%	750 rpm	22.0 kW	280.1 Nm	46.4 A
	2500 rpm	22.0 kW	84.0 Nm	_
	3500 rpm	19.0 kW	51.8 Nm	_

SM 120C, SM 120E - Power Characteristics Graph

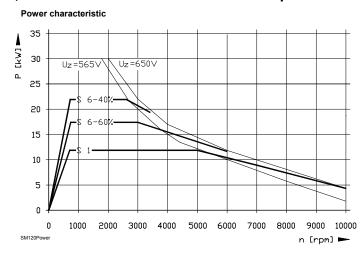


Figure 7-61, SM 120C, SM 120E - Power Characteristics Graph

SM 120C, SM 120E - Torque Characteristics Graph

Torque characteristic 300 S 6-40% 275 250 S 6-225 200 175 150 125 100 75 50 25 0 2000 3000 4000 5000 6000 7000 8000 9000 10000 n [rpm] -

Figure 7-62, SM 120C, SM 120E - Torque Characteristics Graph



SM 150C-F - Specifications

Refer to **Table 7-59** and "<u>SM 150C–F - Power and Torque Characteristics.</u>"

Table 7-59, SM 150C-F - Specifications

	With Key	SM 150C	SM 150D	
	Without Key	SM 150E	SM 150F	
P/N	With Key	With standard bearing 34100645	With spindle bearing 34100646	
P/N	Without Key	With standard bearing 34100647	With spindle bearing 34100648	
Rated Volt	age U _N	348 V		
Rated Pow	ver Output P _N	15 kW		
Rated Spe	ed n _N	1500 rpm		
Rated Tord	que M _N (105 K)**1	95.5 Nm		
Rated Cur	rent I _N (105 K)**1	35.0 A		
Efficiency	n	0.85		
Maximum	Continuous Speed n _{max cont}	7000 rpm	8500 rpm	
Maximum	Speed**2 n _{max}	8000 rpm	10000 rpm	
Maximum C	Current I _{max}	70 A		
Pole Pairs	PZ	2		
Weight m		246.9 lb 112 kg		
Rotor Iner	tia J	700 kgcm ²		
Protection		IP 54		

^{**1 105} K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.

Fan

Rated Voltage for Fan U∟	3 x 400 V
Rated Current for Fan I _L	0.25 A
Frequency f _L	50 Hz/60 Hz
Accessories	

Power Cable, without Connector	Up to 24.7 A, P/N 34201301
Cable for Fan, without Connector	P/N 34201310
Encoder Cable, Complete with Connectors	P/N 342000xx

^{**2} For cycle duration of 10 minutes: 3 min. (n_{max}) ; 6 min. 2/3 x (n_{max}) ; standstill of 1 min.



SM 150C-F - Power and Torque Characteristics

Refer to Table 7-60, Figure 7-63, and Figure 7-64.

Table 7-60, SM 150C-F - Power and Torque Characteristics

Duty Cycle	Speed n	Power P	Torque M	Current I (for 1500 rpm)
S1	1500 rpm	15.0 kW	95.5 Nm	35.0 A
	6500 rpm	15.0 kW	22.0 Nm	_
	10000 rpm	10.0 kW	9.5 Nm	_
S6-60%	1500 rpm	20.0 kW	127.3 Nm	43.3 A
	5000 rpm	20.0 kW	38.2 Nm	_
	9000 rpm	13.5 kW	14.3 Nm	_
S6-40%	1500 rpm	25.0 kW	159.2 Nm	52.3 A
	4500 rpm	25.0 kW	53.1 Nm	_
	8000 rpm	16.8 kW	20.1 Nm	_
S6-25%	1500 rpm	32.0 kW	203.7 Nm	65.0 A
	4000 rpm	32.0 kW	76.4 Nm	_
	6000 rpm	23.7 kW	37.7 Nm	_

SM 150C-F - Power Characteristics Graph

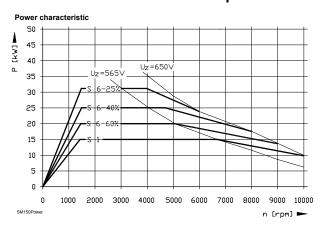


Figure 7-63, SM 150C-F - Power Characteristics Graph

SM 150C-F - Torque Characteristics Graph

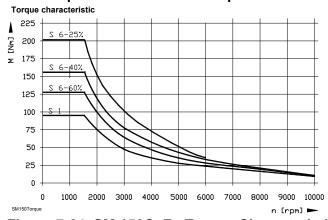


Figure 7-64, SM 150C-F - Torque Characteristics Graph



SM 200C-F - Specifications

Refer to **Table 7-61** and "<u>SM 200C–F - Power and Torque Characteristics.</u>"

Table 7-61, SM 200C-F - Specifications

	With Key	SM 200C	SM 200D	
	Without Key	SM 200E	SM 200F	
P/N	With Key	With standard bearing 34100650	With spindle bearing 34100651	
P/N	Without Key	With standard bearing 34100652	With spindle bearing 34100653	
Rated Vol	tage U _N	331 V		
Rated Pov	ver Output P _N	20 kW		
Rated Spe	eed n _N	1500 rpm		
Rated Tor	que M _N (105 K)**1	127.3 Nm		
Rated Cur	rent I _N (105 K)**1	46.0 A		
Efficiency	n	0.85		
Maximum	Continuous Speed n _{max cont}	7000 rpm	8500 rpm	
Maximum	Speed n _{max}	8000 rpm 10000 rpm		
Maximum (Current I _{max}	96 A		
Pole Pairs	s PZ	2		
Weight m	r	297.6 lb 135 kg		
Rotor Iner	tia J	920 kgcm ²		
Protection	1	IP 54		

^{**1 105} K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.

Fan

Rated Voltage for Fan U _L	3 x 400 V
Rated Current for Fan I _L	0.25 A
Frequency f _L	50 Hz/60 Hz
Accessories	

Power Cable, without Connector	Up to 24.7 A, P/N 34201301	
Cable for Fan, without Connector	P/N 34201310	
Encoder Cable, Complete with Connectors	P/N 342000xx	

^{**2} For cycle duration of 10 minutes: 3 min. (n_{max}) ; 6 min. 2/3 x (n_{max}) ; standstill of 1 min.



SM 200C-F - Power and Torque Characteristics

Refer to Table 7-62, Figure 7-65, and Figure 7-66.

Table 7-62, SM 200C-F - Power and Torque Characteristics

Duty Cycle	Speed n	Power P	Torque M	Current I (for 1500 rpm)
S1	1500 rpm	20.0 kW	127.3 Nm	46.0 A
	6500 rpm	20.0 kW	29.4 Nm	_
	10000 rpm	13.0 kW	12.4 Nm	_
S6-60%	1500 rpm	25.0 kW	159.2 Nm	56.0 A
	6000 rpm	25.0 kW	39.4 Nm	_
	10000 rpm	16.0 kW	15.3 Nm	_
S6-40%	1500 rpm	30.0 kW	191.0 Nm	65.0 A
	5500 rpm	30.0 kW	52.1 Nm	_
	10000 rpm	17.5 kW	16.7 Nm	_
S6-25%	1500 rpm	37.0 kW	235.5 Nm	79.0 A
	5000 rpm	37.0 kW	70.7 Nm	_
	8000 rpm	24.0 kW	28.6 Nm	_

SM 200C-F - Power Characteristics Graph

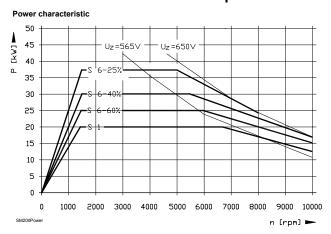


Figure 7-65, SM 200C-F - Power Characteristics Graph

SM 200C-F - Torque Characteristics Graph

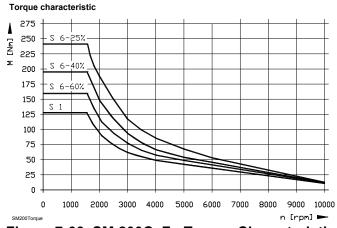


Figure 7-66, SM 200C-F - Torque Characteristics Graph



SM 240C-F - Specifications

Refer to **Table 7-63** and "<u>SM 240C–F - Power and Torque Characteristics.</u>"

Table 7-63, SM 240C-F - Specifications

	With Key	SM 240C	SM 240D	
	Without Key	SM 240E	SM 240F	
P/N	With Key	With standard bearing 34100655	With spindle bearing 34100656	
P/N	Without Key	With standard bearing 34100657	With spindle bearing 34100658	
Rated Volt	age U _N	318 V		
Rated Pow	rer Output P _N	24 kW		
Rated Spe	ed n _N	1500 rpm		
Rated Toro	que M _N (105 K) **1	152.8 Nm		
Rated Current I _N (105 K) **1		58.0 A		
Efficiency	n	0.85		
Maximum	Continuous Speed n _{max cont}	7000 rpm	8500 rpm	
Maximum	Speed**2 n _{max}	8000 rpm	10000 rpm	
Maximum Current I _{max}		116 A		
Pole Pairs PZ		2		
Weight m		348.3 lb 158 kg		
Rotor Inert	tia J	1100 kgcm ²		
Protection		IP 54		

^{**1 105} K is the temperature difference in Kelvin's between the ambient temperature and the motor temperature.

Fan

Rated Voltage for Fan U _L	3 x 400 V
Rated Current for Fan I _L	0.25 A
Frequency f _L	50 Hz/60 Hz
Accessories	

Power Cable, without Connector	Up to 24.7 A, P/N 34201301
Cable for Fan, without Connector	P/N 34201310
Encoder Cable, Complete with Connectors	P/N 342000xx

^{**2} For cycle duration of 10 minutes: 3 min.(n_{max}); 6 min. 2/3 x (n_{max}); standstill of 1 min.



SM 240C–F - Power and Torque Characteristics

Refer to Table 7-64, Figure 7-67, and Figure 7-68.

Table 7-64, SM 240C-F - Power and Torque Characteristics

Duty Cycle	Speed n	Power P	Torque M	Current I (for 1500 rpm)
S1	1500 rpm	24.0 kW	152.8 Nm	58.0 A
	7400 rpm	24.0 kW	31.0 Nm	_
	10000 rpm	18.0 kW	17.2 Nm	_
S6-60%	1500 rpm	30.0 kW	191.0 Nm	67.2 A
	7000 rpm	30.0 kW	40.9 Nm	_
	10000 rpm	22.5 kW	21.5 Nm	_
S6-40%	1500 rpm	38.0 kW	241.9 Nm	81.8 A
	5500 rpm	38.0 kW	66.0 Nm	_
	10000 rpm	26.0 kW	24.8 Nm	_
S6-25%	1500 rpm	48.0 kW	305.6 Nm	100.6 A
	4500 rpm	48.0 kW	101.9 Nm	_
	7000 rpm	41.0 kW	55.9 Nm	_

SM 240C-F - Power Characteristics Graph

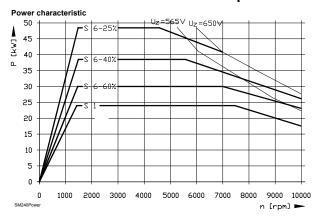


Figure 7-67, SM 240C-F - Power Characteristics Graph

SM 240C-F - Torque Characteristics Graph

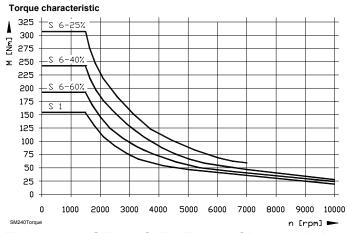


Figure 7-68, SM 240C-F - Torque Characteristics Graph



Spindle Motors Dimension Drawings

The dimensional drawings for the following Spindle Motors and Connectors are illustrated:

- SM 055A, SM 075A, SM 100A Dimensional Drawing
- SM 055A, SM 075A, SM 100A, SM 055C-F, SM 100C-F,
 SM 120C, SM 120E, SM 150C-F, SM 200C-F, SM 240C-F Connector for Speed (Rotary) Encoder
- SM 120A Dimensional Drawing
- □ SM 120A Connector for Power Connection
- □ SM 055C–F, SM 075C–F, SM 100C–F Dimensional Drawing
- SM 120C, SM 120E, SM 240C–F Dimensional Drawing
- SM 150C–F Dimensional Drawing
- SM 200C–F Dimensional Drawing



SM 055A, SM 075A, SM 100A - Dimensional Drawing

Refer to Figure 7-69, Table 7-65, Figure 7-12, SM 055A, SM 075A, SM 100A - Rotatable Flange Socket, and Figure 7-70, SM 055A, SM 075A, SM 100A, SM 120A, SM 055C-F, SM 075C-F, SM 100C-F, SM 120C, SM 120E, SM 150C-F, SM 200C-F, SM 240 C-F - Connector for Speed (Rotary) Encoder.

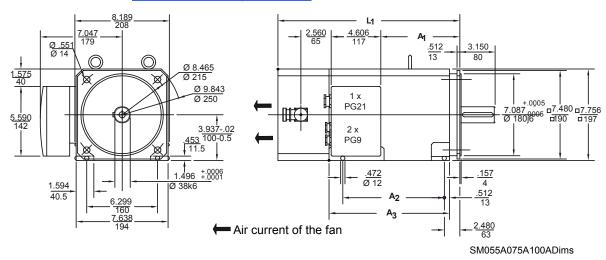


Figure 7-69, SM 055A, SM 075A, SM 100A - Dimensional Drawing


Table 7-65, SM 055A, SM 075A, SM 100A - Motor Dimensions

Motor	L ₁	A ₁	A ₂	A ₃
SM 055A	20.866 in	8.465 in	9.055 in	11.457 in
	530 mm	215 mm	230 mm	291 mm
SM 075A	23.425 in	11.024 in	11.624 in	14.016 in
	595 mm	280 mm	295 mm	356 mm
SM 100A	25.984 in	13.189 in	13.780 in	16.181 in
	660 mm	335 mm	350 mm	411 mm



SM 055A, SM 075A, SM 100A, SM 120A, SM 055C-F, SM 075C-F, SM 100C-F, SM 120C, SM 120E, SM 150C-F, SM 200C-F, SM 240C-F - Connector for Speed (Rotary) Encoder

Refer to **Figure 7-70**. Refer to <u>Table 7-6</u>, <u>Maximum Bend Radii of Cables</u>.

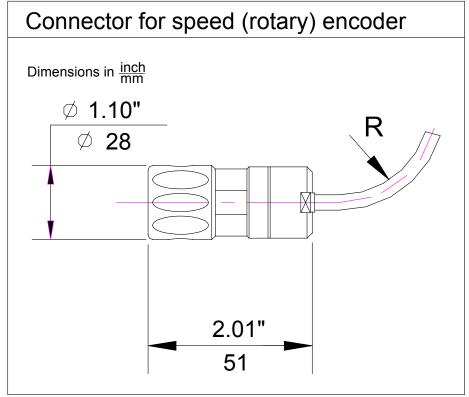

EncoderConnector

Figure 7-70, SM 055A, SM 075A, SM 100A, SM 120A, SM 055C-F, SM 075C-F, SM 100C-F, SM 120C, SM 120E, SM 150C-F, SM 200C-F, SM 240 C-F - Connector for Speed (Rotary) Encoder



SM 120A - Dimensional Drawing

Refer to Figure 7-71 and Figure 7-72.

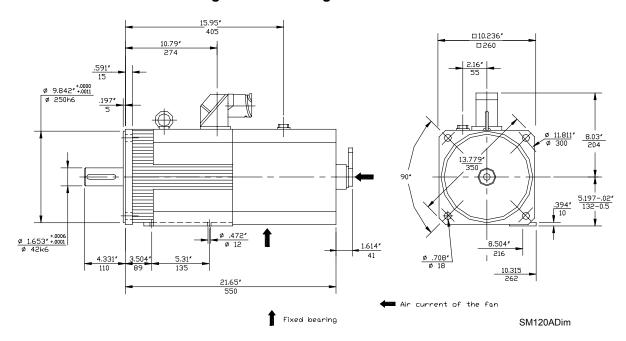


Figure 7-71, SM 120A - Dimensional Drawing

SM 120A - Connector for Power Connection

Refer to **Figure 7-72**. Refer to <u>Table 7-6</u>, <u>Maximum Bend Radii of</u> Cables.

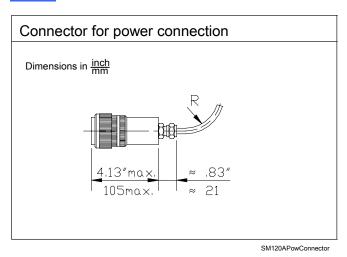


Figure 7-72, SM 120A - Connector for Power Connection



SM 055C-F, SM 075C-F, SM 100C-F - Dimensional Drawing

Refer to Figure 7-73, Table 7-65, SM 055C–F, SM 075C–F, SM 100C–F
- Motor Dimensions, Figure 7-13, SM 055C–F, SM 075C–F,
SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F, SM 240C–F
- Rotatable Flange Socket, and Figure 7-70, SM 055A, SM 075A,
SM 100A, SM 120A, SM 055C–F, SM 075C–F, SM 100C–F,
SM 120C–F, SM 150C–F, SM 200C–F, SM 240 C–F - Connector for
Speed (Rotary) Encoder.

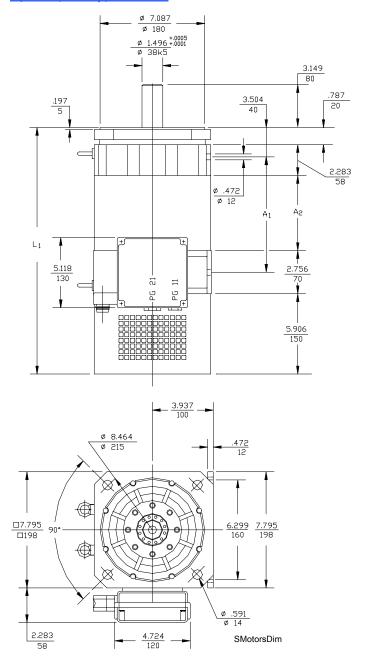


Figure 7-73, SM 055C-F, SM 075C-F, SM 100C-F - Dimensional Drawing



Table 7-65, SM 055C-F, SM 075C-F, SM 100C-F - Motor Dimensions

Motor	Length L ₁	Distance A ₁	Distance A ₂
SM 055C, SM 055E (with standard bearing)	17.24 438 mm	8.38 213 mm	<u>5.51</u> 140 mm
SM 055D, SM 055F (with spindle bearing)	<u>17.95</u> 456 mm	8.38 213 mm	<u>5.51</u> 140 mm
SM 075C, SM 075E (with standard bearing)	<u>20.19</u> 513 mm	11.34 288 mm	8.46 215 mm
SM 075D, SM 075F (with spindle bearing)	<u>20.90</u> 531mm	11.34 288 mm	8.46 215 mm
SM 100C, SM 100E (with standard bearing)	22.95 583 mm	14.09 358 mm	11.22 285 mm
SM 100D, SM 100F (with spindle bearing)	23.66 601 mm	14.09 358 mm	11.22 285 mm

Dimensions = inch / mm



SM 120C, SM 120E, SM 240C-F - Dimensional Drawing

Refer to Figure 7-74, Figure 7-13, SM 055C–F, SM 075C–F, SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F, SM 240C–F - Rotatable Flange Socket, and Figure 7-70, SM 055A, SM 075A, SM 100A, SM 120A, SM 055C–F, SM 075C–F, SM 100C–F, SM 120C, SM 120E, SM 150C–F, SM 200C–F, SM 240 C–F - Connector for Speed (Rotary) Encoder.


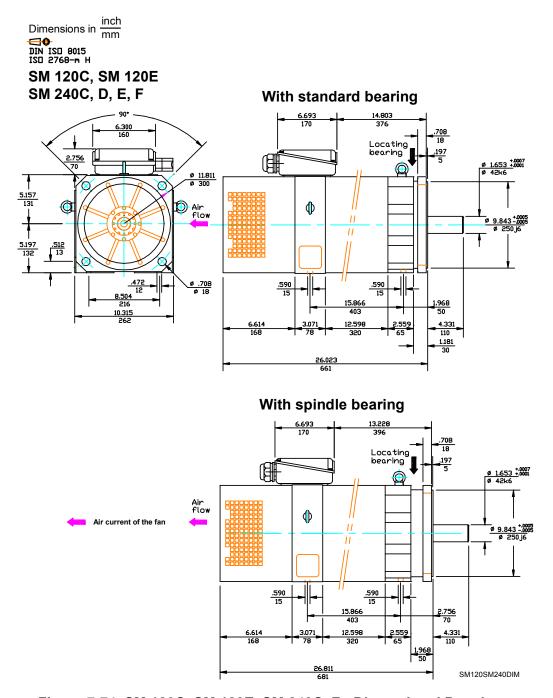



Figure 7-74, SM 120C, SM 120E, SM 240C-F - Dimensional Drawing



SM 150C-F - Dimensional Drawing

Refer to **Figure 7-75**, <u>Figure 7-12</u>, <u>SM 055C–F</u>, <u>SM 075C–F</u>, <u>SM 100C–F</u>, <u>SM 120C</u>, <u>SM 120E</u>, <u>SM 150C–F</u>, <u>SM 200C–F</u>, <u>SM 240C–F</u> - <u>Rotatable Flange Socket</u>, <u>and Figure 7-70</u>, <u>SM 055A</u>, <u>SM 075A</u>, <u>SM 100A</u>, <u>SM 120A</u>, <u>SM 055C–F</u>, <u>SM 075C–F</u>, <u>SM 100C–F</u>, <u>SM 120C</u>, <u>SM 120E</u>, <u>SM 150C–F</u>, <u>SM 200C–F</u>, <u>SM 240 C–F - Connector for Speed</u> (Rotary) Encoder.

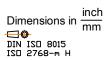

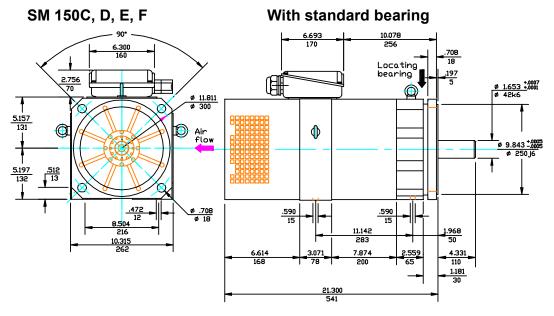

With spindle bearing


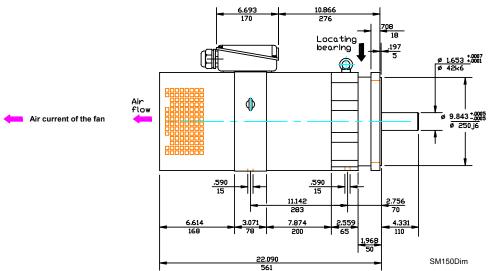


Figure 7-75, SM 150C-F - Dimensional Drawing

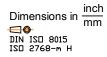

SM 200C-F - Dimensional Drawing

Refer to **Figure 7-76**, <u>Figure 7-13</u>, <u>SM 055C–F</u>, <u>SM 075C–F</u>, <u>SM 100C–F</u>, <u>SM 120C</u>, <u>SM 120E</u>, <u>SM 150C–F</u>, <u>SM 200C–F</u>, <u>SM 240C–F</u> - <u>Rotatable Flange Socket</u>, <u>and Figure 7-70</u>, <u>SM 055A</u>, <u>SM 075A</u>, <u>SM 100A</u>, <u>SM 120A</u>, <u>SM 055C–F</u>, <u>SM 075C–F</u>, <u>SM 100C–F</u>, <u>SM 120C</u>, <u>SM 120E</u>, <u>SM 150C–F</u>, <u>SM 200C–F</u>, <u>SM 240 C–F - Connector for Speed</u> (Rotary) Encoder.



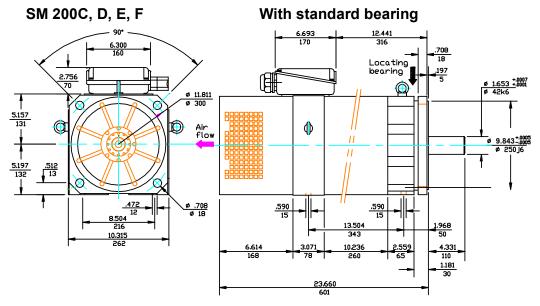


Figure 7-76, SM 200C-F - Dimensional Drawing



Permissible Forces on the Motor Shaft

The following topics are described:

- General
- □ AM 960A, AM 960AB Axis Motors Permissible Forces
- Combined Load on AM 1160 Series and AM 1550 Series
- □ AM 820, AM 1150, AM 1400 Series Permissible Forces
- SM 055A, SM 075A, and SM 100A Spindle Motors Permissible Forces
- □ SM 120A Permissible Forces
- □ SM 055C–F, SM 075C–F, SM 100C–F Permissible Forces
- □ <u>AM 120C, SM 120E, SM 150C–F, SM 200C–F, SM 240C–F Permissible Forces</u>



General

All diagram values given for permissible axial and radial forces on the motor shafts apply to the nominal bearing life, depending on the specific motor.

In the diagram, the nominal bearing life values are specified for the maximum permissible forces.

Axial Forces

Refer to Figure 7-77 for the point of axial force on the motor shaft.

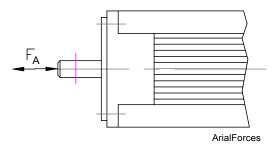


Figure 7-77, AM Series, SM Series - Point of Axial Force on the Motor

Radial Forces

Refer to Figure 7-78 for the point of radial force on the motor shaft.

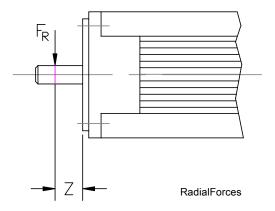


Figure 7-78, AM Series, SM Series - Point of Radial Force on the Motor Shaft

The maximum permissible radial force may also depend on the motor speed and the point of the radial force on the motor shaft. The point of the force is defined by the distance **Z** and is shown as an axis in the load diagrams.



AM 960A, AM 960AB Axis Motors - Permissible Forces

AM 960A, AM 960AB Axis Motors - Axial Force F_A on a Bearing

Refer to **Figure 7-79** for the maximum permissible axial force for a bearing with a rated service life of 30,000 hours.

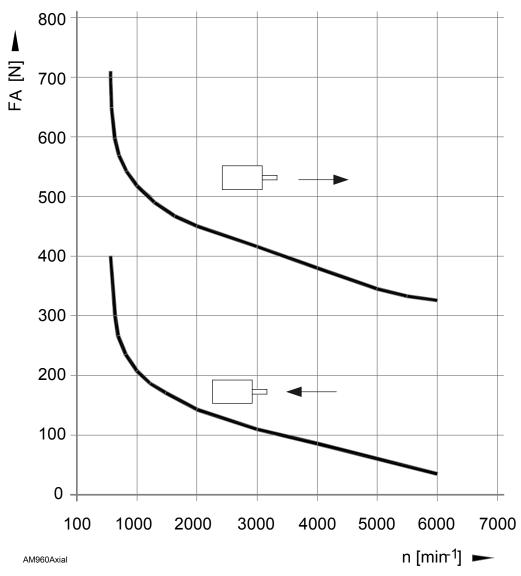


Figure 7-79, AM 960A, AM 960AB - Maximum Permissible Axial Force (FA)



AM 960A, AM 960AB Axis Motors - Radial Force F_R on a Bearing

Refer to **Figure 7-80** for the maximum permissible radial force F_{Rmax} for a bearing with a rated service life of 30,000 hours, depending on the point of radial force and the average speed.

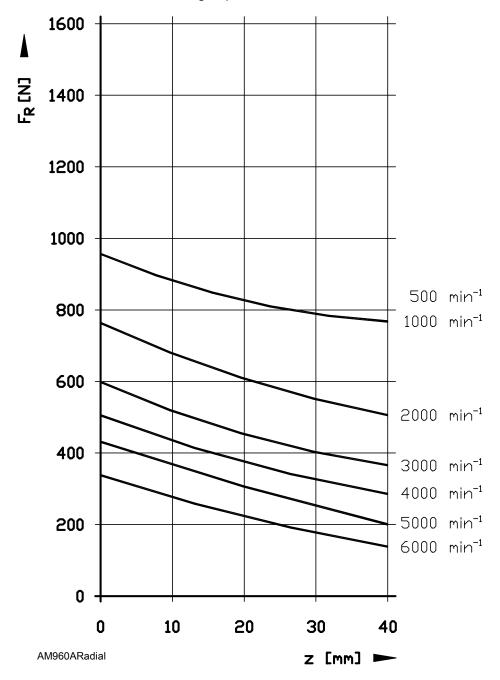


Figure 7-80, AM 960A, AM 960AB - Maximum Permissible Radial Force (F_{Rmax})



Combined Load on AM 1160 Series and AM 1550 Series

Determine the combined load that results from axial and radial forces on the AM 1160 and AM 1550 Series motor shafts as follows:

- Use the first diagram to determine the maximum permissible radial force F_R over the distance z and average speed (for example, refer to <u>Figure 7-81, AM 1160 Series - Permissible Radial Force on the Motor Shaft (F_R)).</u>
- Use the first diagram to determine the equivalent axial force F_{A2} over the applied axial force F_A (for example, refer to <u>Figure 7-82</u>, <u>AM 1160</u> <u>Series - Permissible Axial Force on the Motor Shaft (F_{A2})</u>). The applied axial force F_A must not exceed 1000 N.
- Calculate the combined load F_{com} from the permissible radial force F_R and the equivalent axial force F_{A2}:

$$F_{com} = (0.56 \times F_R) + F_{A2}$$

The following requirements must be met in order to achieve a bearing service life of 30,000 hours:

- The applied axial force F_A must not exceed 1000 N.
- The applied radial force F_R must not exceed the permissible radial force from the illustration for radial forces.
- The combined load F_{com} must not exceed the permissible radial force F_R for the first diagram (for example, refer to <u>Figure 7-81, AM 1160</u> <u>Series - Permissible Radial Force on the Motor Shaft (F_R)</u>).

For the AM 1160 Series, to calculate the combined load F_{com} refer to:

- □ Figure 7-81, AM 1160 Series Permissible Radial Force on the Motor Shaft (F_R)
- □ Figure 7-82, AM 1160 Series Permissible Axial Force on the Motor Shaft (F_{A2})

For the AM 1550 Series, to calculate the combined load F_{com} refer to:

- □ Figure 7-83, AM 1550 Series Permissible Radial Force on the Motor Shaft (F_R)
- □ Figure 7-84, AM 1550 Series Permissible Axial Force on the Motor Shaft (F_{A2})



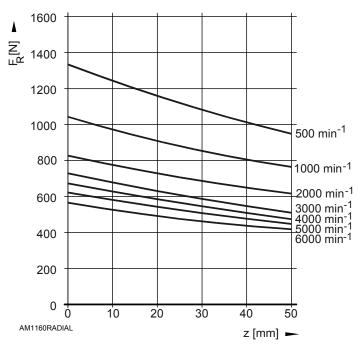


Figure 7-81, AM 1160 Series - Permissible Radial Force on the Motor Shaft (F_R)

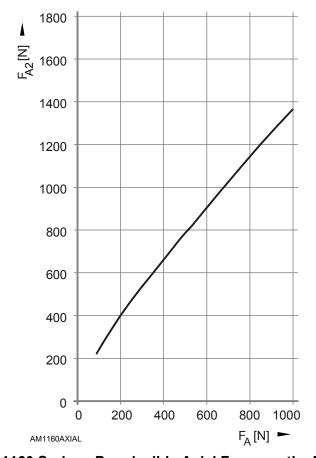


Figure 7-82, AM 1160 Series - Permissible Axial Force on the Motor Shaft (F_{A2})



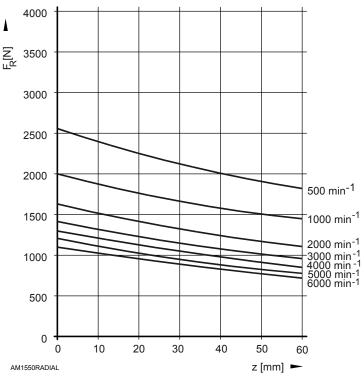


Figure 7-83, AM 1550 Series - Permissible Radial Force on the Motor Shaft (F_R)

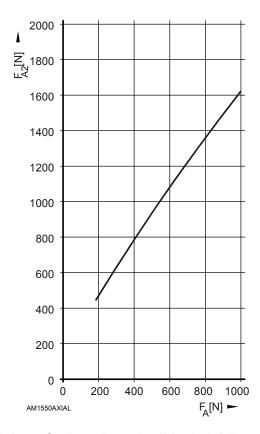


Figure 7-84, AM 1550 Series - Permissible Axial Force on the Motor Shaft (F_{A2})



AM 820, AM 1150, AM 1400 Series - Permissible Forces

The values given for permissible axial and radial forces are valid for a bearing life of 30,000 hours.

Axial Force F_A

To calculate the Axial Force F_A , use formula:

 $F_{Amax} = x \cdot F_{Rmax}$

Refer to **Table 7-66** for the appropriate factor x.

Table 7-66, Axial Force Factors for AM 820, AM 1150, AM 1400 Series

Axis Motor	Factor x
AM 820A, AM 820AB	0.45
AM 1150A, AM 1150AB	0.55
AM 1400A, AM 1400AB, AM 1400C, AM 1400CB	0.34



Radial Force F_R

The following graphs show the maximum permissible radial forces F_{Rmax} depending on the point of the radial force and the average speed.

For AM 820 Series, refer to Figure 7-85.

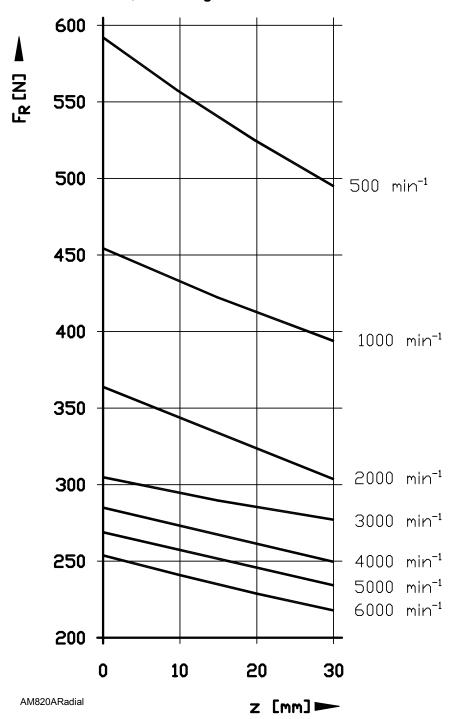


Figure 7-85, AM 820 Series - Permissible Radial Force on the Motor Shaft (F_R)



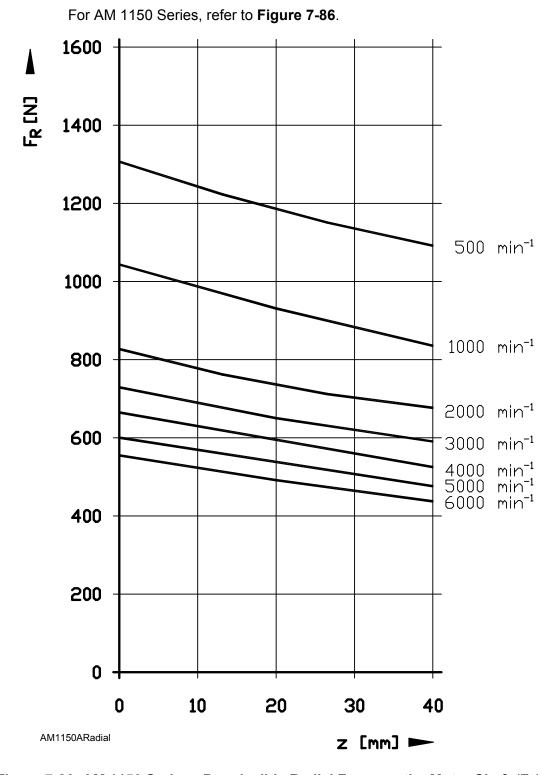


Figure 7-86, AM 1150 Series - Permissible Radial Force on the Motor Shaft (F_R)



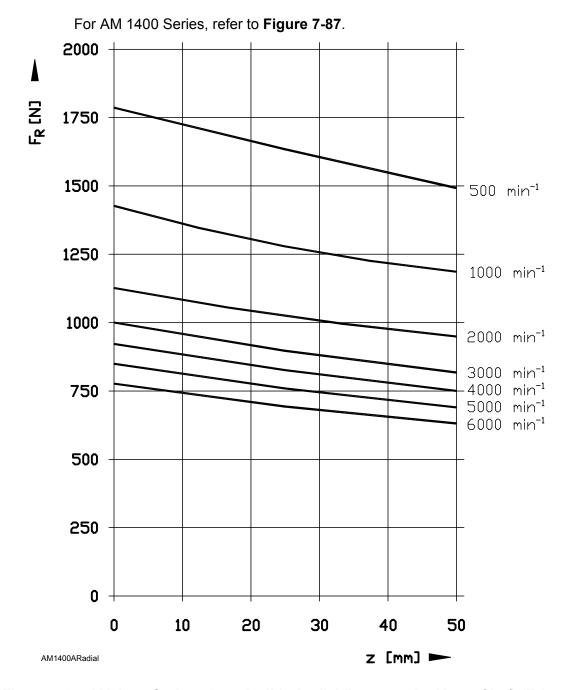


Figure 7-87, AM 1400 Series - Permissible Radial Force on the Motor Shaft (F_R)



SM 055A, SM 075A, and SM 100A Spindle Motors - Permissible Forces

Axial Force F_A

Refer to **Figure 7-88**. This figure shows the maximum permissible axial force, FA, with horizontal mounting and a bearing service life of 20,000 hours. Specifications for axial load with vertical mounting are available from ANILAM upon request.

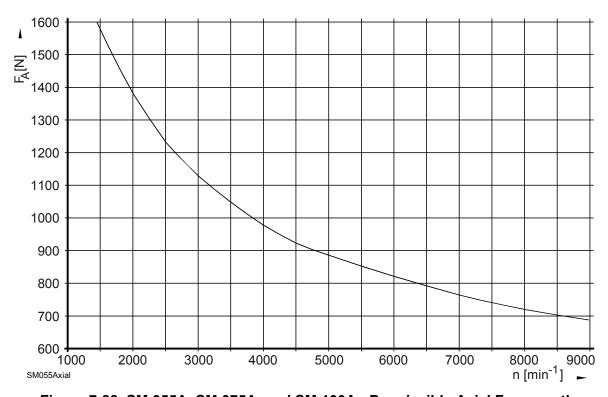


Figure 7-88, SM 055A, SM 075A, and SM 100A - Permissible Axial Force on the Motor Shaft



Radial Force F_R

Refer to **Figure 7-89**. The following diagram shows the maximum permissable radial force F_R at z =30 mm for a bearing service life of 20,000 hours.

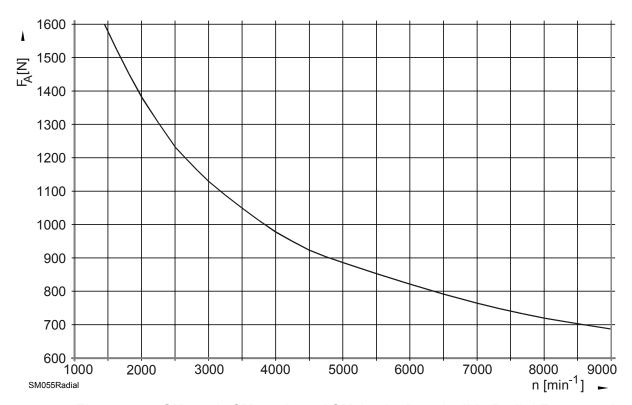


Figure 7-89, SM 055A, SM 075A, and SM 100A - Permissible Radial Force on the Motor Shaft



SM 120A - Permissible Forces

The values given for permissible axial and radial force are valid for a bearing life of 20,000 hours.

Axial Force FA

SM 120A, maximum permissible axial force: $F_A = 50 \text{ N}$

Radial Force F_R

Refer to **Figure 7-90**. The following diagram shows the maximum permissable radial force F_{Rmax} depending on the point of radial force and average speed.

1 = load limit for drive shaft with feather key

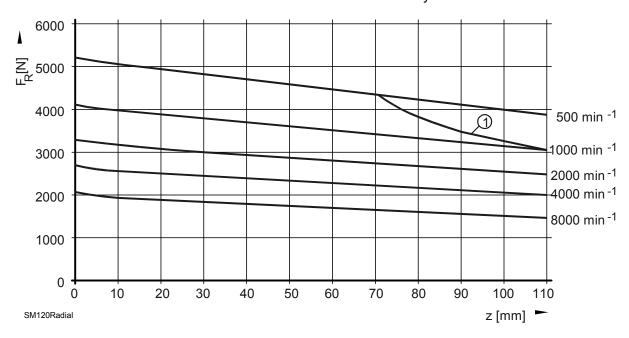


Figure 7-90, SM 120A - Permissible Radial Force on the Motor Shaft



SM 055C-F, SM 075C-F, SM 100C-F - Permissible Forces

The following graphs show the maximum permissible axial forces F_A and the radial force F_R for a bearing life of 10,000 hours. This also applies to the grease service life.

Axial Force FA

For SM 055C, SM 055E, SM 075C, SM 075E, SM 100C, SM 100E – with standard bearing, refer to **Figure 7-91**.

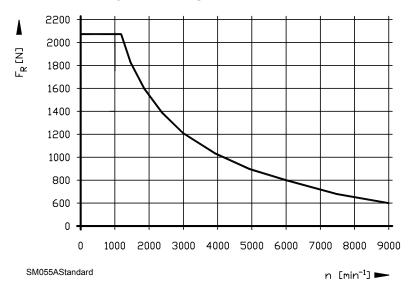


Figure 7-91, SM 055C, SM 055E, SM 075C, SM 075E, SM 100C, SM 100E - with Standard Bearing -Permissible Axial Force on the Motor Shaft

For SM 055D, SM 055F, SM 075D, SM 075F, SM 100D, SM 100F – with spindle bearing, refer to **Figure 7-92**.

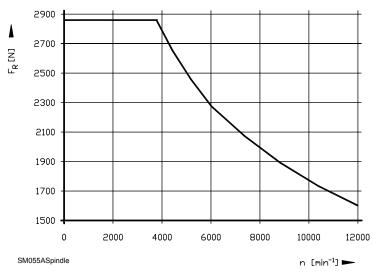


Figure 7-92, SM 055D, SM 055F, SM 075D, SM 075F, SM 100D, SM 100F - with Spindle Bearing - Permissible Axial Force on the Motor Shaft



Radial Force FR

The maximum permissible radial forces F_{Rmax} shown in the following figures are valid for a bearing service life of 10,00 hours, depending on the point of the radial force and the average speed.

For SM 055C, SM 055E, SM 075C, SM 075E, SM 100C, SM 100E – with standard bearing, refer to **Figure 7-93**.

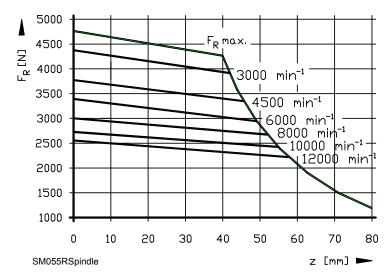


Figure 7-93, SM 055C, SM 055E, SM 075C, SM 075E, SM 100C, SM 100E - with Standard Bearing - Permissible Radial Force on the Motor Shaft

For SM 055D, SM 055F, SM 075D, SM 075F, SM 100D, SM 100F – with spindle bearing, refer to **Figure 7-94**.

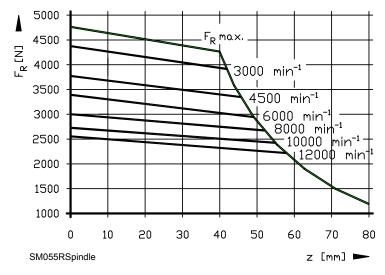


Figure 7-94, SM 055D, SM 055F, SM 075D, SM 075F, SM 100D, SM 100F - with Spindle Bearing - Permissible Radial Force on the Motor Shaft



SM 120C, SM 120E, SM 150C–F, SM 200C–F, SM 240C–F - Permissible Forces The following graphs show the maximum permissible axial forces F_A and the radial force F_R for a bearing life of 10,000 hours. This also applies to the grease service life.

Axial Force FA

For SM 120C, SM 120E, SM 150C, SM 150E, SM 200C, SM 200E, SM 240C, SM 240E – with standard bearing, refer to **Figure 7-95**.

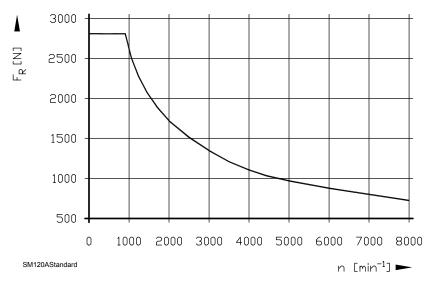


Figure 7-95, SM 120C, SM 120E, SM 150C, SM 150E, SM 200C, SM 200E, SM 240C, SM 240E - with Standard Bearing -Permissible Axial Force on the Motor Shaft

For SM 150D, SM 150F, SM 200D, SM 200F, SM 240D, SM 240F – with spindle bearing, refer to **Figure 7-96**.

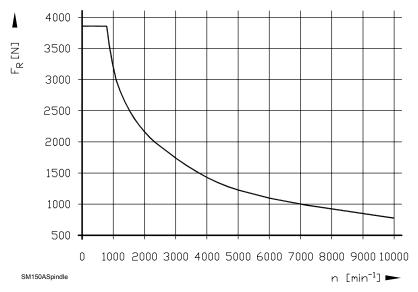


Figure 7-96, SM 150D, SM 150F, SM 200D, SM 200F, SM 240D, SM 240F - with Spindle Bearing - Permissible Axial Force on the Motor Shaft



Radial Force F_R

The maximum permissible radial forces F_{Rmax} shown in the following figures are valid for a bearing service life of 10,00 hours, depending on the point of the radial force and the average speed.

For SM 120C, SM 120E, SM 150C, SM 150E, SM 200C, SM 200E, SM 240C, SM 240E – with standard bearing, refer to **Figure 7-97**.

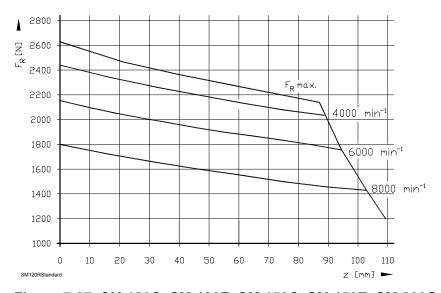


Figure 7-97, SM 120C, SM 120E, SM 150C, SM 150E, SM 200C, SM 200E, SM 240C, SM 240E - with Standard Bearing - Permissible Radial Force on the Motor Shaft

For SM 150D, SM 150F, SM 200D, SM 200F, SM 240D, SM 240F – with spindle bearing, refer to **Figure 7-98**.

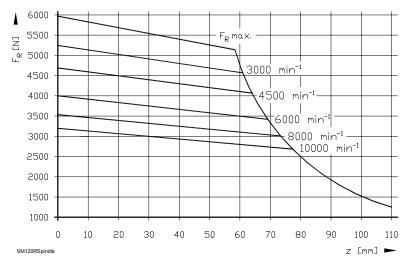


Figure 7-98, SM 150D, SM 150F, SM 200D, SM 200F, SM 240D, SM 240F - with Spindle Bearing - Permissible Radial Force on the Motor Shaft



20-line, ribbon cable	axis motor, specifications, 7-4
cable length, to select, 2-20	axis motors, power connections, 7-20
PWM signals, specifications, 2-10	dimensional drawing, illustration, 7-75
RA 201A, RA 301C, RA 411C, X110–	power cable P/N, 7-6
X114, PWM connection to CNC, pinout,	radial force, on motor shaft, graph, 7-124
5-40	specifications, 7-43
40-line, ribbon cable	speed-torque graph, illustration, 7-44
BR 9, unit bus, pinout, 5-49	AM 1160 series
PM 107, unit bus, pinout, 5-42	axial force on motor shaft, permissible,
unit bus, cable length, to select, 2-22	graph, 7-120
unit bus, specifications, 2-10	axis motor, power connections, 7-19
X79, unit bus, pinout, 5-41	combined load, 7-119
50-line, ribbon cable	connector illustrations, referenced, 7-76
cable lengths, 2-20	connector, illustrations, 7-74
power supply to CNC, 2-10	dimensional drawing, illustration, 7-76
<u>6000i CNC Technical Manual</u> , P/N	flange sockets, rotatable, illustration, 7-33
627787-21, referenced, 1-1, 4-25	motor dimensions, table, 7-76
6000M-3X CNC, 1-1	power cable P/N, 7-6
6000M-4X CNC, 1-1	radial force on motor shaft, permissible,
A	graph, 7-120
^	AM 1160A series
acceleration moment, calculate, 3-1	axis motor, specifications, 7-4
adapter module	specifications, 7-45
connecting	speed-torque graph, illustration, 7-46
5 V power supply X74, 6-53	AM 1160C series
description, 6-52	axis motor, specifications, 7-4
diagnosability, 6-53	specifications, 7-47
important notes, 6-52	speed-torque graph, illustration, 7-48
supply bus X69a/b, 6-53	AM 1160E series
connections, illustration, 6-27	axis motor, specifications, 7-4
dimensions, illustration, 6-79	specifications, 7-49
specifications, 2-31	speed-torque graph, illustration, 7-50
X69, ribbon cable to the CNC, pinout,	AM 1300A–E series
6-56	axis motor, specifications, 7-4
X69a, from the first power supply unit	specifications, 7-51
(diagnosable), pinout, 6-54	speed-torque graph, illustration, 7-52
X69b, from the second power supply unit	AM 1300C–E series
(no diagnosis), pinout, 6-55	axis motor, specifications, 7-4
X75, service connector, do not assign,	specifications, 7-53
6-56	speed-torque graph, illustration, 7-54
Adapter Module, referenced, 4-26	AM 1300-E series
additional modules, arranging, 4-26	dimensional drawing, illustration, 7-77
additional, power supply, description,	flange sockets, rotatable, illustration, 7-34
5-22, 6-30	motor dimensions, table, 7-77
AEM 100A, axis-enabling module,	AM 1400 series
description, 2-24	axial force, to calculate, 7-122
air humidity, 4-14	axis motors, power connections, 7-20
AM 1150 series	connector illustrations, referenced, 7-77,
axial force, to calculate, 7-122	7-78



connector, illustrations, 7-74	AM 1550G–E series
dimensional drawing, illustration, 7-78	axis motor, specifications, 7-5
power cable P/N, 7-6	specifications, 7-71
radial force, on motor shaft, graph, 7-125	speed-torque graph, illustration, 7-72
AM 1400A series	AM 820 series
axis motor, specifications, 7-4	axial force, to calculate, 7-122
specifications, 7-55	axis motor, specifications, 7-4
speed-torque graph, illustration, 7-56,	axis motors, power connections, 7-20
7-58	dimensional drawing, illustration, 7-73
AM 1400C series	power cable P/N, 7-6
axis motor, specifications, 7-4	radial force, on motor shaft, graph, 7-123
specifications, 7-57	specifications, 7-39
AM 1550 series	speed-torque graph, illustration, 7-40
axial force, on motor shaft, graph, 7-121	AM 960 series
axis motor, power connections, 7-19	axis motor, power connections, 7-19
combined load, 7-119	axis motor, specifications, 7-4
connector, illustrations, 7-79	connector, illustrations, 7-74
dimensional drawing, illustration, 7-79	dimensional drawing, illustration, 7-74
flange sockets, rotatable, illustration, 7-34	flange sockets, rotatable, illustration, 7-33
motor dimensions, table, 7-79	motor dimensions, table, 7-74
power cable P/N, 7-6	power cable P/N, 7-6
radial force, on motor shaft, graph, 7-121	AM 960A
AM 1550A–E series	axial force, graph, 7-117
axis motor, specifications, 7-5	radial force, on bearing, graph, 7-118
specifications, 7-65	AM 960A series
speed-torque graph, illustration, 7-66	specifications, 7-41
AM 1550C series	speed-torque graph, illustration, 7-42
axis motor, specifications, 7-5	AM 960AB
specifications, 7-59	axial force graph, 7-117
speed-torque graph, illustration, 7-60	radial force, on bearing, graph, 7-118
AM 1550C-E series	AM series
axis motor, specifications, 7-5	motors, mounting screws, 7-29
specifications, 7-67	point of axial force, illustration, 7-116
speed-torque graph, illustration, 7-68	point of radial force, illustration, 7-116
AM 1550D-E series	ambient temperature, 7-28
axis motor, specifications, 7-5	amplifier. See modular amplifier
specifications, 7-69	asynchronous, spindle motors
speed-torque graph, illustration, 7-70	features, 7-81
AM 1550E series	specifications, 7-2
axis motor, specifications, 7-5	autotransformer power output, table,
connector, illustrations, 7-80	4-6
dimensional drawing, illustration, 7-80	available motors, illustration, 7-2
flange sockets, rotatable, illustration, 7-35	axial force
motor dimensions, table, 7-80	AM 820, AM 1150, AM 1400, to calculate,
specifications, 7-61	7-122
speed-torque graph, illustration, 7-62	AM 960A, AM 960AB, graph, 7-117
AM 1550G series	on motor shaft
axis motor, specifications, 7-5	example, illustration, 7-116
specifications, 7-63	SM 055A, SM 075A, and SM 100A,
speed-torque graph, illustration, 7-64	graph, 7-126
	SM 120A, 7-128



spindle bearing, graph	BR 10F & BR 18F
SM 055D, SM 055F, SM 075D,	PS 130
SM 075F, SM 100D, SM 100F,	description, 6-37
7-129	external braking resistor, fan, 6-39
SM 150D, SM 150F, SM 200D,	X2, fan, 6-39
SM 200F, SM 240D, SM 240F,	X89, terminal connection, 6-38
7-131	BR 18
standard bearing, graph	braking performance, mean value,
SM 055C, SM 055E, SM 075C,	example, 3-10
SM 075E, SM 100C, SM 100E,	connections, illustration, 5-18, 6-25
7-129	dimensions, illustration, 5-55
SM 120C, SM 120E, SM 150C-F,	dimensions, referenced, 6-65
SM 200C-F, SM 240C-F, 7-131	incorrect installation, illustration, 4-18
axis motors	installation, illustration, 4-18
AM series, features, 7-36	minimum clearances, illustration, 4-19
characteristics, listed, 7-4	power requirements, 2-25
dimensional drawings, listed, 7-73	PS 130
features. See motors	description, 6-37
flange sockets, rotatable, 7-33	temperature switch, 6-38
formulas, for selection, 3-2	X89, terminal connection, 6-38
mechanical life, 7-38	specifications, 2-25
nameplates, 7-13	temperature switch, pinout, 5-45
power connections. See connections	BR 18F
required, power modules & compact	braking performance, mean value,
inverters, 7-9	example, 3-12
selecting, 3-1	breaking resistors, illustration, 5-19
specifications, 7-4	connections, illustration, 6-24
technical information, general, 7-38	dimensions, illustration, 5-56
axis-enabling module, AEM 100A,	dimensions, referenced, 6-65
description, 2-24	illustration, 5-19
•	minimum clearances, illustration, 4-17
В	power requirements, 2-26
ballscrew	PS 130, temperature switch, 6-38
gearwheel, moment of inertia, 3-1	specifications, 2-26
moment of inertia, 3-1	temperature switch, pinout, 5-45
bend radii, power cables, 7-8	X2, fan pinout, 5-45
BR 10F	BR 9
braking performance, mean value,	arranging the modules, 6-28
•	
example, 3-11	connections, illustration, 6-23
breaking resistors, illustration, 5-19	description, 6-44
connections, illustration, 6-24	dimensions, illustration, 5-54
dimensions, illustration, 5-56	dimensions, referenced, 6-65
dimensions, referenced, 6-65	installation, illustration, 5-17
illustration, 5-19	power failure, description, 5-49
minimum clearances, illustration, 4-17	power requirements, 2-26
power requirements, 2-26	specifications, 2-26
specifications, 2-26	X79, unit bus, pinout, 6-44
temperature switch, pinout, 5-45	brake, holding
X2, fan pinout, 5-45	connecting, 7-24
	protective circuit, illustration, 7-24
	braking energy, calculate, 3-7
	· · · · · · · · · · · · · · · · · · ·



braking energy, maximum, calculate, 3-7	50-line, ribbon cable cable lengths, 2-20
braking performance, mean value	power supply, CNC, 2-10
BR 10F, example, 3-11	miscellaneous, 7-7
BR 18, example, 3-10	power cables
BR 18F, example, 3-12	axis motors, P/Ns listed, 7-6
example, 3-9	cross sections, 4-7
braking power	cross sections, installation
calculate, 3-7	type B1, 4-8
mean value, calculate, 3-7	type C and E, 4-8
with load, calculate, 3-7	permissible load, 4-7
braking resistor	power, bend radii, 7-8
BR 10F, connections, illustration, 6-24	ribbon cable covers, 2-10
BR 18, connections, illustration, 6-25	to select, 2-23
BR 18F, connections, illustration, 6-24	spindle motors, P/Ns listed, 7-7
BR 9	calculate
power requirements, 2-25	acceleration moment, 3-1
specifications, 2-25	braking energy, 3-7
connections, 5-43	braking power, 3-7
power requirement, 2-25	braking power, mean value, 3-7
PS 130	braking power, with load, 3-7
BR 10F & BR 18F	desired speed of the motor, 3-1
X2, fan, 6-39	effective moment, 3-2
X89, terminal connection, 6-38	external moment of inertia, 3-1
BR 18	maximum, braking energy, 3-7
temperature switch, 6-38	motor speed, 3-1
X89, terminal connection, 6-38	peak performance, braking resistor, 3-7
BR 18F	static moment, 3-1
temperature switch, 6-38	total moment of inertia, 3-1
cross section, 6-37	capacitor, three-phase, dimensions,
description, 6-37	6-65
SA 301A, SA 311A, SA 411A, SA 201A,	CC 3P, three-phase capacitor
SA 301C, SA 411C	dimensions, 6-65
cross sections, for connection, 5-43	specifications, 2-27
selecting, 3-7	CC 422
specifications, 2-25	X74, 5 V connection, PS 120A, 5-48
X89	CE marking, 4-10
SA 201A. SA 301A, SA 411C	center holes, motor, specifications, 7-
connections, 5-44	30
SA 301A. SA 301C, SA 411C	characteristic curves, spindle motors,
internal, connections, 5-44	7-17
SA 301A. SA 311A, SA 411A	CNC
external, connections, 5-44	defined, 1-1
	X110-X114
С	RA 201A, RA 301C, RA 411C
cables	PWM connection, 5-40
20-line, ribbon cable, PWM signals, 2-10	X69, ribbon cable to the CNC
cable length, to select, 2-20	adapter module, pinout, 6-56
40-line, ribbon cable	X69, supply voltage and control signals
unit bus, cable length, to select, 2-22	PS 120A, 5-46
unit bus, specifications, 2-10	PS 122R & PS 145R, pinout, 6-42



PS 130, pinout, 6-35 SA 301E, SA 411E, 5-33	AM 960, AM 1160, AM 1550, pinout, 7-19
X69a, from the first power supply unit	cables, P/Ns listed, 7-6
(diagnosable)	spindle motors
adapter module, pinout, 6-54	cable P/Ns, 7-21
X69b, from the second power supply unit	SM 055, SM 073, SM 100, SM 120,
(no diagnosis)	SM 200, SM 2450, pinout, 7-21
adapter module, pinout, 6-55	SM 120A, pinout, 7-23
combined load	spindle motors, fan, pinout, 7-26
AM 1160 Series, 7-119	connectors, miscellaneous, 7-7
AM 1550 Series, 7-119	contamination, permissible, 4-15
to calculate, 7-119	cooling, 4-14, See environmental
commutating reactor	conditions
CR 135	CR 135
dimensions, illustration, 5-57	dimensions, illustration, 5-57, 6-61
specifications, 2-28	specifications, 2-28
CR 170, specifications, 2-28	CR 170
CR 180, specifications, 2-28	dimensions, illustration, 6-62
compact inverter. See modular	specifications, 2-28
amplifier	CR 180
components, 1-6	dimensions, illustration, 6-62
description, 1-6	specifications, 2-28
protective measures, listed, 4-12	cross sections, power cables, 4-7
RA 201A, description, 1-7	current consumption, entire inverter
RA 301A, description, 1-7	system, 2-19
RA 411A, description, 1-7	current, maximum
required, axis motors, 7-9	X392/X393
required, spindle motors, 7-10	RA 201A, RA 301C, RA 411C, 5-39
SA 201A, description, 1-7	SA 201A, SA 311A, SA 411A,
SA 301A, description, 1-7	SA 201A, SA 301C, SA 411C, 5-39
SA 301C, description, 1-7	
SA 301E, description, 1-7	D
SA 311A, description, 1-7	danger, description, 4-2
SA 411A, description, 1-7	DC-link filter
SA 411C, description, 1-7	DLF 110
SA 411E, description, 1-7	dimensions, illustration, 6-76
components	DLF 120
connecting, 5-21	dimensions, illustration, 6-77
installation, configuration, illustration, 5-20	DLF 130
listed, 1-2	dimensions, illustration, 6-78
conducted interference, description,	DLF 130, connections, illustration, 6-26
4-10	
	specifications, 2-29
conducted, interference, 5-24	DC-link voltage, connecting terminals,
connections	6-51
illustrations, listed, 5-1	DC-link voltage, flashover, 4-15
overview, 5-1	DC-link voltages
power	axis EcoDyn motors, 7-16
axis motors	axis motors, 7-14
AM 820, AM 1150, AM 1400, pinout,	diagnosability, description, 6-53
7-20	dimensional drawing
	AM 1150 series, illustration, 7-75



AM 1160 series, illustration, 7-76	PMD 215 power module, illustration, 6-75
AM 1300-E series, illustration, 7-77	PMD 225 power module, illustration, 6-75
AM 1400 series, illustration, 7-78	PS 120A power supply unit, illustration,
AM 1550 series, illustration, 7-79	5-53
AM 1550E series, illustration, 7-80	PS 120A power supply unit, illustration,
AM 820 series, illustration, 7-73	referenced, 6-61
AM 960 series, illustration, 7-74	PS 122R power supply unit, illustration,
axis motors, listed, 7-73	6-58
SM 055A, SM 075A, and SM 100A,	PS 130 power supply unit, illustration,
illustration, 7-107	6-59
SM 055C-F, illustration, 7-110	PS 145R power supply unit, illustration,
SM 075C–F, illustration, 7-110	6-60
SM 100C–F, illustration, 7-110	RA 201A, RA 301C, RA 411C illustration,
SM 120A, illustration, 7-109	5-52
SM 120C, illustration, 7-112	SA 301A, SA 311A, SA 411A, SA 201A,
SM 120E, illustration, 7-112	SA 301C, SA 411C amplifiers,
SM 150C–F, illustration, 7-113	illustration, 5-51
SM 200C–F, illustration, 7-114	SA 301E & SA 411E amplifiers,
SM 240C–F, illustration, 7-112	illustration, 5-50
spindle motors, listed, 7-106	three-phase capacitor, CC 3P, illustration,
dimensions	6-65
adapter module, illustration, 6-79	direct drives, regenerative, inverter
BR 10F braking resistor, illustration, 5-56	systems, 5-21, 6-29
BR 18 braking resistor, illustration, 5-55	disclaimer, iii
BR 18F braking resistor, illustration, 5-56	DLF 110
BR 9 braking resistor, illustration, 5-54	dimensions, illustration, 6-76
components, listed, 6-57	specifications, 2-29
CR 135 commutating reactor, illustration,	DLF 120
5-57, 6-61	dimensions, illustration, 6-77
CR 170, CR 180 commutating reactor,	specifications, 2-29
illustration, 6-62	DLF 130
DLF 110 DC-link filter, illustration, 6-76	connections, illustration, 6-26
DLF 120 DC-link filter, illustration, 6-77	dimensions, illustration, 6-78
DLF 130 DC-link filter, illustration, 6-78	specifications, 2-29
LF 135A line filter, illustration, 6-63	X79-unit bus, connections, pinout, 6-50
LF 180A line filter, illustration, 6-64	DLF 1x0
modular amplifier, components, listed,	arranging the modules, 6-28
6-57	connections, pinouts, 6-50
PM 107, PM 207 power module,	direct drives, 5-21, 6-29
illustration, 6-66	
PM 115A, PM 123A, PM 132A, PM 148A,	E
PM 215A, and PM 223A power module,	EcoDyn axis motor
illustration, 6-67	AM 1300A–E series, specifications, 7-51
PM 170A power module, illustration, 6-68	AM 1300C–E series, specifications, 7-53
PMD 107 power module, illustration, 6-69	AM 1550A–E series, specifications, 7-65
PMD 115 power module, illustration, 6-70	AM 1550C–E series, specifications, 7-67
PMD 125 power module, illustration, 6-71	AM 1550D–E series, specifications, 7-69
PMD 140 power module, illustration, 6-71	AM 1550G–E series, specifications, 7-71
PMD 160 power module, illustration, 6-72	DC-link voltages, description, 7-16
PMD 196 power module, illustration, 6-73	effective moment, calculate, 3-2
PMD 207 power module, illustration, 6-74	Should moment, dalouate, o z



electrical protective measures, description, 4-3	AM 960, AM 1160, illustration, 7-33 description, 7-32
electromagnetic compatibility	SM 055A, SM 075A, SM 100A,
CE marking, 4-10	illustration, 7-32
conducted interference, description, 4-10	SM 055C-F, SM 075C-F, SM 100C-F,
EMC, defined, 4-9	SM 120C, SM 120E, SM 150C-F,
fault-current circuit breaker, 4-5	SM 200C–F, SM 240C–F, illustration,
interference, 4-10	7-32
interference, likely sources, 4-9	formulas
line voltage, 4-6	characteristic curves, spindle motors,
noise immunity, 4-10	7-17
noise immunity, description, 4-11	DC-link voltages - axis motors, 7-14
power supply, stability requirements, 4-10	selecting, axis motors, 3-2
protective measures	selecting, inverters, 3-2
compact inverters, 4-12	-
general, 4-11	G
motors, 4-12	general
regenerative inverters, 4-12	information, mounting and operating
radiated interference, description, 4-11	conditions, 4-1
shielding, 4-11	permissible forces, description, 7-116
valid regulations, 4-9	protective measures, 4-11
EMC, electromagnetic compatibility,	
defined, 4-9	grease, service life, 7-129, 7-131
encoder	Н
	hant manufaction On a service service.
rotary, connecting to motors, 7-18	heat generation. See environmental
rotary, connector illustration, 7-108	conditions
environmental conditions	heating. See environmental conditions
air humidity, 4-14	high-precision balanced externally,
contamination, 4-15	spindle motors, 7-30
heat generation and cooling, 4-14	holding brake
mechanical vibration, 4-15	connecting, 7-24
external moment of inertia, calculate,	protective circuit, illustration, 7-24
3-1	RA 201A, RA 301C, RA 411C
F	X344, pinout, 5-38
1	X392, pinout, 5-38
fan connection, spindle motors, 7-26	X393, pinout, 5-38
fan, cables, spindle motors, P/Ns	humidity, 4-14
listed, 7-7	
fans, connection to motors, 7-26	I
fault-current circuit breaker, 4-5	inductance, additional for motor, 4-25
feather key, spindle motors,	installation
description, 7-83	adapter module, connections, illustration,
feather keys	6-27
configuration, illustration, 7-31	
specifications, 7-31	BR 10F braking resistor, 5-19, 6-24
flange mounting to motor,	BR 18 braking resistor, 5-18
configurations, illustration, 7-28	BR 18, connections, illustration, 6-25
flange sockets, rotatable	BR 18F braking resistor, 5-19, 6-24
	BR 9, illustration, 5-17
AM 1550 perios, illustration, 7-34	component configuration, illustration, 5-20
AM 1550 series, illustration, 7-34	DLF 130, connections, illustration, 6-26
AM 1550E series, illustration, 7-35	guidelines, 4-17



PS 120A, illustration, 5-16 RA 201A, 5-12 RA 301C, 5-13 RA 411C, 5-14 SA 201A, 5-8 SA 301A, 5-5 SA 301C, 5-9	specifications, 2-2 weight, 2-2 inverter, compact. See modular amplifier IP Code, protection, description, 4-4 IT network, illustration, 4-5
SA 301E, 5-3 SA 311A, 5-6 SA 411A, 5-7 SA 411C, 5-10	K keys, feather configuration, illustration, 7-31 description, 7-31
intended area of application, description, 4-3 interference conducted, 5-24 conducted interference, description, 4-10 description, 4-10 likely sources, 4-9 noise immunity, description, 4-11 radiated interference, description, 4-11 introduction, 1-1 inverter accessories, 2-25 compact. See modular amplifier components, 1-6 description, 1-6 RA 201A, description, 1-7 RA 301A, description, 1-7 RA 411A, description, 1-7 SA 201A, description, 1-7 SA 301C, description, 1-7 SA 301E, description, 1-7 SA 311A, description, 1-7 SA 411C, description, 1-7 SA 411C, description, 1-7 SA 411E, description, 1-7 drive system, components, listed, 1-2 failure, by contamination, 4-15 formulas, for selection, 3-2 generative, load descriptions, listed, 1-4	L labeling information, 7-12 leakage current inverter housing to grounding connection, 4-13 warning, illustration, 4-13 LEDs amplifiers, table, 5-11, 5-15 defined, 5-11, 5-15 PM power modules, description, 6-22 PMD power modules, description, 6-22 PS 122R, description, 6-3 PS 130, description, 6-5 PS 145R, description, 6-7 SA 301E/SA 411E amplifiers, table, 5-4 LF 135A dimensions, illustration, 6-63 specifications, 2-27 LF 180A dimensions, illustration, 6-64 specifications, 2-27 LF 180A dimensions, illustration, 6-64 specifications, 2-27 line filter LF 135A dimensions, illustration, 6-64 specifications, 2-27 line voltage, adjusting via transformer, 4-6
non-regenerative systems, description, 4-22	M
non-regenerative, load descriptions, listed, 1-3 power requirements, 2-2 regenerative systems, description, 4-21 selecting, 3-1 selection, 3-1 selection, formulas, 3-6	main contactor SA 301E, SA 411E, 5-31 X71, RA 201A, RA 301C, RA 411C, 5-39 maximum, braking energy, calculate, 3-7 maximum, current PM 1xx(A) and PM 2xx(A)



X392, for holding brake, 6-49	listed, 6-1
PMD 1xx and PMD 2xx	connecting modules, 6-29
X392, for holding brake, 6-49	description, 1-6
specification, parameter, 2-2	direct drives, 5-21, 6-29
X392/X393	formulas for selection, 3-6
RA 201A, RA 301C, RA 411C, 5-39	installing, 2-11
SA 201A, SA 311A, SA 411A,	line filter
SA 201A, SA 301C, SA 411C, 5-39	LF 135A, dimensions, illustration, 6-63
mean value, braking performance	LF 180A, dimensions, illustration, 6-64
example, 3-9	specifications, 2-27
function of energy	load capacity, 1-5
BR 10F, example, 3-11	module covers, 6-29
BR 18, example, 3-10	motors, connecting, illustration, 6-32
BR 18F, example, 3-12	mounting and connection, 6-28
mechanical data, 7-28	mounting system, 6-31
mechanical life	non-regenerative amplifiers, 2-11
axis motors, 7-38	power module
spindle motors, 7-82	LEDs, description, 6-22
mechanical vibration, 4-15	See PM 107, 6-8
modular amplifier	See PM 115A, 6-10
20-line ribbon cable, cable length, to	See PM 123A, 6-12
select, 2-20	See PM 132A, 6-14
40-line ribbon cable, cable length, to	See PM 148A, 6-14
select, 2-22	See PM 170A, 6-16
50-line ribbon cable, cable lengths, 2-20	See PM 207, 6-18
accessories, 2-25	See PM 215A, 6-20
adapter module	See PM 223A, 6-20
connections, illustration, 6-27	See PMD 107, 6-9
braking resistor	See PMD 115, 6-11
BR 10F	See PMD 125, 6-13
connections, illustration, 6-24	See PMD 140, 6-13
dimensions, referenced, 6-65	See PMD 160, 6-15
BR 18	See PMD 196, 6-17
connections, illustration, 6-25	See PMD 207, 6-19
dimensions, referenced, 6-65	See PMD 215, 6-21
BR 18F	See PMD 225, 6-21
connections, illustration, 6-24	specifications, 2-13
dimensions, referenced, 6-65	power requirements, 2-11
BR 9	power supply unit
connections, illustration, 6-23	PS 122R
dimensions, referenced, 6-65	connections, illustration, 6-2
specifications, 2-26	dimensions, illustration, 6-58
DLF 130	PS 130
connections, illustration, 6-26	connections, illustration, 6-4
commutating reactor	dimensions, illustration, 6-59
CR 135, dimensions, illustration, 6-61	PS 145R
CR 170, dimensions, illustration, 6-62	connections, illustration, 6-6
CR 180, dimensions, illustration, 6-62	dimensions, illustration, 6-60
specifications, 2-28	power supply, additional, description, 5-
components, 1-6, 2-11	22, 6-30
dimensions, listed, 6-57	



power supply, current consumption, limit	axis, AM series, features, 7-36
values, 2-19	axis, power connections. See connections
power supply, table, 2-12	central bore specifications, 7-30
protective measures, listed, 4-12	connecting, illustration, 6-32
PS 120A power supply unit, connections,	connections, SA 301E, SA 411E, 5-29
illustration, referenced, 6-22	DC-link voltages
RA 201A, description, 1-7	axis EcoDyn motors, 7-16
RA 201A, RA 301C, RA 411C	axis motors, 7-14
dimensions, illustration, 5-52	flange-mounting, 7-28
X31, power supply, 5-36	flange-mounting, configurations,
RA 301A, description, 1-7	illustration, 7-28
RA 411C, description, 1-7	holding brakes, SA 301E, SA 411E, 5-30
RA Series, mounting, illustration, 5-24	mounting screws, 7-29
regenerative amplifiers, 2-11	nameplates, 7-13
ribbon cable covers	protective measures, listed, 4-12
to select, 2-23	RA 201A, RA 301C, RA 411C
SA 201A, description, 1-7	connections, pinout, 5-37
SA 301A, description, 1-7	main contactor, 5-39
SA 301A, SA 311A, SA 411A	PWM inputs, table, 5-37
X31, power supply, 5-35	safety relay, 5-39
SA 301A, SA 311A, SA 411A, SA 201A,	X344, 24 V supply for motor holding
SA 301C, SA 411C	brake, 5-38
dimensions, illustration, 5-51	X392, motor holding brake, 5-38
SA 301A, SA 311C, SA 411C	X393, motor holding brake, 5-38
X31, power supply, 5-35	securing, illustration, 7-29
SA 301C, description, 1-7	shaft end, 7-30
SA 301E	spindle, fan connections. See connections
description, 1-7	•
•	spindle, power connections. See connections
dimensions, illustration, 5-50	
SA 301E, SA 411E, mounting, illustration,	vibration severity grade, 7-30
5-23	motor dimensions
SA 311A, description, 1-7	AM 1150 series, illustration, 7-75
SA 411A, description, 1-7	AM 1160 series, illustration, 7-76
SA 411C, description, 1-7	AM 1300-E series, illustration, 7-77
SA 411E	AM 1400 series, illustration, 7-78
description, 1-7	AM 1550 series, illustration, 7-79
dimensions, illustration, 5-50	AM 1550E series, illustration, 7-80
SA Series, mounting, illustration, 5-24	AM 820 series, illustration, 7-73
selection, 3-6	AM 960 series, table, 7-74
specifications, 2-11	SM 055A, SM 055C–F, SM 075C–F, and
systems, installing, 5-1	SM 100C–F, illustration, 7-110
three-phase capacitor, 2-27	SM 055A, SM 075A, and SM 100A,
three-phase capacitor, CC 3P	illustration, 7-107
dimensions, illustration, 6-65	SM 120A, illustration, 7-109
unit bus, to PM 107, pinout, 5-42	SM 120C, illustration, 7-112
voltage protection module, 2-30	SM 120E, illustration, 7-112
module covers, 6-29	SM 150C–F, illustration, 7-113
module covers, installing, 5-22	SM 200C–F, illustration, 7-114
modules, additional, arranging, 4-26	SM 240C–F, illustration, 7-112
motor	motor speed, calculate, 3-1
axis motor, selecting, 3-1	



mounting description, 4-1 flange, description, 7-28	LEDs, description, 6-22 power module specifications, 2-13 unit bus, to amplifier, pinout, 5-42
modular amplifier system, illustration, 6-31	PM 115A
mounting screws, motor, 7-29	arranging the modules, 6-28 connections, illustration, 6-10
N	connections, pinouts, 6-46
nomenlates mater 7.40	dimensions, illustration, 6-67
nameplates, motor, 7-13	LEDs, description, 6-22
noise immunity	power module specifications, 2-13 PM 123A
and interference, description, 4-10	arranging the modules, 6-28
description, 4-11 non-regenerative amplifiers,	connections, illustration, 6-12
components, 2-11	connections, pinouts, 6-46
non-regenerative, inverter systems,	dimensions, illustration, 6-67
illustration, 4-22	LEDs, description, 6-22
note, description, 4-2	power module specifications, 2-14
numerical control machine tool, 7-4	PM 132A
numerical control machine tool, 7-4	arranging the modules, 6-28
0	connections, illustration, 6-14
operating conditions, description, 4-1	connections, pinouts, 6-46
overvoltage protector, description, 4-6	dimensions, illustration, 6-67
	LEDs, description, 6-22
P	power module specifications, 2-15
P/N 627787-21, <u>6000i CNC Technical</u>	PM 148A
<u>Manual</u> , referenced, 1-1, 4-25	arranging the modules, 6-28
peak performance, braking resistor,	connections, illustration, 6-14
calculate, 3-7	connections, pinouts, 6-46
permissible force	dimensions, illustration, 6-67
example, motor shaft	LEDs, description, 6-22
axial forces, illustration, 7-116	power module specifications, 2-15
radial forces, illustration, 7-116	PM 170A
general, description, 7-116	arranging the modules, 6-28
motor shaft	connections, illustration, 6-16
AM 1150 series, 7-122	connections, pinouts, 6-46
AM 1160 series, graph, 7-120	dimensions, illustration, 6-68
AM 1400 series, 7-122	LEDs, description, 6-22
AM 1550 series, graph, 7-121	power module specifications, 2-16
AM 820 series, 7-122	PM 1xx(A) and PM 2xx(A)
SM 055C-F, SM 075C-F, SM 100C-F,	connection, motor holding brake
7-129	topics, listed, 6-48
SM 120A, 7-128	power module connections, topics, listed
SM 120C, SM 120E, SM150C-F,	6-45
SM 200C–F, SM 240C–F, 7-131	X111, X112 PWM connection to CNC
PLF 120, arrangement, illustration,	chassis, pinout, 6-46 X344, 24 V supply for motor holding
4-24, 4-25	
PM 107	brake, pinout, 6-48 X392, motor holding brake
arranging the modules, 6-28	maximum current, 6-49
connections, illustration, 6-8 connections, pinouts, 6-46	pinout, 6-49
dimensions, illustration, 6-66	X79, unit bus, pinout, 6-47
amensions, illustration, 0-00	7.7 o, aim bao, pillout, o 17



X81, X82, axis/spindle motor connections,	PMD 140
pinout, 6-48 PM 207	arranging the modules, 5-27, 5-34, 5-43, 6-28
arranging the modules, 6-28	connections, illustration, 6-13
connections, illustration, 6-18	connections, pinouts, 6-46
connections, pinouts, 6-46	dimensions, illustration, 6-71
dimensions, illustration, 6-66	LEDs, description, 6-22
LEDs, description, 6-22	power module specifications, 2-15
power module specifications, 2-17	PMD 160
PM 215A	arranging the modules, 5-27, 5-34, 5-43,
arranging the modules, 6-28	6-28
connections, illustration, 6-20	connections, illustration, 6-15
	connections, pinouts, 6-46
connections, pinouts, 6-46	· •
dimensions, illustration, 6-67	dimensions, illustration, 6-72
LEDs, description, 6-22	LEDs, description, 6-22
power module specifications, 2-17 PM 223A	power module specifications, 2-16 PMD 196
arranging the modules, 6-28	arranging the modules, 5-27, 5-34, 5-43,
connections, illustration, 6-20	6-28
connections, pinouts, 6-46	connections, illustration, 6-17
dimensions, illustration, 6-67	connections, pinouts, 6-46
LEDs, description, 6-22	dimensions, illustration, 6-73
power module specifications, 2-18	LEDs, description, 6-22
PMD 107	power module specifications, 2-16
20-line ribbon cable, specified, 2-20	PMD 1xx and PMD 2xx
40-line ribbon cable, cable length,	power module connections, topics, listed,
specified, 2-22	6-45
arranging components, illustration, 5-21	X111, X112 PWM connection to CNC
arranging the modules, 5-27, 5-34, 5-43,	chassis, pinout, 6-46
6-28	X344, 24 V supply for motor holding
connections, illustration, 6-9	brake, pinout, 6-48
connections, pinouts, 6-46	X392, motor holding brake
dimensions, illustration, 6-69	maximum current, 6-49
LEDs, description, 6-22	pinout, 6-49
power module specifications, 2-13	X79, unit bus, pinout, 6-47
PMD 115	X81, X82, axis/spindle motor connections
arranging the modules, 5-27, 5-34, 5-43,	pinout, 6-48
6-28	PMD 207
connections, illustration, 6-11	arranging the modules, 5-27, 5-34, 5-43,
connections, pinouts, 6-46	6-28
dimensions, illustration, 6-70	connections, illustration, 6-19
LEDs, description, 6-22	connections, pinouts, 6-46
power module specifications, 2-14	dimensions, illustration, 6-74
PMD 125	LEDs, description, 6-22
arranging the modules, 5-27, 5-34, 5-43, 6-28	power module specifications, 2-17 PMD 215
connections, illustration, 6-13	arranging the modules, 5-27, 5-34, 5-43,
connections, pinouts, 6-46	6-28
dimensions, illustration, 6-71	connections, illustration, 6-21
LEDs, description, 6-22	connections, pinouts, 6-46
power module specifications, 2-14	dimensions, illustration, 6-75
·	



LEDs, description, 6-22	power & torque characteristics
power module specifications, 2-18	SM 055A, 7-85
PMD 225	SM 055C-F, 7-92
arranging the modules, 5-27, 5-34, 5-43,	SM 075A, 7-86
6-28	SM 075C-F, 7-94
connections, illustration, 6-21	SM 100A, 7-87
connections, pinouts, 6-46	SM 100C-F, 7-96
dimensions, illustration, 6-75	SM 120A, 7-89
LEDs, description, 6-22	SM 120C, 7-99
power module specifications, 2-18	SM 120E, 7-99
power	SM 150C–F, 7-101
cables. See cables	SM 200C-F, 7-103
connections. See connections	SM 240C–F, 7-105
loss, 2-2	power module
module	current consumption, limit values, 2-19
current consumption, limit values, 2-19	product designations, listed, 1-1
• • •	•
required, axis motors, 7-9	protection, degree of, 4-4
required, spindle motors, 7-10	protective circuit, holding brake,
See PM 107, 6-8	illustration, 7-24
See PM 115A, 6-10	protective measures
See PM 123A, 6-12	compact inverters, 4-12
See PM 132A, 6-14	general, 4-11
See PM 148A, 6-14	motors, 4-12
See PM 170A, 6-16	regenerative inverters, 4-12
See PM 207, 6-18	PS 120A
See PM 215A, 6-20	additional, power supply, description, 5-
See PM 223A, 6-20	22, 6-30
See PMD 107, 6-9	connecting, pinouts, 5-46
See PMD 115, 6-11	connecting, referenced, 4-21, 4-22, 6-49
See PMD 125, 6-13	connections, illustration, referenced, 6-22
See PMD 140, 6-13	dimensions, illustration, 5-53
See PMD 160, 6-15	dimensions, illustration, referenced, 6-61
See PMD 196, 6-17	installation, illustration, 5-16
See PMD 207, 6-19	specifications, 2-8
See PMD 215, 6-21	U_Z , supply connection, 5-48
See PMD 225, 6-21	X31, supply voltage, 5-47
specifications, 2-13	X69, CNC supply voltage and control
supply	signals, 5-46
additional, description, 5-22, 6-30	X74, 5 V connection, 5-48
autotransformer power output, 4-6	PS 122R
modular amplifiers, table, 2-12	autotransformer power output, 4-6
non-regenerative, load capacity, 1-4	connections, illustration, 6-2
regenerative, load capacity, 1-4	dimensions, illustration, 6-58
stability requirements, 4-10	LEDs, description, 6-3
X31, connections	load capacity, 1-4
RA 201A, RA 301C, RA 411C, 5-36	power requirements, 2-12
SA 201A, SA 301C, SA 311C, SA	regenerative, 1-4
411C, 5-35	See also PS 122R & PS 145R, 6-2
SA 301A, SA 311A, SA 411A, 5-35	specifications, 2-12
SA 301E, SA 411E, X31, 5-28	stability requirements, 4-10
, , , , , , , , , , , , , , , , , , , ,	, 1



PS 122R & PS 145R	stability requirements, 4-10
connections, topics listed, 6-37, 6-39	pulse width modulation (PWM), 2-11
main contactor and safety relay	PWM
topics, listed, 6-41	RA 201A, RA 301C, RA 411C
X31, supply voltage, pinout, 6-40	connection to CNC, 5-40
X69, CNC supply voltage and control	inputs, table, 5-37
signals, pinout, 6-42	SA 301E, SA 411E, X110–X114,
X70, main contactor, pinout, 6-41	connection to CNC, 5-32
X71, safety relay spindle, pinout, 6-41	·
X72, safety relay axes, pinout, 6-41	R
X74 5, V power supply, pinout, 6-43	RA 201A
X79, unit bus, pinout, 6-43	autotransformer power output, 4-6
PS 130	description, 1-7
autotransformer power output, 4-6	installation, 5-12
BR 10F & BR 18F, X2, fan, 6-39	LEDs, table, 5-15
BR 18	power requirements, 2-6
temperature switch, 6-38	specifications, 2-6
X89, terminal connection, 6-38	RA 201A, RA 301C, RA 411C
BR 18F	connecting, the amplifiers, 5-35
temperature switch, 6-38	dimensions, illustration, 5-52
braking resistors	main contactor, 5-39
cross section, 6-37	protective measures, listed, 4-12
description, 6-37	safety relay, 5-39
connections, illustration, 6-4	X31, power supply, 5-36
dimensions, illustration, 6-59	X80–X84, motor connections, 5-37
fault-current circuit breaker, 4-5	RA 301C
LEDs, description, 6-5	autotransformer power output, 4-6
load capacity, 1-4	description, 1-7
non-regenerative, 1-4	installation, 5-13
power requirements, 2-12	LEDs, table, 5-15
specifications, 2-12	power requirements, 2-6
X31, supply voltage, pinout, 6-33	specifications, 2-6
X69, CNC supply voltage and control	RA 411C
signals, pinout, 6-35	autotransformer power output, 4-6
X70, main contactor, pinout, 6-34	description, 1-7
X71, safety relay spindle, pinout, 6-34	installation, illustration, 5-14
X72, safety relay axes, pinout, 6-34	LEDs, table, 5-15
X74 5, V power supply, pinout, 6-36	power requirements, 2-7
X79, unit bus, pinout, 6-36	specifications, 2-7
X90, 24 V output, pinout, 6-35	RA series inverters
PS 145R	load descriptions, listed, 1-4
autotransformer power output, 4-6	mounting, illustration, 5-24
connections, illustration, 6-6	regenerative, load descriptions, listed, 1-4
dimensions, illustration, 6-60	radial force
fault-current circuit breaker, 4-5	AM 960A, on bearing, graph, 7-118
LEDs, description, 6-7	AM 960AB, on bearing, graph, 7-118
load capacity, 1-4	on motor shaft
power requirements, 2-12	example, illustration, 7-116
regenerative, 1-4	SM 055A, SM 075A, and SM 100A,
See also PS 122R & PS 145R, 6-6	graph, 7-127
specifications, 2-12	SM 120A, graph, 7-128
	· • · · ·



spindle bearing, graph	specifications, 2-3
SM 055D, SM 055F, SM 075D,	toroidal core installation, illustration, 5-26
SM 075F, SM 100D, SM 100F,	SA 301A
7-130	autotransformer power output, 4-6
SM 150D, SM 150F, SM 200D,	description, 1-7
SM 200F, SM 240D, SM 240F,	installation, illustration, 5-5
7-132	
	LEDs, table, 5-11
standard bearing, graph	power requirements, 2-2
SM 055C, SM 055E, SM 075C,	specifications, 2-2
SM 075E, SM 100C, SM 100E,	toroidal core installation, illustration, 5-26
7-130	SA 301A, SA 311A, SA 411A, SA
SM 120C, SM 120E, SM 150C,	201A, SA 301C, SA 411C
SM 150E, SM 200C, SM 200E,	connecting, the amplifiers, 5-35
SM 240C, SM 240E, 7-132	dimensions, illustration, 5-51
radiated interference, description, 4-11	X31, power supply, 5-35
rated current, 2-2	SA 301C
regenerative	autotransformer power output, 4-6
amplifiers, components, 2-11	description, 1-7
·	•
inverter, additional power supply, adapter	installation, illustration, 5-9
module, 2-31	LEDs, table, 5-11
inverters, protective measures, 4-12	toroidal core installation, illustration, 5-26
regenerative, inverter systems, direct	SA 301E
drives, 5-21, 6-29	autotransformer power output, 4-6
regenerative, inverter systems,	description, 1-7
illustration, 4-21	dimensions, illustration, 5-50
ribbon cable	installation, illustration, 5-3
20-line	LEDs, table, 5-4
cable length, to select, 2-20	mounting, illustration, 5-23
description, 2-10	power requirements, 2-5
40-line	See also SA 301E, SA 411E, 5-3
cable length, to select, 2-22	specifications, 2-5
	toroidal core installation, illustration, 5-25
unit bus, 2-10	
50-line	SA 301E, SA 411E
cable length, to select, 2-20	main contactor and safety relay, 5-31
description, 2-10	motor connections, 5-29
covers, 2-10	motor holding brakes, 5-30
covers, to select, 2-23	PWM connection to CNC, 5-32
ribbon cables. See cables	X31, power supply, 5-28
rotary encoders	X344, 24 V supply for motor holding
connecting to motors, 7-18	brake, 5-30
connector illustration, 7-108	X394, maximum current, 5-30
rotatable, flange sockets	X394, motor holding brake, pinout, 5-30
description, 7-32	X69, CNC supply voltage and control
4000/1p40/1, 7 02	signals, 5-33
S	X70, main contactor, 5-31
CA 201A	
SA 201A	X80, spindle motor, 5-29
autotransformer power output, 4-6	X81, axis motor 1, 5-29
description, 1-7	X82, axis motor 2, 5-29
installation, illustration, 5-8	X83, axis motor 3, 5-29
LEDs, table, 5-11	X84, axis motor 4, 5-29
power requirements, 2-3	



SA 301E, SA 411E, SA 301A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C protective measures, listed, 4-12 SA 311A autotransformer power output, 4-6 description, 1-7 installation, illustration, 5-6 LEDs, table, 5-11 power requirements, 2-2 specifications, 2-2 toroidal core installation, illustration, 5-26 SA 411A autotransformer power output, 4-6 description, 1-7 installation, illustration, 5-7 LEDs, table, 5-11 power requirements, 2-3 specifications, 2-3 toroidal core installation, illustration, 5-26 SA 411C autotransformer power output, 4-6 description, 1-7 installation, illustration, 5-10	safety relay RA 201A, RA 301C, RA 411C, 5-39 SA 301E, SA 411E, X71, for spindle, 5-31 SA 301E, SA 411E, X72, for axes, 5-31 securing the motor, illustration, 7-29 selecting braking resistors, 3-7 inverters, formulas for selection, 3-6 motors and inverters, 3-1 shaft bearing, spindle motors, description, 7-83 shaft end, motor, 7-30 shaft end, spindle motors, description, 7-83 shield, holding brake, illustration, 7-25 shock, permissible, 4-15 SM 055A axial force, on motor shaft, graph, 7-126 cable P/N, power & fan, 7-7 dimensional drawing, illustration, 7-107 encoder, connector illustration, 7-108 fan, connect motor, 7-26 flange sockets, rotatable, illustration, 7-32
installation, illustration, 5-10 LEDs, table, 5-11 power requirements, 2-4 specifications, 2-4 toroidal core installation, illustration, 5-26	power & torque characteristics, 7-85 power connection, pinout, 7-21 radial force, on motor shaft, graph, 7-127 specifications, 7-2, 7-84 terminal box, connection diagram, 7-22
SA 411E autotransformer power output, 4-6 description, 1-7 dimensions, illustration, 5-50 installation, illustration, 5-3 LEDs, table, 5-4 mounting, illustration, 5-23 power requirements, 2-5 See also SA 301E, SA 411E, 5-3 specifications, 2-5 toroidal core installation, illustration, 5-25 SA series inverters axis motors, power cables, P/Ns listed, 7-6 load descriptions, listed, 1-3 minimum clearances, illustration, 4-20 non-regenerative, load descriptions, listed, 1-3 mounting, illustration, 5-24 safety information, 7-12 safety precautions, description, 4-2	SM 055C–F cable P/N, power & fan, 7-7 dimensional drawing, illustration, 7-110 encoder, connector illustration, 7-108 fan, connect motor, 7-26 flange sockets, rotatable, illustration, 7-32 motor, dimensions, 7-111 power & torque characteristics, 7-92 power connection, pinout, 7-21 specifications, 7-2, 7-90, 7-91 terminal box, connection diagram, 7-22 SM 075A axial force, on motor shaft, graph, 7-126 cable P/N, power & fan, 7-7 dimensional drawing, illustration, 7-107 encoder, connector illustration, 7-108 fan, connect motor, 7-26 flange sockets, rotatable, illustration, 7-32 power & torque characteristics, 7-86 power connection, pinout, 7-21 radial force, on motor shaft, graph, 7-127 specifications, 7-2, 7-84 terminal box, connection diagram, 7-22

Inverter Systems and Motors

P/N 627788-21 - Index



SM 075C-F	flange sockets, rotatable, illustration, 7-32
cable P/N, power & fan, 7-7	power & torque characteristics, 7-99
dimensional drawing, illustration, 7-110	power connection, pinout, 7-21
encoder, connector illustration, 7-108	specifications, 7-98
fan, connect motor, 7-26	terminal box, connection diagram, 7-22
flange sockets, rotatable, illustration, 7-32	SM 120C-F
motor, dimensions, 7-111	specifications, 7-3
power & torque characteristics, 7-94	SM 120E
power connection, pinout, 7-21	cable P/N, power & fan, 7-7
specifications, 7-2, 7-90, 7-93	dimensional drawing, illustration, 7-112
terminal box, connection diagram, 7-22	encoder, connector illustration, 7-108
SM 100A	fan, connect motor, 7-26
axial force, on motor shaft, graph, 7-126	flange sockets, rotatable, illustration, 7-32
cable P/N, power & fan, 7-7	power & torque characteristics, 7-99
dimensional drawing, illustration, 7-107	power connection, pinout, 7-21
encoder, connector illustration, 7-108	specifications, 7-3, 7-98
fan, connect motor, 7-26	terminal box, connection diagram, 7-22
flange sockets, rotatable, illustration, 7-32	SM 150C–F
power & torque characteristics, 7-87	cable P/N, power & fan, 7-7
power connection, pinout, 7-21	dimensional drawing, illustration, 7-113
radial force, on motor shaft, graph, 7-127	encoder, connector illustration, 7-108
specifications, 7-2, 7-84	fan, connect motor, 7-26
terminal box, connection diagram, 7-22	flange sockets, rotatable, illustration, 7-32
SM 100C–F	power & torque characteristics, 7-101
cable P/N, power & fan, 7-7	power & torque characteristics, 7-101 power connection, pinout, 7-21
dimensional drawing, illustration, 7-110	specifications, 7-3, 7-100
encoder, connector illustration, 7-110	terminal box, connection diagram, 7-22
fan, connect motor, 7-26	SM 200C–F
flange sockets, rotatable, illustration, 7-32	cable P/N, power & fan, 7-7
motor, dimensions, 7-111	dimensional drawing, illustration, 7-114
power & torque characteristics, 7-96	encoder, connector illustration, 7-114
power connection, pinout, 7-21	fan, connect motor, 7-26
specifications, 7-3, 7-90, 7-95	flange sockets, rotatable, illustration, 7-32
terminal box, connection diagram, 7-22	power & torque characteristics, 7-103
SM 120A	power & torque characteristics, 7-103 power connection, pinout, 7-21
axial force, 7-128	specifications, 7-3, 7-102
cable P/N, power & fan, 7-7	terminal box, connection diagram, 7-22
connector, illustrations, 7-109	SM 240C–F
dimensional drawing, illustration, 7-109	cable P/N, power & fan, 7-7
encoder, connector illustration, 7-108	dimensional drawing, illustration, 7-112
fan, connect motor, 7-26	encoder, connector illustration, 7-112
power & torque characteristics, 7-89	fan, connect motor, 7-26
power connection, pinout, 7-23	flange sockets, rotatable, illustration, 7-32
radial force, on motor shaft, graph, 7-128	power & torque characteristics, 7-105
specifications, 7-2, 7-88	power & torque characteristics, 7-103
terminal box, connection diagram, 7-23	specifications, 7-3, 7-104
SM 120C	•
cable P/N, power & fan, 7-7	terminal box, connection diagram, 7-22 SM series
dimensional drawing, illustration, 7-112	motors, mounting screws, 7-29
encoder, connector illustration, 7-112	point of axial force, illustration, 7-116
fan, connect motor, 7-26	point of axial force, illustration, 7-116 point of radial force, illustration, 7-116
1011, 001111001 1110101, 1-20	point of radial lolds, illustration, 1-110



specifications	AM 1160E series, 7-50
AM 1150 Series, 7-43	AM 1300A-E series, 7-52
AM 1160A Series, 7-45	AM 1300C-E series, 7-54
AM 1160C Series, 7-47	AM 1400A series, 7-56, 7-58
AM 1160E Series, 7-49	AM 1550A-E series, 7-66
AM 1300A-E Series, 7-51	AM 1550C series, 7-60
AM 1300C–E Series, 7-53	AM 1550C–E series, 7-68
AM 1400A Series, 7-55	AM 1550D–E series, 7-70
AM 1400C Series, 7-57	AM 1550E series, 7-62
AM 1550A–E Series, 7-65	AM 1550G series, 7-64
AM 1550C Series, 7-59	AM 1550G–E series, 7-72
AM 1550C–E Series, 7-67	AM 820 series, 7-40
AM 1550D–E Series, 7-69	AM 960A series, 7-42
AM 1550E Series, 7-61	spindle axis, autotransformer power
AM 1550G Series, 7-63	output, 4-6
AM 1550G–E Series, 7-71	spindle bearing
AM 820 Series, 7-39	axial force on motor shaft, graph
AM 960A Series, 7-41	SM 055D, SM 055F, SM 075D,
axis motors, 7-4	SM 075F, SM 100D, SM 100F, 7-129
modular amplifiers, power supply, table,	SM 150D, SM 150F, SM 200D,
2-12	SM 200F, SM 240D, SM 240F, 7-131
RA 411C, 2-7	radial force, on motor shaft, graph
SA 201A, 2-3	SM 055D, SM 055F, SM 075D,
SA 301A, 2-2	SM 075F, SM 100D, SM 100F, 7-130
SA 301C, 2-4	SM 150D, SM 150F, SM 200D,
SA 301E, 2-5	SM 200F, SM 240D, SM 240F, 7-132
SA 311A, 2-2	spindle motors
SA 411A, 2-3	characteristic curves, 7-17
SA 411E, 2-5	dimensional drawings, listed, 7-106
SM 055A, 7-84	fan connections. See connections
SM 055C-F, 7-91	feather key, description, 7-83
SM 075A, 7-84	features, listed, 7-81
SM 075C-F, 7-93	flange sockets, rotatable, 7-32
SM 100A, 7-84	mechanical life, 7-82
SM 100C-F, 7-95	nameplates, 7-13
SM 120A, 7-88	power cables, P/Ns listed, 7-7
SM 120C, 7-98	power connections. See connections
SM 120E, 7-98	required, power modules & compact
SM 150C-F, 7-100	inverters, 7-10
SM 200C-F, 7-102	selection, 3-6
SM 240C-F, 7-104	shaft bearing, description, 7-83
spindle motors, 7-2	shaft end, description, 7-83
summary	specifications, 7-2
SM 055C-F, SM 075C-F, SM 100C-F,	technical information, general, 7-82
7-90	standard bearing
SM 120C, SM 120E, SM 150C-F,	axial force on motor shaft, graph
SM 200C-F, SM 240C-F, 7-97	SM 055C, SM 055E, SM 075C,
speed-torque graph, illustration	SM 075E, SM 100C, SM 100E, 7-129
AM 1150 series, 7-44	SM 120C, SM 120F, SM 150C-F,
AM 1160A series, 7-46	SM 200C-F, SM 240C-F, 7-131
AM 1160C series, 7-48	



radial force on motor shaft, graph	V
SM 055C, SM 055E, SM 075C,	varistor, protective circuit, 7-24
SM 075E, SM 100C, SM 100E, 7-130	vibration
SM 120C, SM 120E, SM 150C,	mechanical, 4-15
SM 150E, SM 200C, SM 200E,	permissible, 4-15
SM 240C, SM 240E, 7-132	severity grade, 7-30
static moment, calculate, 3-1	voltage protection module, VMP 163
synchronous motors, axis motors, 7-4	referenced, 4-25
system overview, 1-1	voltage protection module, VPM 163
Т	specifications, 2-30
	VPM 163, voltage protection module
technical information, general	referenced, 4-25
axis motors, 7-38	specifications, 2-30
spindle motors, 7-82	•
temperature switch	W
BR 10F, 5-45	warning, description, 4-2
BR 18, 5-45	warranty, iii
BR 18F, 5-45	•
temperature, ambient, 7-28	X
terminal box	X110–X114
connection diagram, for SM 055A, SM	RA 201A, RA 301C, RA 411C
075A, SM 100A, SM 055C–F, SM	PWM connection to CNC, 5-40
075C–F, SM 100C–F, SM 120C, SM	SA 301E, SA 411E, PWM connection to
120E, SM 150C–F, SM 200C–F, SM	CNC, 5-32
240C–F, 7-22	X111, X112 PWM connection to CNC
connection diagram, for SM 120A, 7-23	chassis
three-phase capacitor, CC 3P	PM 1xx(A) and PM 2xx(A), pinout, 6-46
dimensions, illustration, 6-65	PMD 1xx and PMD 2xx, pinout, 6-46
specifications, 2-27	X2
TN network, illustration, 4-5 toroidal core	BR 10F, BR 18F, fan pinout, 5-45
connections, table, 2-9	X31, power supply
installation, description, 5-25	PS 122R & PS 145R, pinout, 6-40
SA 301E, SA 411E installation,	PS 130, pinout, 6-33
illustration, 5-25	RA 201A, RA 301C, RA 411C, 5-36
SA Series amplifiers, installation,	SA 301A, SA 311A, SA 411A, 5-35
illustration, 5-26	SA 301A, SA 311C, SA 411C, 5-35
total moment of inertia, calculate, 3-1	SA 301E, SA 411E, 5-28
trained personnel, description, 4-1	X31, supply voltage
TT network, illustration, 4-5	PS 120A, pinout, 5-47
	X344, 24 V supply for motor holding
U	brake
UL certification, referenced, 4-21, 4-22	PM 1xx(A) and PM 2xx(A), 6-48
unit bus	PMD 1xx and PMD 2xx, 6-48
amplifier and PM 107, pinout, 5-42	RA 201A, RA 301C, RA 411C, 5-38
RA 201A, RA 301C, RA 411C	SA 301E, SA 411E, 5-30
X79, 5-41	X392, motor holding brake
X79, connections, pinout, 5-49	PM 1xx(A) and PM 2xx(A), maximum
U _z	current, 6-49
supply of the PS 120A, pinout, 5-48	PM 1xx(A) and PM 2xx(A), pinout, 6-49



PMD 1xx and PMD 2xx, maximum current, 6-49 PMD 1xx and PMD 2xx, pinout, 6-49 RA 201A, RA 301C, RA 411C motor, 5-38 X392/X393, maximum current RA 201A, RA 301C, RA 411C, 5-39 SA 201A, SA 311A, SA 411A, SA 201A, SA 301C, SA 411C, 5-39 X393, motor holding brake RA 201A, RA 301C, RA 411C, 5-38 X394 SA 301E. SA 411E maximum current, 5-30 motor holding brake, pinout, 5-30 X69, CNC supply voltage and control signals PS 120A, pinout, 5-46 PS 122R & PS 145R, pinout, 6-42 PS 130, pinout, 6-35 SA 301E, SA 411E, pinout, 5-33 X69, ribbon cable to the CNC adapter module, pinout, 6-56 X69a, from the first power supply unit (diagnosable) adapter module, pinout, 6-54 X69a/b, supply bus, description, 6-53 X69b, from the second power supply unit (no diagnosis) adapter module, pinout, 6-55 X70, main contactor PS 122R & PS 145R, pinout, 6-41 PS 130, pinout, 6-34 RA 201A, RA 301C, RA 411C, 5-39 SA 301E, SA 411E, 5-31 X71, safety relay, for spindle PS 122R & PS 145R, pinout, 6-41 PS 130, pinout, 6-34 RA 201A, RA 301C, RA 411C, 5-39 SA 301E, SA 411E, 5-31 X72, safety relay, for axes PS 122R & PS 145R, pinout, 6-41

PS 130, pinout, 6-34 RA 201A, RA 301C, RA 411C, 5-39 SA 301E, SA 411E, 5-31 X74, 5 V connection PS 120A, pinout, 5-48 X74, 5 V power supply PS 122R & PS 145R, pinout, 6-43 PS 130, pinout, 6-36 X74, 5 V power supply, description, 6-53 X75, service connector adapter module, do not assign, 6-56 X79. unit bus BR 9, pinout, 6-44 connections, pinout, 5-49 PM 1xx(A) and PM 2xx(A), pinout, 6-47 PMD 1xx and PMD 2xx, pinout, 6-47 PS 122R & PS 145R, pinout, 6-43 PS 130, pinout, 6-36 RA 201A, RA 301C, RA 411C, 5-41 X80, spindle motor SA 301E, SA 411E, pinout, 5-29 X81, axis motor 1 SA 301E, SA 411E, pinout, 5-29 X81, X82, motor connections PM 1xx(A) and PM 2xx(A), pinout, 6-48 PMD 1xx and PMD 2xx, pinout, 6-48 X82, axis motor 2 SA 301E, SA 411E, pinout, 5-29 X83, axis motor 3 SA 301E, SA 411E, pinout, 5-29 X84, axis motor 4 SA 301E, SA 411E, pinout, 5-29 X89, braking resistor, connections SA 201A, SA 301A, SA 411CI, 5-44 SA 301A, SA 301C, SA 411C internal, 5-44 SA 301A, SA 311C, SA 411A external, 5-44 X90, 24 V output PS 130, pinout, 6-35

ANILAM

U.S.A. ANILAM One Precision Way Jamestown, NY 14701 (716) 661-1899 △ (716) 661-1884 anilaminc@anilam.com

Dial "011" before each number when calling from the U.S.A.

Germany

ANILAM GmbH
Fraunhoferstrasse 1
D-83301 Traunreut
Germany
+49 8669 856110
AX +49 8669 850930
info@anilam.de

lánh

ANILAM Elettronica s.r.l.
10043 Orbassano
Strada Borgaretto 38
Torino, Italy
+39 011 900 2606
FAX +39 011 900 2466
Info@anilam.it

Taiwan
ANILAM, TW
No. 246 Chau-Fu Road
Taichung City 407
Taiwan, R.O.C.
★886-4 225 87222
FAX +886-4 225 87260
anilamtw@anilam.com

United Kingdom
ACI (UK) Limited
16 Plover Close, Interchange Park
Newport Pagnell
Buckinghamshire, MK16 9PS
England
+44 (0) 1908 514 500

+44 (0) 1908 610 111 Sales@aciuk.co.uk

China

Acu-Rite Companies Inc.(Shanghai Representative Office)
Room 1986, Tower B
City Center of Shanghai
No. 100 Zunyi Lu Road
Chang Ning District
200051 Shanghai P.R.C.
+86 21 62370398
FAX +86 21 62372320
China@anilam.com

January 2008